FSL LAb. Copy

PHILIPS

FSL LAb Copy

PHILIPS

TRANSISTOR CURVE - TRACER
PM 6507

9452 065 07..1

9499 520 04011

1/668/1/02-03

FSL LAB COPY

PHILIPS

Manual

TRANSISTOR CURVE - TRACER
PM 6507

9452 065 07..1

9499 520 04011

1/668/1/02-03

CONTENTS

GENERAL

I. INTRODUCTION 7

II. WORKING PRINCIPLE 7

III. BLOCK DIAGRAM 8
1. Control section 8
2. Display section 12

IV. TECHNICAL DATA 13

V. ACCESSORIES 15

DIRECTIONS FOR USE

VI. INSTALLATION 17

A. Adjustment to the local mains voltage 17
B. Earthing 17
C. Connection to the mains 17
D. Rack mounting version 18

VII. OPERATING INSTRUCTIONS 19

A. Survey of the controls 19
B. Hints for testing semi-conductors 19
C. Functions of the controls 19
D. Operation 23
1. Basic setting 23
2. Switching-on the apparatus 23
3. Connection of a semi-conductor 23
4. Adjusting the display section 23
5. Setting for testing semi-conductors with 3 or 4 terminals 23
6. Setting for breakdown tests of diodes and other elements with 2 connections 26
7. Setting for external control or programming 27

SERVICE DATA

VIII. CIRCUIT DESCRIPTION 37

A. Supply section 37
1. Mains supply 37
2. Collector voltage supply 37
3. H.T. supply 37
4. Direct voltage source +31.5/+30/0/—30 V 37

B. Step generator 39
1. Phase shifter, amplifier and rectifier, pulse shaper 39
2. Duty cycle 39
3. Ring counter 39
4. Amplifier 43
5. Power amplifier 44

C. Display section 44
1. Circuit for I_C and V_{CE} measurements 45
2. Circuit for V_{BE} measurements 46
3. Circuit for breakdown voltage and leakage current measurements 47
4. Difference amplifier for X and Y-deflection 48
5. Output amplifiers for X and Y-deflection 48
6. Brightness control 48

IX. DISASSEMBLY 49

A. Cabinet 49
B. C.R.T. 49

C. Removing the subunits 52
D. Removing components 57

X. MAINTENANCE 61

XI. SURVEY OF ADJUSTING ELEMENTS 62

XII. CHECKING AND ADJUSTING 63

A. Direct voltages +30 V and —30 V 63
B. EHT unit 4.5 kV 64
C. 3 kV voltage for testing diodes 64
D. Step generator 64
E. Collector voltage supply 64
F. Monitor 65

XIII. THE SHIPMENT OF THE INSTRUMENT 67

XIV. LISTS OF PARTS 68

LIST OF FIGURES

1	Basic construction	6
2	Block diagram	10
3	Accessories	16
4	Rear side of the instrument	17
5	Making the instrument suitable for a 19″ rack	18
6, 7, 8	Basic considerations for testing semi-conductors	19
9	Front view with controls and sockets	20
10	Trigger point	20
11	Effect of the duty-cycle control	24
12	Curve display with current limiting	24
13	Breakdown characteristics	25
14	Compensation for the non-linear part of the base-emitter diode characteristic	25
15	I_D-V_{DS}-characteristic of an N-channel junction FET	26
16	I_D-V_{DS}-characteristic of a P-channel enhancement-type MOS-FET	26
17	Position of the screen over the semi-conductor under test	27
18	Display in positions ⌒ and C of PM 6546	27
19	Circuit for external programming	28
20 . . . 47	Various measurements with the curve tracer	29 . . . 35
48	Supply part	36
49	Collector-voltage source	36
50	H.T. source	36
51	Step-voltage generator	38
52	Trigger circuit (U9)	38
53	Principle of the ring counter	40
54	Voltage-divider circuit	40
55a	Switch position REP FAM	40
55b	Switch position SINGLE FAM	41
55c	Switch position ONE CURVE	42
56	Amplifier	43
57	Voltage drive	44
58	Collector-current circuit	45
59	Measuring circuit for V_{BE} measurement	46
60	Measuring circuit for breakdown-voltage and leakage-current measurements	47
61	X-Power amplifier	49
62	Side view (left)	50
63	Top view	51
64	Bottom view	52
65	H.T. unit U2 (supply for C.R.T.), taken off	53
66	X-Deflection unit U3, taken off	53
67	Y-Deflection unit U4, taken off	54
68	Base-resistor unit U5, taken off	54
69	Shunt unit U6, taken off	55
70	Final-amplifier unit U8, taken off	55
71	Side view right	56
72	Step generator U9, taken off	57
73	Rear view (rear panel taken off)	58
74	Collector-load unit U10, taken off	58
75	H.T. unit U11 (3 kV), taken off	59
76	Socket unit U12, taken off	60
77	Push-button unit U15 and SK4, taken off	60
78	Adjusting the zener diodes	63
79	Adjusting the collector-voltage source 0-10 V	65
80	Hum influence on the C.R.T.	65
81	Adjusting the X-deflection	67
82	Adjusting the Y-deflection	67
83	Front view with item numbers	69
84	Rear view with item numbers	69
85	Side view (left) with item numbers	70
86	PM 6546 with item numbers	70

87	Diagram PM 6546	81
88	Printed wiring board PM 6546	81
89	Switch wafers SK2	82
90	Switch wafers SK10	82
91	Switch wafers SK12	82
92	Switch wafers SK13	82
93	Switch wafers SK16	83
94	Connection diagram for mains transformer T2	83
95	Connection diagram for collector transformers T3 and T4	83
96	Connection diagram for H.T. transformer T201	83
97	Connection diagram for H.T. transformer T1101	83
98	Printed wiring board U1, final amplifier	84
99	Printed wiring board U2, H.T. circuit	85
100	Printed wiring board U3A, pre-amplifier	86
101	Printed wiring board U3B, X-deflection	87
102	Printed wiring board U3C, X-deflection	88
103	Printed wiring board U4A, pre-amplifier	89
104	Printed wiring board U4B, Y-deflection	90
105	Printed wiring board U4C, Y-deflection	91
106	Printed wiring board U5A, base resistors	92
107	Printed wiring board U6A, shunt plate	93
108	Printed wiring board U7, power supply	94
109	Printed wiring board U8A, final amplifier	95
110	Printed wiring board U9A, step generator	96
111	Printed wiring board U9B, ring counter	97
112	Printed wiring board U11A, high-tension unit	98
113	Printed wiring board U13, adjusting circuit	99
114	Circuit diagram	103

IMPORTANT

In correspondance concerning this apparatus, please quote the type number and serial number as given on the plate at the back of the apparatus.

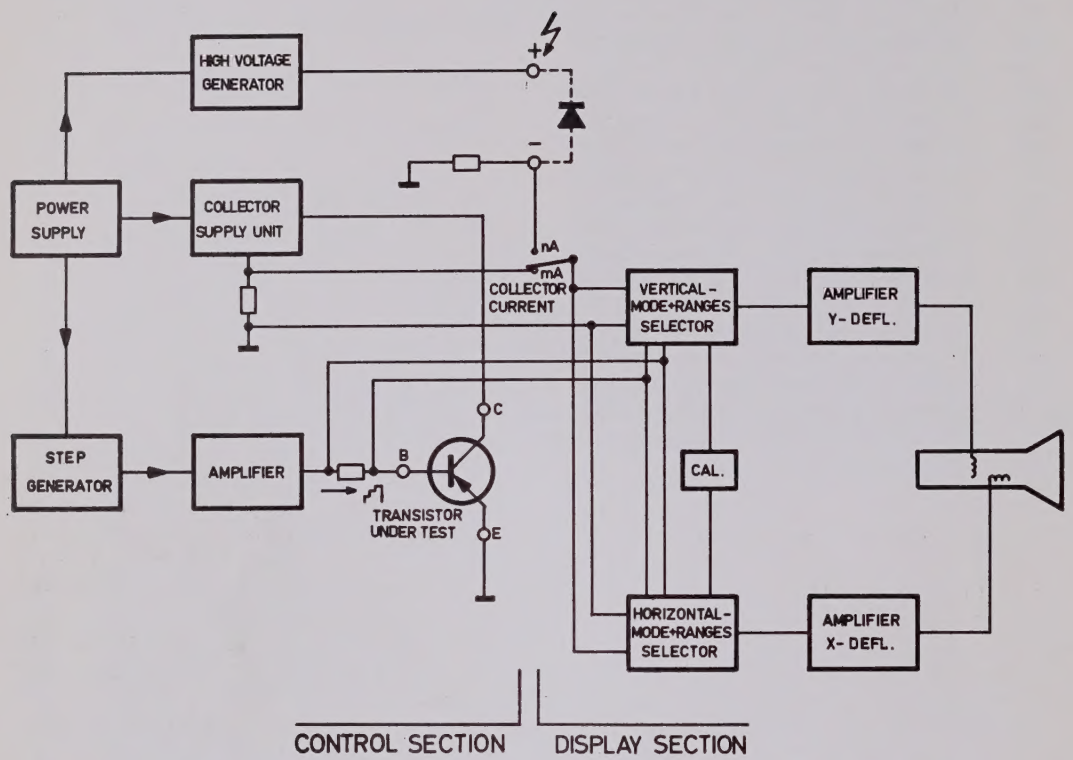

Fig. 1. Basic construction

FSL LAB Copy

GENERAL

I. Introduction

The PHILIPS Curve-tracer PM 6507 is a universal instrument for measuring and determining the characteristics of transistors and diodes. On the square flat c.r.t. it is possible to display single curves as well as sets of curves (up to 8) in various modes. The switchable duty-cycle control circuit permits of displaying characteristics of power transistors up to their limits, without subjecting these transistors to thermal overload.
The current and voltage sources for supplying the semi-conductors under test have a very wide range (I_C max. 20 A, V_{CE} max. 500 V).

For testing the breakdown characteristics of diodes a separate H.T. source (max. 3000 V) is available.

Due to its special circuitry the curve tracer can satisfy the high standards set in semi-conductor measuring techniques.

It is therefore extremely suitable for being used in laboratories, but may also serve as a test apparatus for selecting and comparing semi-conductors with certain properties.

II. Working principle

The simplified diagram of Fig. 1 shows the basic construction of the PM 6507. From this diagram it appears that the apparatus essentially consists of 2 sections, namely:

- the supply and control section, and
- the display section with the c.r.t.

— The supply and control section comprises all control elements required for setting the desired mode of operation and adjusting the unit to the operating data of the semi-conductor under test. For testing a transistor these are the collector and base supply voltages. For the collector circuit a half-wave voltage source of maximum 500 V is available. This voltage has been divided into four ranges, which can be selected by means of push-buttons, and is continuously adjustable within these ranges.
The base circuit is driven by the step generator.
Dependent on the repetition frequency and the step value selected, a base signal is obtained which has the shape of a step curve. This will give rise to current and voltage variations in the collector circuit of the transistor under test which correspond to the properties of this transistor.

— The relevant data are applied to the display section and displayed on the c.r.t. It is possible to select a display method for the curve or set of curves which is in accordance with the operating mode of the transistor. The horizontal and vertical deflection amplifiers can be adjusted to optimum resolution over a wide range so that accurate and clear measurements can be made.
For testing diodes in the breakdown region the apparatus has been provided with a separate HT generator which can supply voltages up to 3 kV.

III. Block diagram

The block diagram (Fig. 2) gives a survey of the arrangement of the various circuits. In order to obtain a better understanding of the switching functions the relevant switches are shown in the appertaining units in a simplified form. This has only been done in order to explain the general principle and not to explain the individual units.
A mains transformer which can be adapted to 2 voltage ranges delivers the various voltages required for supplying the apparatus. The collector supply unit serves for supplying the collector circuit. The voltage ranges which can be pre-selected in 4 steps by means of push-buttons can be adjusted to any intermediate value by means of a variable transformer.
Selection of the polarity of the supply voltage is effected by means of push-button PNP-NPN. It is moreover possible to include 20 different resistors with values from 0 . . . 100 kΩ in the collector circuit: these resistors serve for current limiting and protect the semi-conductor under test against overload.
The above-mentioned variable transformer also serves to adjust the high tension for testing diodes in the breakdown region, whereby the voltage can be increased continuously up to 3 kV. For measuring leakage currents seven μA and ten nA ranges are available.

1. Control section

a. Step generator

The step generator produces the step voltage for supplying the base circuit. From a winding of the mains transformer two trigger frequencies of 100 Hz which are shifted 90° with respect to each other are taken and rectified. By means of slide switch "CURVES/sec" either or both voltages are applied to the pulse shaper. This shaper delivers short needle pulses which drive the ring counter by means of which the step voltage is obtained, and moreover trigger a monostable multivibrator. The duty cycle of this multivibrator can be adjusted by means of control "DUTY CYCLE". During the pulse cycle of the multivibrator the step voltage of each individual stage is applied to the differential amplifier. As soon as the multivibrator changes over, the step voltage is short-circuited so that interrupted steps are obtained. When control "DUTY CYCLE" is at 100 % the multivibrator is inoperative. The steps then appear without interruption. Dependent on the selected pulse frequency and duty cycle either the beginning or end of the curve can be displayed or both the beginning and end. This method has the advantage that the semi-conductor under test is only loaded during the phase displayed so that it is possible to write the characteristics at the maximum power ratings without the risk of thermal overloading. The differential amplifier serves to accurately maintain the preset operating data of the base circuit and to correct these by means of reference values. For this purpose the operating currents or voltages on the semi-conductor under test are applied to the differential amplifier via an impedance transformer, which via the power amplifier keeps the output amplitude at the nominal value.
The polarity of the step signal (and consequently of the collector voltage) can be preset by means of a push-button (PNP-NPN). Voltage V_{BE} only can also be preset for normal and inverse operation. Another push-button serves for selecting common emitter or common base arrangement.
For adjusting the exact zero point of the step curve datum line control "ZERO" is employed. By means of this control the lower curve (i.e. base current 0) is adjusted to the value of the leakage current. Thus a proper curve display is obtained which is based on the leakage current.
The step current and voltage ranges are selected by switching in resistors. When the base circuit is supplied with a constant voltage series resistors of 0 . . . 10 MΩ can be included.
This additional resistance provides matching of the voltage generator and limits the current through the base-emitter circuit. Depending on the position of slide switch "TRANSISTOR INPUT" the input of the semi-conductor under test is driven (DRIVEN), grounded (GROUNDED) or open-circuited (OPEN).

b. Collector voltage supply

The collector voltage is adjusted by means of a continuously variable transformer. The two following transformers in push-pull arrangement have 4 voltage ranges, which can be selected by means of push-buttons. The control range then covers the relevant voltage range of the selected stage and the output voltage is full-wave rectified.
The pulsating d.c. voltage should not be smoothed in order to permit full deflection of the adjusted collector voltage from zero to maximum. The polarity of this voltage can be reversed by means of push-button switch PNP-NPN. Resistors of 0 . . . 100 kΩ can be included in the current circuit in steps for current limitation (LOAD).
The current as well as the voltage are determined in resistance dividers. In this way the measuring conditions are independent of each other for all ranges.

c. Connection of the semi-conductor under test

Two-transistor holders (and socket connectors) TS1 and TS2 serve for connection of the semi-conductor under test. By means of the switch either TS1 or TS2 can be connected; in the centre position both transistors are disconnected.
Connection strip TS1 has been provided with coaxial double-sockets (Kelvin take-offs). Consequently the measuring result is not influenced by the voltage drop over the supply lead to the semi-conductor under test.

d. Additional supply sources

1. Diode voltage source

For testing semi-conductors or other 2-pole elements the apparatus has been provided with a half-wave H.T. voltage source. This voltage source is also continuously adjustable from 0 to 3 kV by means of the variable transformer. The voltage-current characteristic is displayed on the c.r.t.,

IV. Technical data

Tolerances: Numerical values with statement of tolerances are guaranteed by the factory. Data without tolerances serve merely for information and represent the properties of an average apparatus.

Step generator

Step current generator:

Current steps (constant current values) : 1, 2, 5 µA etc . . . 200 mA/step
(17 steps plus a 0 - step)
All current steps can be doubled for a brief period

Number of curves : 7 (8 with datum line) adjustable from 2 . . .8

Stability of the step spacings : Between the first and seventh step within an arbitrary range < 1 %; with respect to each other: in all ranges < 3 %

Stability of the current generator : A load variation of 0.1 V at 1 V causes an error of < 1 % in all ranges

Step voltage generator:

Voltage steps mV/step	0	20	50	100	200	500	1000
max. internal resistance Ω: (current per step 200 mA)	0.1	0.1	0.25	0.5	1	2.5	5

All voltage steps can be doubled for a brief period

Switchable source resistors : steps: 0, 1, 2, 5 Ω etc . . . 10 MΩ (23 steps)

Duty cycle : at 100 pulses/sec. 250 µs . . . 6 ms
(2.5 % . . . 60 % and 100 %)
at 200 pulses/sec. the same pulse times apply, however, twice the duty cycle in percentages. Overlap from 4 ms.

Zero adjustment of the step voltage : Can be shifted 100 % (7 steps) in the positive or negative direction
(at 200 mA/step and 1,000 mV/step max. 12 V at 30 % duty cycle).

Collector supply

Rectified sine-wave voltage, continuously adjustable in 4 ranges

Voltage range	Max. current	Internal resistance Ri (at 220 V)
0 . . . 10 V_{p-p}	20 A	0.3 Ω
0 . . . 50 V_{p-p}	4 A	3.8 Ω
0 . . . 100 V_{p-p}	2 A	16 Ω
0 . . . 500 V_{p-p}	0.2 A	400 Ω

Polarity : Reversible by means of button PNP-NPN

Overload protection : By means of thermo-magnetic switch.
Response time at 2x the nominal current: approx. 15 secs.
Response time at 10x nominal current: 0.05 secs. at max.

Current limitation : By means of switchable series resistors.
Resistance scale:
0, 0.1, 0.2, 0.5 Ω etc. . . 100 kΩ ± 10 % (20 steps)

Connection sockets BU2B : provided with Kelvin take-offs when adapter PM6549A is used.

Diode voltage source

Voltage range : (continuously adjustable half-wave voltage)
0 . . .3000 V_{p-p}

Maximum load current : 1 mA

Short circuit current : 8 mA_{p-p} at max.

Internal resistance : 370 kΩ

Voltage source for 4th electrode : 0 . . . 10 V; continuously adjustable from 0 to + or —10 V
Connection to the "S" socket

Display section

C.r.t. : Type AW 17/69, flat screen 10 x 12 cm magnetic deflection, electrical focussing.
4.5 kV acceleration voltage

Beam current intensity : Externally adjustable, moreover automatic brightness modulation depending on duty cycle and sweep speed.

Lattice illumination : continuously adjustable

Y-deflection :
Collector current : 10 - 20 - 50 µA/cm . . . 5 A/cm (18 steps)
Diode current : 10 - 20 - 50 nA/cm . . . 10 µA/cm (10 steps)
Step function : 1 step/cm (step adjustment according to "step selector")
V_{BE} ranges : 20 - 50 - 100 - 200 mV/cm

Expansion switch : All deflection ranges can be extended by a factor .5 or 5.
External deflection coefficient: 10 mV/cm (5 mV or 50 mV/cm)
Polarity of the deflection: reversible
Shift range: 10 times the screen height with coarse-fine control

X-deflection :
Collector voltage : 10 - 20 - 50 mV/cm . . .50 V/cm (12 steps)
Diode voltage : 100 - 200 - 500 V/cm
10 times reduction possible with switch x.1
Step function : 1 step/cm (step adjustment according to "step selector")
V_{BE} ranges : 10 - 20 - 50 - 100 mV/cm
External deflection coefficient: 10 mV/cm
Deflection polarity : reversible
Shift range : 10 times screen width with coarse fine control

External input :
Symmetrical : 10 mV/cm
Input resistance *) : 1,000 MΩ, at Y2/X1/X2 internally shunted with 1 MΩ
Drive voltage : max. 1 V_{p-p}
Maximum permissible input voltage: 100 V d.c. (short-term)
Maximum permissible common mode voltage: ± 8 V_{p-p}

External connection facility for : Z-modulation
Datum line adjustment
External step signal programming
Auxiliary voltage: ± 30 V

Calibration : Calibration voltage: 50 mV ± 0.5 %
causing a deflection of 5 cm
(horizontal and vertical)

Mains supply

Mains voltages : 115 V and 230 V ± 15 %
Frequency: 40 . . . 60 Hz; also suited for 400 Hz

Power consumption : approx. 50 VA at normal load
approx. 250 VA at max. load

Inaccuracy : Measuring resistors < 1 %
Indication: < 3 % for a field of 8x10 cm

Ambient temperature
+10° . . . +35°C without any adverse effect
–10° . . . +50°C additional error of ± 2 %
–20° . . . +60°C operational at reduced power

Mechanical data :
Dimensions : Height 22 cm
Width 45 cm
Depth 32 cm
Weight : 21 kg

* The 1 MΩ shunt resistors (R362, R363, R426) can be removed.

V. Accessories

1 Mains cable
2 Transistor adapters PM 6549 (for L.F. and power transistors)
1 Manual
Optional accessories:

Transistor adapter	PM 6544 for power transistors (case SOT9; DIN 9A2)
Transistor adapter	PM 6547 (for RF transistors)
Transistor adapter	PM 6548 (empty case for mounting special holders)
Transistor adapter	PM 6549A (for power transistors, with Kelvin take-offs)
Diode adapter	PM 6546
Camera flange	PM 9317 for camera PM 9300

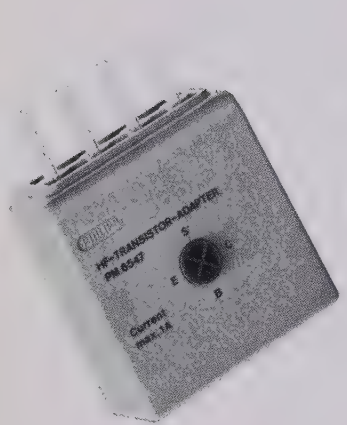

PM 6547

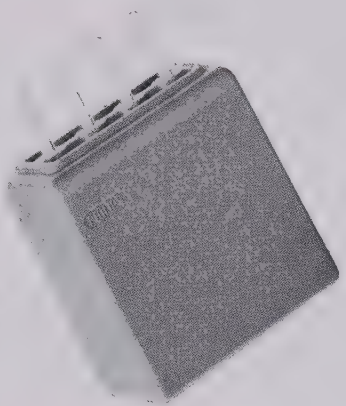

PM 6548

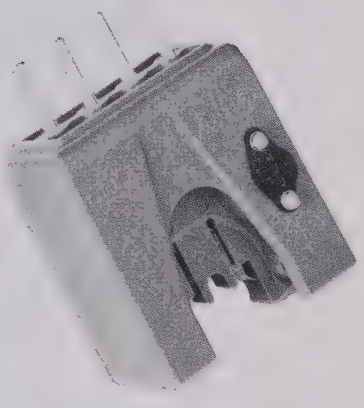

PM 6549

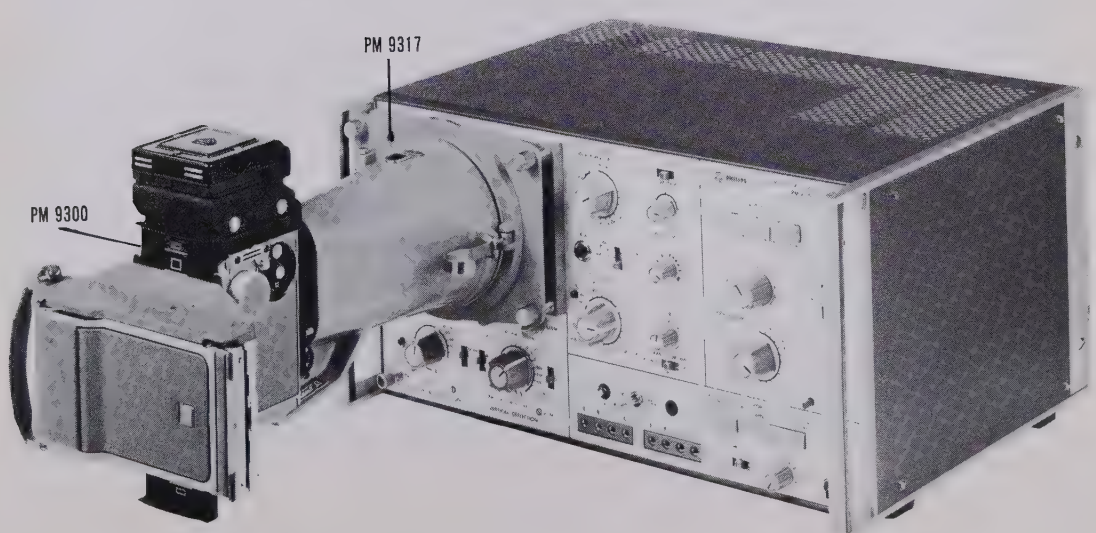

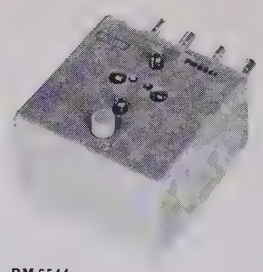

PM 6544

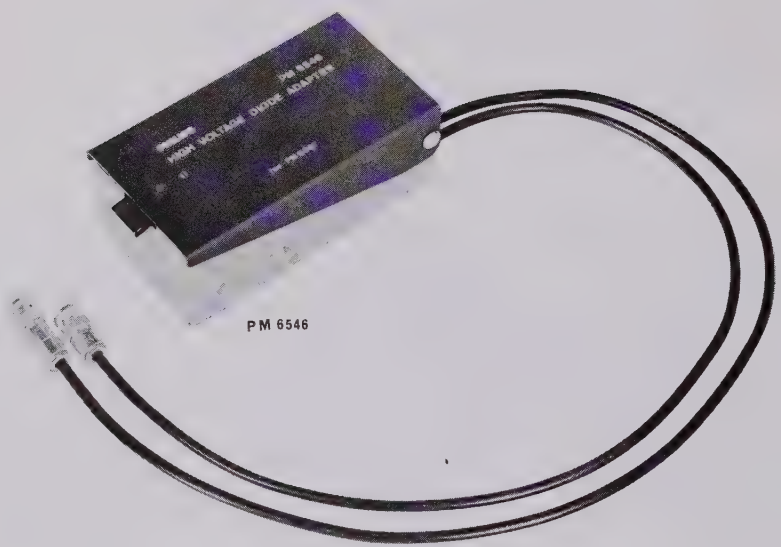

PM 6546

PM 6549A

Fig. 3. Accessories

DIRECTIONS FOR USE

VI. Installation

A. ADJUSTMENT TO THE LOCAL MAINS VOLTAGE

At the rear of the apparatus (Fig. 3) a voltage adapter has been fitted by means of which the apparatus can be adjusted to the local mains voltage. The apparatus can be adapted to 2 mains voltages, i.e. 115 V ± 15 % and 230 V ± 15 %.

Fuses VL1 and VL2: for 230 V: 1 A (delayed action type)
for 115 V: 2 A (delayed action type)

The 2A-fuses are situated in the two holders shown in fig. 4.

B. EARTHING

The apparatus should be earthed in accordance with the local safety regulations.
This may be effected:
— Via the accessory 3-core mains cable, provided that this is connected to a mains socket with rim earthing.
— Via the earthing screw at the rear of the apparatus.

C. CONNECTION TO THE MAINS

— Before connecting the unit check that the voltage adapter is set to the correct position.
— Connect the apparatus to the mains (check earthing) and switch it on by means of mains switch "POWER
— The pilot lamp above the switch should light up.

Fig. 4. Rear side of the instrument

D. RACK-MOUNTING VERSION

The dimensions of the transistor curve tracer permit of mounting the instrument into a 19″ rack. For this purpose a cornerpiece should be fitted on each side. These pieces are already present in the instrument.
For converting the instrument proceed as follows:

— Remove the two side plates (4 screws each).
— Remove the 4 feet.
— The cornerpieces have been mounted on each side by means of 2 screws "A" (Fig. 5). Remove these screws, take out the cornerpieces and refit the screws.
— Remove the frontmost screws "B" and fit the cornerpieces by means of these screws.
— Refit the side plates.

When mounting the instrument ensure that the air circulation is not impeded. Especially make sure that the instrument is not placed close to an apparatus giving off much heat (observe max. ambient temperature!).

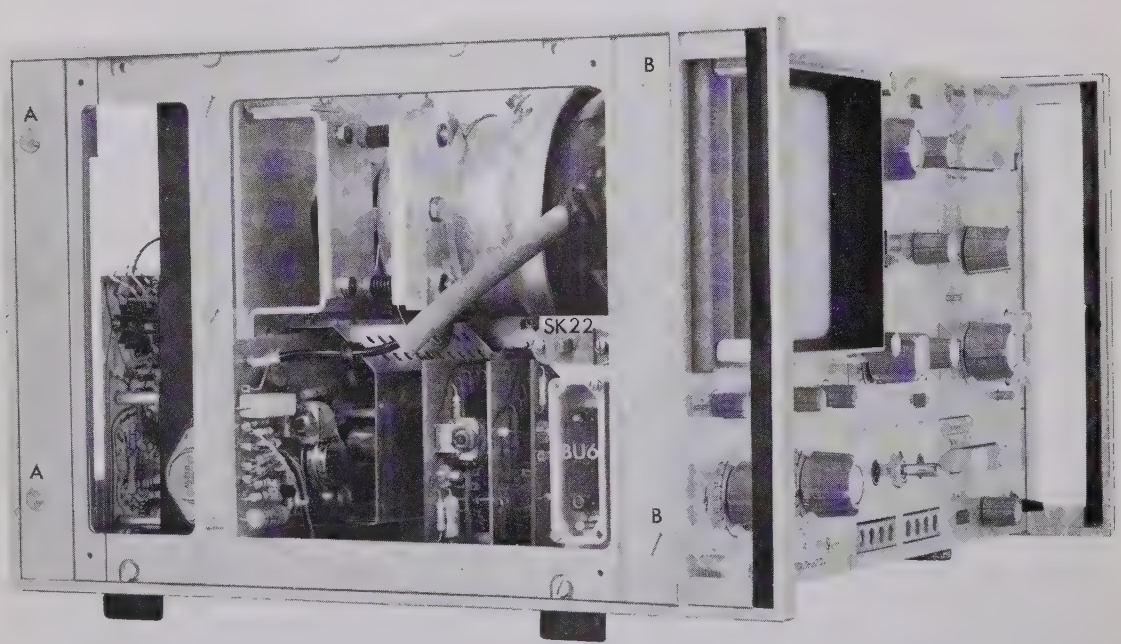

Fig. 5. Making the instrument suitable for a 19″ rack

VII. Operating instructions

ATTENTION:

The collector supply source permits adjustment of voltages up to 500 V_{peak} with respect to earth.
At the high tension output this is even as high as 3000 V_{peak} with respect to earth.
Voltages exceeding 34 V_{peak} may be lethal. When inserting the semi-conductor under test into the sockets or adapter, switch SK18 should always be in position "OFF"! The semi-conductor connection is then interrupted at three points.
The utmost of care should be taken when working with high supply voltages.
For testing diodes with the aid of the high-tension source, it is advisable to use the special adapter PM 6546, described in this manual.

A. SURVEY OF THE CONTROLS see Fig. 9

B. HINTS FOR TESTING SEMI-CONDUCTORS

In practice it often appears that certain problems in measuring semi-conductors are due to misjudgement of the semi-conductor under test. In this chapter the most essential points are given which must be observed when testing a semi-conductor.
First consideration: To which type belongs the semi-conductor to be tested?

Diode - Thyristor - PNP - or NPN transistor, Power, R.F. or L.F. transistor, Field effect transistor, etc.
Before connecting the transistor or diode to be tested it is necessary to establish type and power rating.

Fig. 6

Second consideration: What points should be checked? Short-circuit, leakage current, breakdown voltage, current gain, characteristics of a certain function etc.
The best method is to effect the measurement according to a definite testing procedure, especially with types whose characteristics are not known and which consequently may show deviations from the pre-set values.

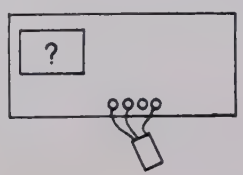

Fig. 7

Third consideration: Which is the max. power limit of the semi-conductor under test; which are the maximum permissible voltages and currents?
This point is very important, because especially in testing semi-conductors it may occur that the maximum permissible values are exceeded and the semi-conductor under test is damaged. In this respect, however, the curve tracer offers the possibility to display the characteristics at extreme values without overloading the semi-conductor. The relevant instructions are given under point D 5.1.1-5.

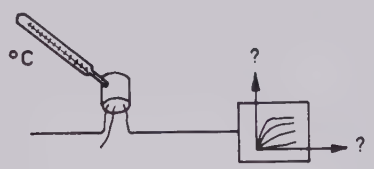

Fig. 8 Basic considerations for testing semi-conductors

C. FUNCTIONS OF THE CONTROLS

The indications of the controls refer to Fig. 9.

SK1: CURVES/sec. 100 from 0 - 200 - 100 to 0.
This slide switch serves for adjusting the step frequency (100 or 200 Hz) and selection of the trigger point at 100 Hz.

For explaining the indications 100 from 0 and 100 to 0 the working of the step generator should be described a bit further.
For obtaining a step signal a voltage stepped from 0 to a certain maximum value is required at regular intervals.
From the maximum value the voltage drops again to 0 and the cycle is repeated. The step circuits are triggered by means of a 100 Hz ∩∩∩-signal. There are two trigger points, one of which lies at the maximum value of the half-wave and the other one at the 0 point (Fig. 10). These two trigger points determine the starting level of the step voltage whereby the pulse width can be adjusted from 2.5 . . . 60 % and 100 % by means of control "DUTY CYCLE". This makes it possible to display either the first or the last part of a characteristic, or both when the curve tracer is set accordingly. This facility has the advantage that the semi-conductor can be tested at low power dissipation when a display of the characteristics at the extreme values is required.

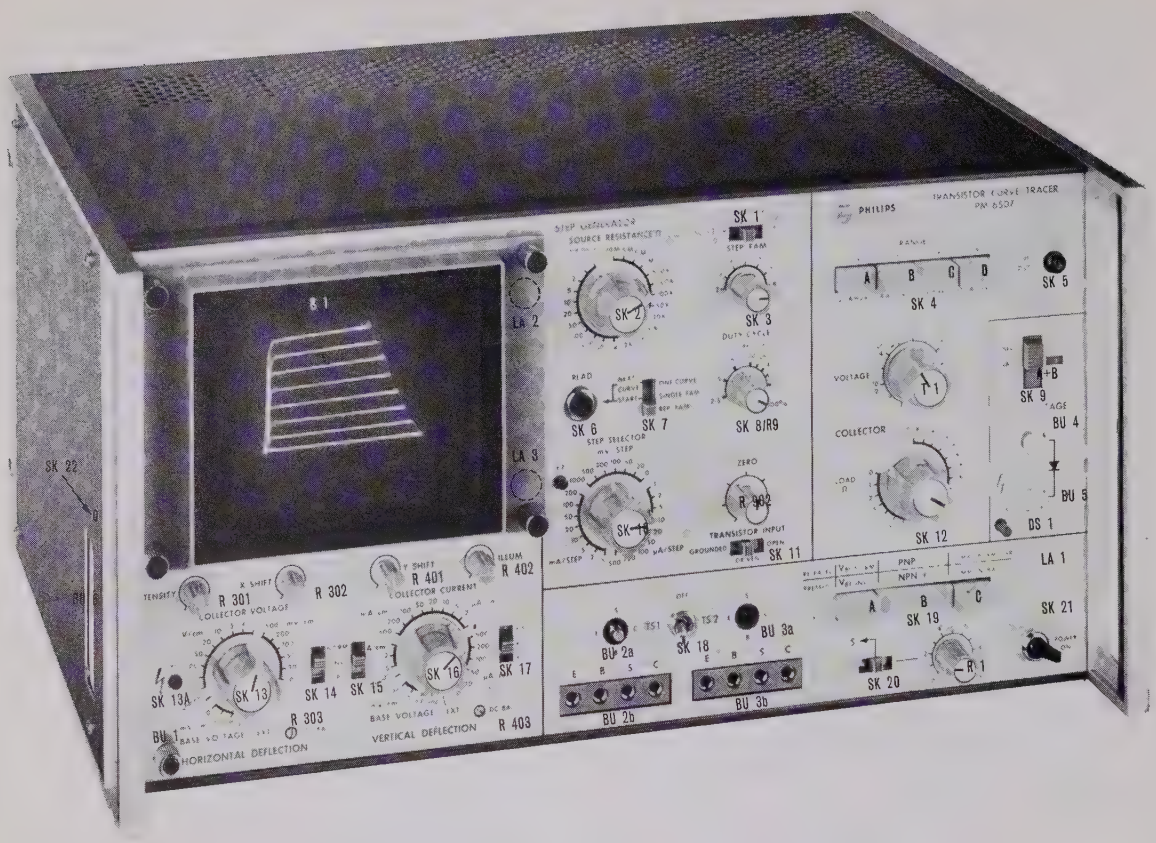

Fig. 9. Front view with controls and sockets

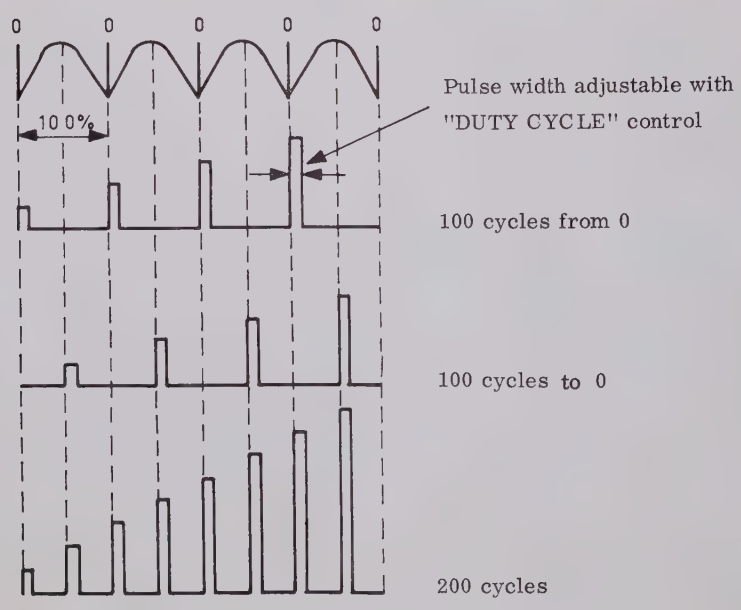

Fig. 10. Trigger point

SK2 SOURCE RESISTANCE Ω
It is possible to include a number of resistors from 0 . . . 10 MΩ in series with base circuit. These resistors serve for current limitation as well as for matching the base circuit.

SK3 This step switch serves for selection of the number of steps (or curves) to be displayed.

SK4 RANGE 10 V - 50 V - 100 V - 500 V
Push-button switch for selection of the collector voltage range.

SK5 CUT OUT
Excess-current cut-out for the collector voltage supply.
This thermo-magnetic switch cuts out at an excessive primary current.
Resetting is effected by depressing the red button.

SK6 READ
This push-button serves for starting a non-recurrent curve display or, in case of single curve display, for switching to the next step of the characteristic.

SK7 ONE CURVE - SINGLE FAM. - REP. FAM
Slide switch for trigger-mode selection
ONE CURVE - Single curve
In this switch position only one curve is displayed whereby switching to the next step is effected by means of push-button "READ", dependent on the number of curves selected by means of SK3.
SINGLE FAM - One set of curves
In case of triggering by means of push-button "READ" non-recurrent display of the selected set of curves is obtained.
This display method is employed for heavily loaded transistors which do not permit of long-term operation or for photographic recording.
REP. FAM. - Repeated display of the set of curves
In this switch position the selected curves are permanently displayed.

SK8 / R901 DUTY CYCLE
This control serves for adjusting the duration of a curve, i.e. for adjusting the pulse width of the step signal (also see SK1).
The potentiometer permits adjustment of the pulse width between 2.5 . . . 60 % and in the fully clockwise switch position a duty cycle of 100 % is obtained.

SK9 HIGH VOLTAGE
Slide switch for switching on the H.T. generator for testing diodes as regards breakdown voltage. The switch also serves for selection of two measuring ranges, µA and nA.
These ranges correspond to the ranges of range selector SK16.

SK10 STEP SELECTOR
Range selector for adjusting the step values of the base-emitter circuit. The switch covers the three groups of ranges µA, mA and mV/step. The voltage or current step between two successive curves is determined by this switch.
However, the selected value should be taken into account when establishing the value of the signal on the c.r.t., when SK13 or SK16 is in position ⌐¯¬.

SK10A x2.
All current and voltage ranges can be doubled by means of this push-button (only for brief periods!).

SK11 TRANSISTOR INPUT
Slide switch for switching the input potential:
GROUNDED
In this position the input of the semi-conductor under test is connected to earth.
DRIVEN
In this position the input of the semi-conductor under test is driven by the step generator.
OPEN
In this position the input of the semi-conductor under test is open-circuited.

SK12 COLLECTOR LOAD Ω
Step switch by means of which resistors of 0 . . . 100 kΩ can be included in series with the collector circuit for current limiting and matching.
In this way the power dissipation of transistors operated near their load limits can be adapted individually which proves to be very useful in practice.

SK13 COLLECTOR VOLTAGE - BASE VOLTAGE
Range selector for horizontal deflection of the trace. The values indicated apply to 1 cm screen distance, independent of the step value selected with SK10, except for position ⌐¯¬.
In latter position the step value of SK10 applies to 1 cm screen distance.
Position "EXT." serves for external horizontal deflection. Connection is effected via BU6 (sensitivity 10 mV/cm).

SK13A x.1.
With this push-button the ranges 100 V, 200 V and 500 V of SK13 can be reduced by a factor 10.

SK14 / SK15 NORMAL - INVERSE - CALIBRATION
These slide switches serve for polarity reversal of the horizontal (SK14) or vertical deflection (SK15). This enables reversal of the trace in both directions, independent of each other.
Switch position "CAL" serves for checking the display circuit; a direct voltage of 50 mV is then applied to the amplifier inputs.
The indications near range selectors SK13 and SK16 remain valid (with the exception of switch position ⌐¯¬ as well as the base voltage ranges 10 . . . 100 mV/cm and 20 . . . 200 mV/cm).
The trace on the screen will be 5 cm. For the ranges in brackets the range values selected should be observed, and in position ⌐¯¬ the sensitivity is 100 mV/cm i.e. a shift of 0.5 cm.

SK16 COLLECTOR CURRENT - BASE VOLTAGE
Range selector for vertical deflection of the trace.
The range values apply to 1 cm screen distance, independent of the step value chosen with SK10, except for switch position ⌐⌐⌐. In this position the step value of SK10 holds good for 1 cm screen distance. Position "EXT" serves for external vertical deflection. Connection is effected via BU6 (sensitivity 10 mV/cm).

SK17 x.5 x 1 x 5
Expansion switch. By means of this switch the vertical deflection range (SK16) can be extended by a factor 2 in downward direction and by a factor 5 in the upward direction.

SK18 Toggle switch TS1 - OFF - TS2 for connecting semi-conductor TS1 or TS2. The connection sockets for 4 mm plugs together with the transistor receptacles above these sockets are parallel connected via RF coils.
When the toggle switch is in the left-hand position the left hand receptacles and sockets are connected (TS1) and in the right-hand position TS2 is connected. In the centre position the sockets and receptacles are disconnected.

SK19 Push-button switch for PNP-NPN selection, changing over the V_{BE} from normal to inverse (polarity reversal of the B-E junction) and changing over from common-emitter to common-base arrangement.

SK20 Slide switch for selecting the + or –10 V direct voltage (⏚) which may be added to the "S" connection (shield). This voltage is for instance required for transistors with two inputs.

SK21 POWER ON
Mains switch for switching on the apparatus.

SK22 Slide switch for the use of the step-generator with external programming.
(Accessible via an apperture in the left-hand cabinet plate.)

SK25 Mains voltage adapter 115 V/230 V ± 15 % (at the rear of the apparatus).

T1 VOLTAGE
Variable transformer for adjusting the collector voltage and the high tension (when SK9 is switched on).

R1 Potentiometer for adjusting the "SHIELD" voltage from 0 to + or –10 V (dependent on the position of SK20).

R301 INTENSITY
Potentiometer for brightness control.

R302 X-SHIFT
Ganged potentiometer (coarse and fine adjustment) for horizontal shift of the trace.

R303 Potentiometer for adjusting the d.c. balance of the X amplifier.

R401 Y-SHIFT
Ganged potentiometer (coarse and fine adjustment) for vertical shift of the trace.

R402 SCALE ILLUMINATION
Potentiometer for adjusting the lattice illumination.

R403 Potentiometer for adjusting the d.c. balance of the Y amplifier.

R902 ZERO
Control for zero shift of the step signal.
The lower curve is adjusted to datum or leakage current level by means of R902. For this adjustment SK11 is set at "OPEN", the datum line is read and after SK11 has been reset to "DRIVEN" the lower curve is adjusted to the reading obtained, by means of R902.
The datum line is correctly adjusted if the curve does not shift when SK11 is switched from "DRIVEN" to "OPEN".

BU1 Earthing socket.

BU2a Transistor receptacle for small types
BU2b Connection sockets for power transistors
Switch position TS1
Parallel connections
The E-B and C-S connections have been provided with Kelvin take-offs (voltage and current fed-out separately to prevent measuring errors)

BU3a Transistor receptacle for small types
BU3b Connection sockets for power transistors
Switch position TS2
Parallel connections

BU4, BU5 BNC sockets for connection of a protective holder or connection cable for testing diodes in the breakdown region (max. 3 kV).
(BU4 = measuring input)
(BU5 = high voltage output ⚡)

BU6 Multiple connector for external control (on the left hand side of the apparatus)

D1 Push-button to connect the high voltage to socket BU5.

LA1 On/off pilot lamp

LA2, LA3 Lamps for lattice illumination

CS1 Mains socket with rim-earthing contacts (at the rear of the apparatus).

D. OPERATION

1. Basic setting

The basic setting of the apparatus depends on the type of semi-conductor and its characteristics as well as on the selected mode.
E.g., for measuring an NPN transistor of relatively low power the setting shown in Fig. 20 may be used. It is advisable to start with a low setting in case of a semi-conductor whose characteristic values are not exactly known. This setting can then be changed if a more accurate measurement is permissible.

2. Switching on the apparatus

After the controls have been set to the initial position, the apparatus can be switched on with switch "POWER ON". If the transistor is already connected it should be ensured that toggle switch SK18 is in the mid position; in this position the semi-conductors (TS1 and TS2) under test are disconnected.
The heating up time of the curve tracer is approximately 1 minute. After this the apparatus is ready for operation.

3. Connecting of a semi-conductor

For connection of small transistors two receptacles are available and two socket connectors for 4 mm plugs.
The socket connector and the receptacles above it are parallel connected via R.F. chokes. These chokes prevent or suppress parasitic oscillation of R.F. transistors which for the same reason should be connected to the plug connectors.
In the left-hand position of the toggle switch the left-hand receptacles and sockets (TS1) are connected and in the right-hand position the right-hand sockets and receptacles (TS2).

4. Adjusting the display section

The display section should be adjusted to the correct horizontal and vertical sensitivity before the semi-conductor under test is connected. First adjust the spot on the screen by means of the X and Y shift controls.
The horizontal deflection corresponds to the collector-emitter voltage. As soon as a voltage is applied a horizontal line is displayed on the screen whose length is a measure of the sensitivity adjusted with SK13 or the collector voltage.
The vertical deflection defines the value of the collector current of the transistor. Before the semi-conductor is connected range selector SK16 should be set to a sensitivity corresponding to the collector current to be expected.
As soon as a transistor is connected a current will flow through the collector circuit which depends on the selected base current or voltage. This current causes a deflection in the vertical direction on the screen, whereby the distance from the datum line to any point of the curve represents the value of the collector current.
The switches NORM./INVERT serve for reversing the trace in the horizontal and vertical direction. An expansion switch permits of extending the vertical measuring range by a factor 2 in the upward direction or by a factor 5 in downward direction.

For the voltage ranges 100 V, 200 V and 500 V of the high voltage generator, a push-button has been provided, which enables an increase of the display sensitivity by a factor 10.
Control INTENSITY serves for adjusting the intensity of the electron beam. To prevent damaging of the picture tube the beam current intensity should not be excessive, but should be adjusted so that a clear picture is obtained.
Balance-adjustment of the horizontal deflection is effected with potentiometer R303.
If a V_{BE} of 20 mV, 50 mV or 100 mV is selected with SK13, R303 should be adjusted so that the movement of the spot is minimum (SK11 at "GROUNDED").
Balance-adjustment for the vertical deflection is effected with R403. While setting SK17 from 1 to x0.5 or x5, R403 should be adjusted so that the electron-beam shift is minimum.

5. Setting for testing semi-conductors with 3 or 4 terminals

The following description gives a survey of the most important adjustments for displaying a characteristic. The example chosen applies to the display of I_C as a function of V_{CE}, with I_B as parameter, for a PNP transistor in a T0 5 case.

- Set all the controls to the position shown in Fig. 20 (toggle switch TS1 - OFF - TS2 in the centre position).
- Switch on the apparatus (switch POWER ON).
- Insert the transistor in the receptacle, e.g. BU2a.
- Check and preset:
  - V_{CE} - VOLTAGE
  - COLLECTOR LOAD
  - STEP SELECTOR μA, mA/STEP
  - HORIZONTAL DEFLECTION (range)
  - VERTICAL DEFLECTION (range)
- Set the toggle switch at TS1.
- Adjust for desired step current (or step voltage and series resistance SK2 for certain traces), and collector voltage.
- Adjust the horizontal and vertical deflection until proper curve display is obtained.
- Adjust step switch "LOAD Ω" so that the curve display is limited (e.g., according to the dotted line in Fig. 12).
- Adjust the level of the lower curve to zero with control "ZERO" by setting slide switch SK11 at "OPEN" and reading the zero line (given by the leakage current of the transistor).
  Reset the slide switch at "DRIVEN" and adjust the lower curve to the zero value found by means of control "ZERO".
- By means of control "DUTY CYCLE" the driving time of the step current can be reduced, so that only the beginning of the curve is visible when switch "CURVES/sec." is at position "100 from 0", (Fig. 11a). In position "100 to 0" the second part of the curve trace is visible (Fig. 11b) and in position 200 the beginning and end of curve can be displayed, (see Fig. 11c and description under point 5.1.2).

5.1. Displaying curves with power limiting

The characteristics of semi-conductors at high loads can only be displayed when the semi-conductor cannot be damaged by this high load. For this purpose the curve tracer offers the following possibilities:

5.1.1. Curve display with limited duty cycle of the step current (DUTY CYCLE) 100 from 0 or 100 to 0.

When a curve trace of a transistor is displayed the highest power dissipation occurs during the transition from the conductive to the non-conductive state. Fig. 12 shows a curve trace whereby the power dissipation limit P_C max. of ... mW is represented by the dotted line. This display method with limiting at P_C max. can be approximated with the curve tracer.
This is obtained by reducing the duty cycle of the step current (DUTY CYCLE) and by current limitation with series resistors included by means of the step switch (LOAD Ω). By means of the DUTY CYCLE control adjustment of the step width between 2.5 ... 60 % and 100 % is possible (see Fig. 10 and the description under point C1).

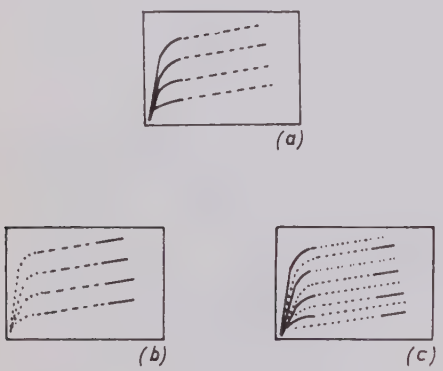

Fig. 11. Effect of the duty-cycle control

These two methods enable reducing of the load of the semi-conductor under test to a minimum by displaying only that part of the characteristic which is of interest. The semi-conductor may then be loaded to high values without the risk of being overloaded.

5.1.2. Curve display with limited duty cycle of the step current, 200 Hz.

When the number of steps is even the curves are shifted to the beginning or end. In case of an odd number all curves are uninterrupted but, dependent on the duty cycle adjustment, the centre parts are driven to zero and become consequently interrupted or overlap.

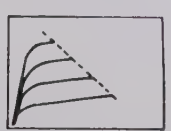

Fig. 12. Curve display with current limiting

In this way a survey of the entire characteristic is obtained at a limited load.

5.1.3. Curve display with current limiting by means of series resistors in the collector circuit.

Dependent on the base drive of a transistor currents will flow through the collector circuit which are a factor h_{fe} higher. When series resistors are included in the collector circuit a voltage drop will arise across this resistance which causes a decrease of the collector-emitter voltage of the semi-conductor under test which depends on the transistor drive. In this way a power limitation is obtained which can be adapted to the maximum permissible value of the transistor and which can be adjusted to any value within the resistance and voltage ranges (Fig. 12).

5.1.4. Non-recurrent curve display

If certain transistor settings do not permit of continuous operation, display in the "single" mode is possible.
For this slide switch SK7 is set at "SINGLE FAM".
Triggering is effected by means of push-button "READ" (SK6).

5.1.5. Curve display of one curve out of the set of curves.

From a set of curves, the number of which can be selected by means of switch STEP/FAM, each curve can be displayed individually. Switching over to a higher step is effected by means of push-button "READ" (SK6).

5.2. Displaying curves with voltage drive.

5.2.1. Transistors

a. Leakage current measurements I_{CEX}, I_{CEO}, I_{CER} -, I_{CES} and breakdown voltage BV. (Fig. 13).
Leakage current measurements I_{CER}, as well as breakdown voltage measurements BV_{CER} can be effected by means of the resistors from 0 Ω (CES) to 10 MΩ (CER) which can be switched by means of SK2 (SK10 in position 0 mV/Step). Open base measurements ($R_{BE} = \infty$ /CEO) can be effected with SK11 (INPUT OPEN).
Measurements with voltage and resistance (CEX) can be effected as described above, however, SK10 should be adjusted to voltage (... mV/Step) and the polarity (SK19 A V_{BE} INVERS) should be reversed. By means of control R902 "ZERO" any voltage value can be selected.
During this measurement it should be observed that the power dissipation near the breakdown limits can be very high, so that it is recommended to limit the power dissipation by including resistors in the collector circuit.

b. Setting at small base currents:

Transistors with a high current gain can be measured most efficiently at a small I_C when the voltage drive on the base takes place via a high load resistance.

Example: 100 mV/step — 1 MΩ $I_B = \frac{100\ mV}{1\ M\Omega} =$ 100 nA/ step.

Compensation of the voltage in the non-linear part of the base-emitter diode characteristic is then possible by means of control R902 (Zero); see Fig. 14.

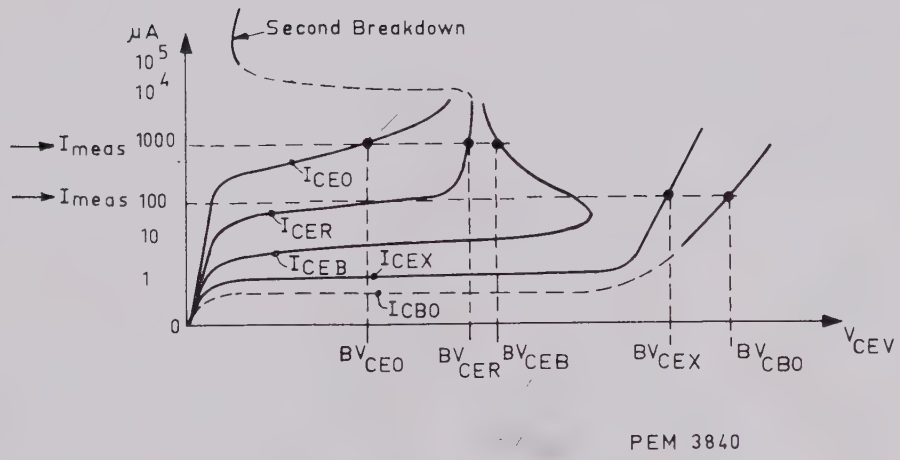

Fig. 13. Breakdown characteristics

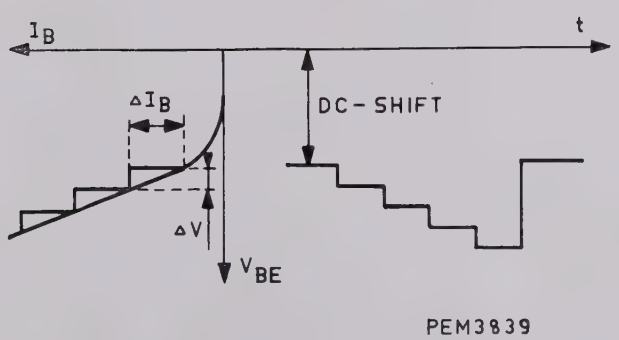

Fig. 14. Compensation for the non-linear part of the base-emitter diode characteristic

5.2.2. Voltage driven elements such as FET:

a. Junction FET (also see 5.3).
Depletion - type MOS - FET.
With these semi-conductors there is already a drain current (I_{DON}, $I_{D^{\circ}S}$) at a gate-source voltage of zero volts. When the gate is driven by the step voltage this current varies.
The curves can then be changed by selection of the polarity and the internal resistance (Fig. 15).

b. Enhancement - type MOS - FET.
In this type of transistor normally no drain current will flow without gate source voltage (Fig. 16).
As soon as a sufficiently high gate-source voltage is applied the drain current starts flowing (gate-source cut-off voltage).

5.3. Additional drive on a 4th connection (e.g. 2nd gate).

With the aid of control R1 and switch SK20 the 4th electrode can be employed for driving so that special measurements are possible.

6. Setting for breakdown tests of diodes and other elements with 2 connections.

Because of the high voltages and high sensitivity the outputs and inputs have been isolated. The voltage is adjusted by means of variable transformer T1 and switch SK9 enables a division into two current ranges. For safety reasons the test voltage is cut out as soon as button DS1 is released.
A second safety contact is available when adapter PM 6546 which is supplied separately, is employed for testing diodes.
The voltage is then switched on only, if the cover is fitted and push-button D1 on the instrument is depressed.

Connection and operation of adapter PM6546

– Connect the adapter to the PM6507.
The short plug should be connected to BU4 (–, top) and the long one to BU5 (+, bottom).
– Insert the semi-conductor under test into both clips in the adapter. To this end the sliding screen should be removed by lifting it out of its guide.

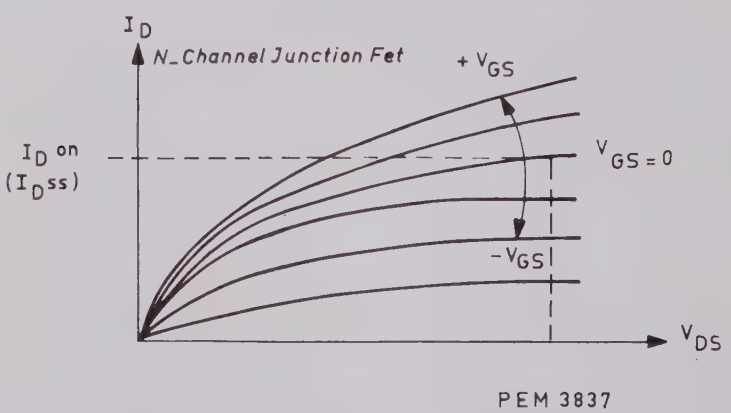

Fig. 15. I_D-V_{DS}-characteristic of an N-channel junction FET

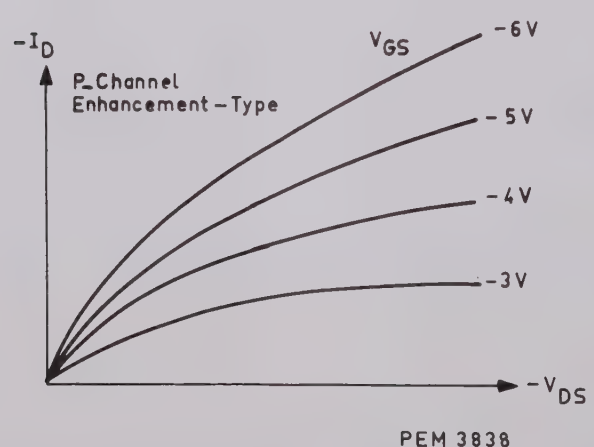

Fig. 16. I_D-V_{DS}-characteristic of a P-channel enhancement-type MOS-FET

For measurements in reverse direction, the cathode of the semi-conductor under test should be connected to the positive clip (marked + ⅄). This electrode is connected to the high-voltage when the switch in the adapter is depressed.

— The screen has two different openings. Depending on the semi-conductor under test, the big or small opening can be chosen, so that the anode connection is well screened against stray capacitance. Therefor the screen should be slided as far as possible over the semi-conductor under test (Fig. 17). For insensitive measurements it is not necessary to use the screen.

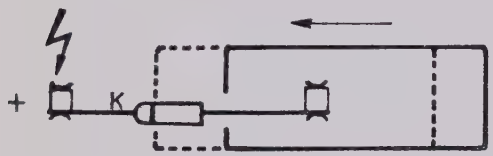

Fig. 17. Position of the screen over the semi-conductor under test

Switching in

— Close the lid. Thereby the push-button SK1 is depressed automatically, by which the high-voltage connection of the semi-conductor under test is included into the circuit.

— Depress push-button DS1 on the PM6507; by this the high-voltage is switched in and applied to the adapter.

WARNING

MEASUREMENTS WITH HIGH VOLTAGES HAVE TO BE CARRIED OUT WITH CLOSED LID ONLY. NEVER DEPRESS THE PUSH-BUTTON ON THE ADAPTER MANUALLY.

Function of switch SK2

In position ∩ normal operation with half-wave voltage occurs (Fig. 18, upper display).
In position C a capacitor is incorporated into the high-voltage circuit. Consequently an integrated supply develops, so that the diode characteristic is not written from the origin. By this the influence of the switch and junction capacitance on the display is reduced.
Nevertheless the breakdown of a diode can be observed under dynamic conditions as a result of the superimposed ripple voltage.
By depressing push-button DS1 on the PM6507 periodically, the complete quasi-static leakage-current or breakdown characteristics of the semi-conductor under test can be displayed. The fly-back occurs with a time-constant of 0.6 s. (Fig. 18, lower display).

REMARK

When switch SK2 occupies position C, a voltage drop arises over the capacitor load and the internal resistance of the voltage source, so that only 70 % of the peak value of the half-wave voltage is available.

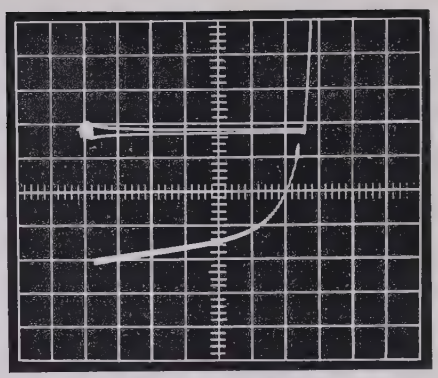

Fig. 18. Display in positions ∩ and C of PM 6546

7. Setting the instrument for external control or programming:

a. Application as X-Y oscilloscope

Connector BU6 on the left-hand side of the instrument can be employed for X-Y display. The inputs are arranged as follows: ⏚ Socket H/K
X1 Socket D
X2 Socket F
Y1 Socket B
Y2 Socket E

b. Special measurements:

— Circuit for testing tunnel diodes
— Circuit for simultaneous display of two characteristics.

c. External programming of the step generator and external measuring circuits:

Automatic operation can be obtained by means of an external adapter. Independent of its normal application and the application as an X-Y oscilloscope the instrument can also be used as an automatic curve tracer.
The external programming unit is connected to connector BU6 on the left-hand side of the instrument. The basic arrangement for external programming appears from circuit diagram Fig. 19.
The auxiliary unit should be proportioned so that it agrees with the application and type of semi-conductor under test.
The following formulas serve for calculating the desired operating values in the step voltage generator and the collector supply.
Selecting reference resistor R_X in the step generator.
This resistor determines the step current per stage.

For $I \geqq 500\ \mu A/step$ $\quad R_X = \dfrac{100}{I\ (mA/step)} - 1\ [\Omega]$

For $I \leqq 500\ \mu A/step$ $\quad R_X = \dfrac{100}{I\ (\mu A) - 1}\ [k\Omega]$

Collector voltage:
This voltage should be preselected so that it corresponds to the max. test voltage. Lower voltages can be obtained by means of an external voltage devider (R_C), the series resistors simultaneously ensuring current limitation.

The horizontal deflection sensitivity of the monitor is determined by the two measuring voltage dividers A and B. These dividers can be made identical to the internal divider (R346-R357 and R332-R334), whereby the intermediate stages which are not required may be left out.

Collector current:

Measuring resistance R_I is defined as follows:

$$R_I\,(\Omega) = \frac{10\ mV/cm}{1\ mA/cm} = 10\ \Omega \quad R_I\ max \leqq 10\ k\Omega$$

(1 mA has been chosen as an example)

Base voltage:

For curve display as a function of the base-emitter voltage the X input should be connected to the base-emitter junction of the semi-conductor under test. The voltage divider to be employed should then be high-ohmic, so that the shunt of the base-emitter junction is small.

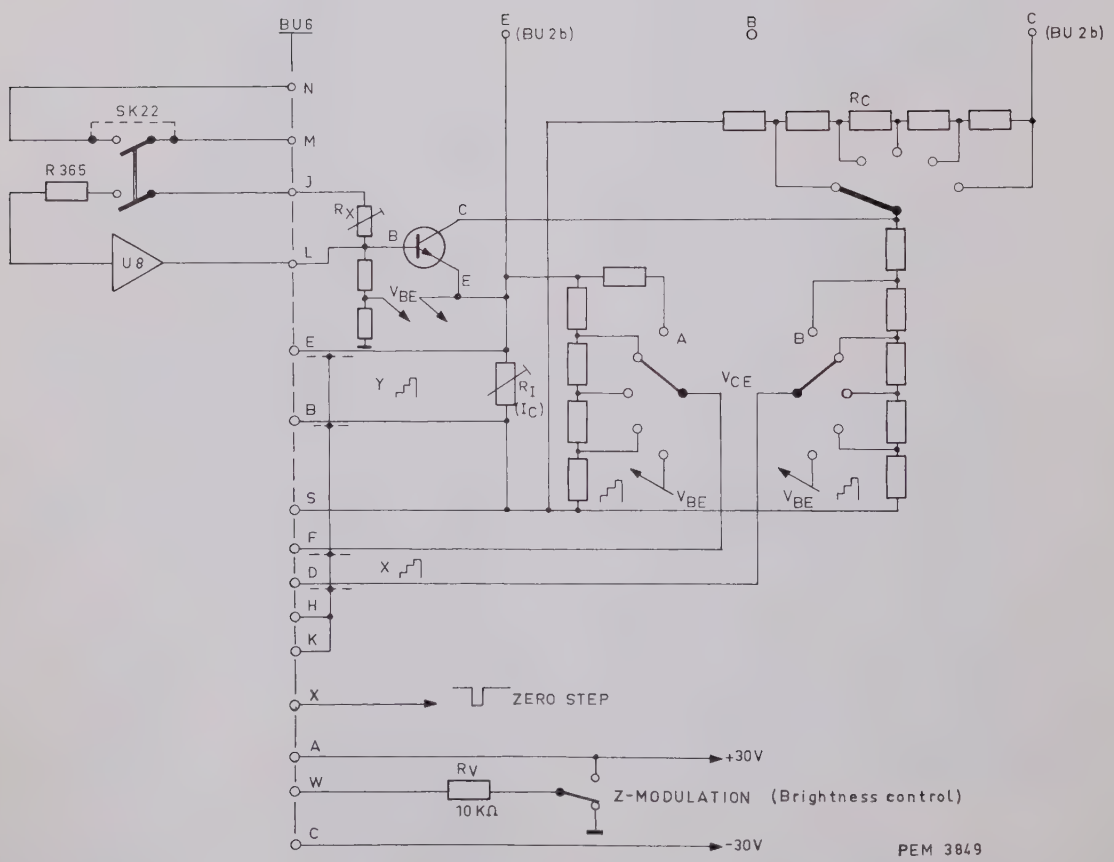

Fig. 19. Circuit for external programming

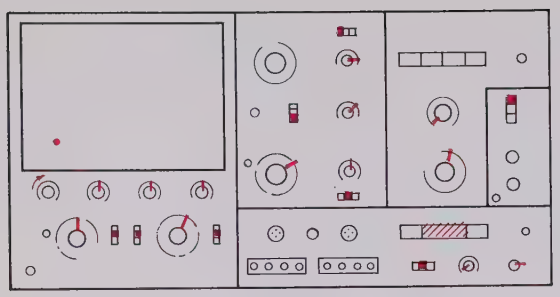

Basic setting
Adjust spot
NPN-TRANSISTOR

Fig. 20

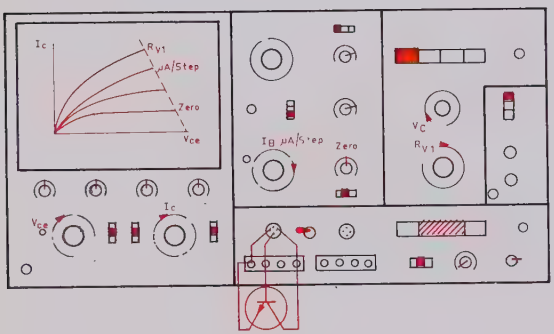

Charact. $I_C = f(V_{CE})$
I_B = Parameter
NPN-TRANSISTOR
Common emitter

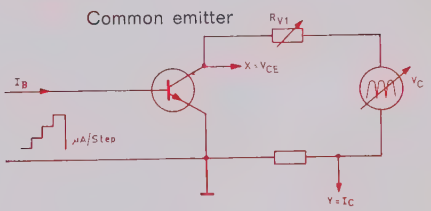

Fig. 21

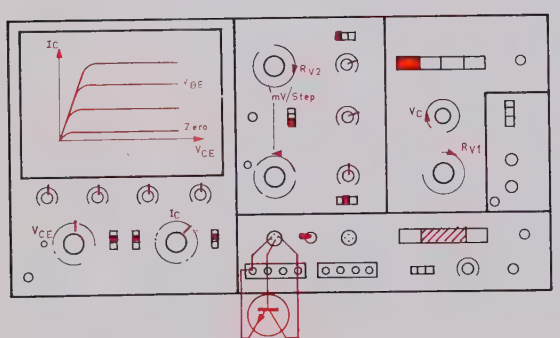

Charact. $I_C = f(V_{CE})$
V_{BE} = Parameter
NPN-TRANSISTOR
Common emitter

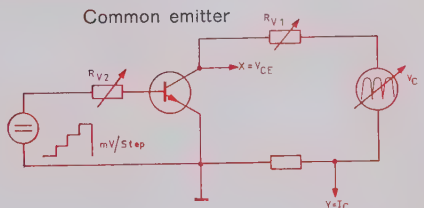

Fig. 22

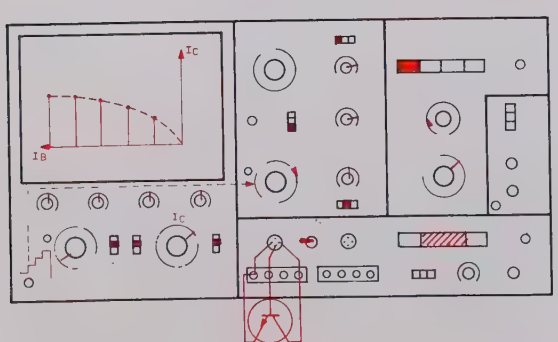

Charact. $I_C = f(I_B)$
NPN-TRANSISTOR
Common emitter

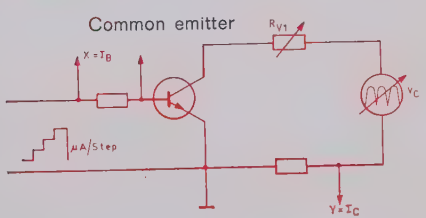

Fig. 23

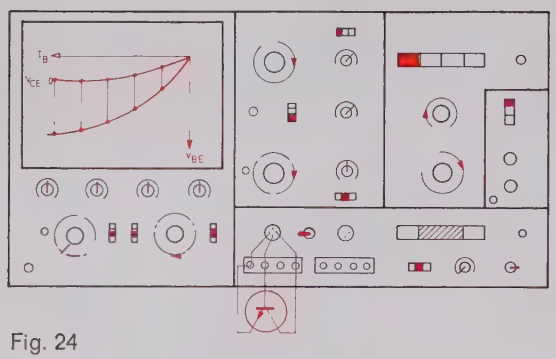

Charact. $I_B = f(V_{BE})$
V_{CE} = Parameter
NPN-TRANSISTOR
Common emitter

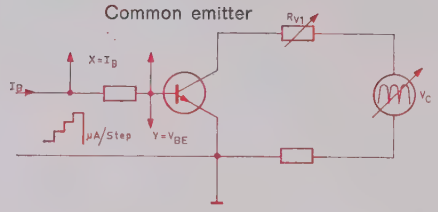

Fig. 24

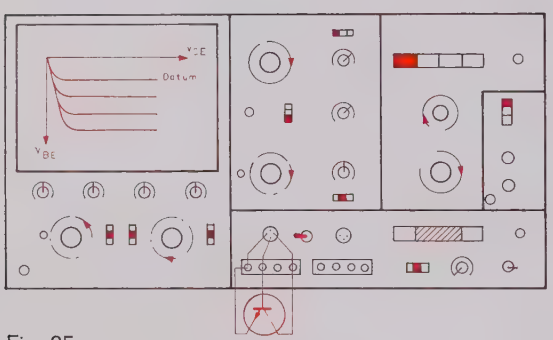

Charact. $V_{BE} = f(V_{CE})$
I_B = Parameter
NPN-TRANSISTOR
Common emitter

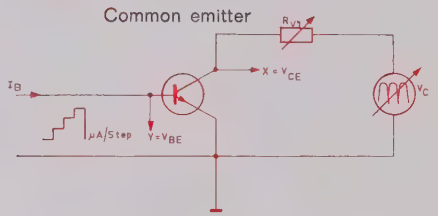

Fig. 25

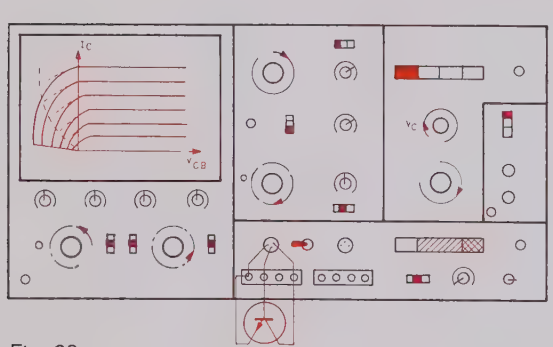

Charact. $I_C = f(V_{CB})$
I_E = constant
NPN-TRANSISTOR
Common base

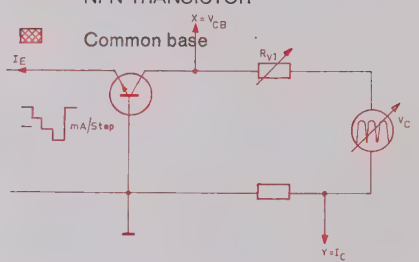

Fig. 26

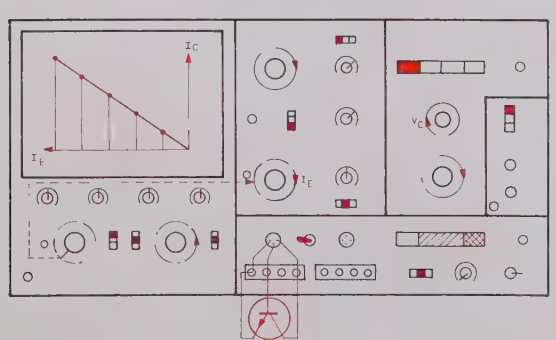

Charact. $I_C = f(I_E)$
NPN-TRANSISTOR
Common base

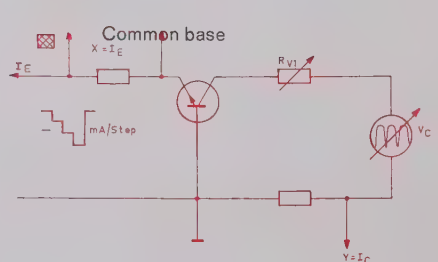

Fig. 27

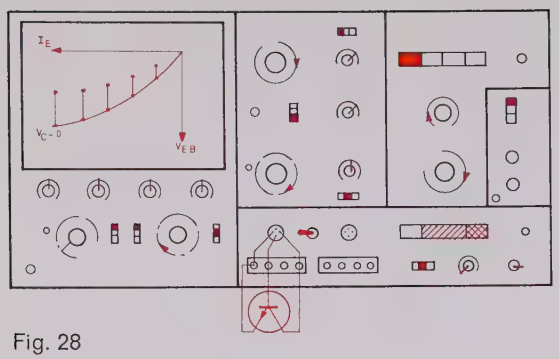

Charact. $I_E = f(V_{EB})$

NPN-TRANSISTOR

Common base

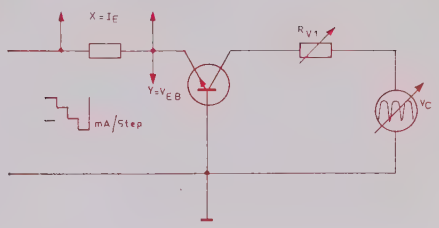

Fig. 28

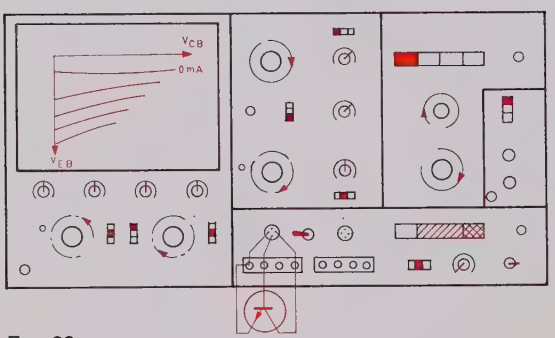

Charact. $V_{EB} = f(V_{CB})$

I_E = constant

NPN-TRANSISTOR

Common base

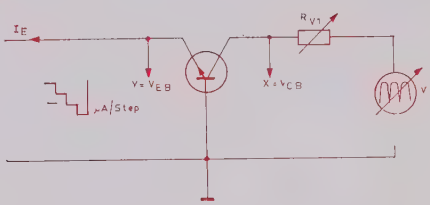

Fig. 29

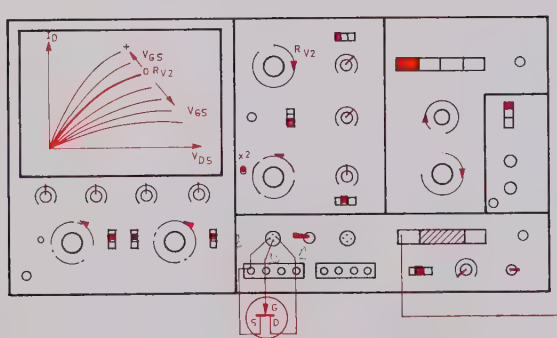

Charact. $I_D = f(V_{DS})$

V_{GS} = constant

N CHANNEL FET

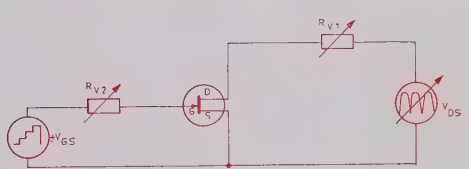

+ V_{GS} (NORMAL)

— V_{GS} (INVERS)

Fig. 30

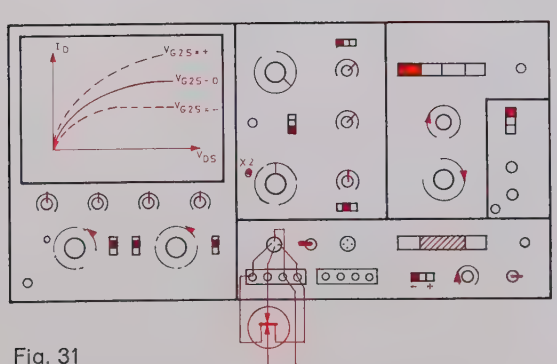

Charact. $I_D = f(V_{DS})$

V_{G1S} = constant

V_{G2S} = Parameter

N CHANNEL FET with 2 gates

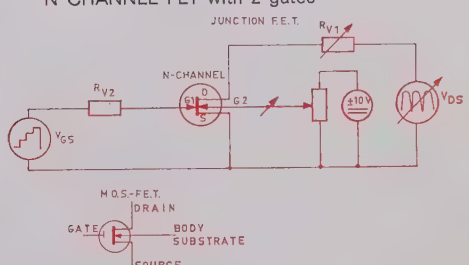

Fig. 31

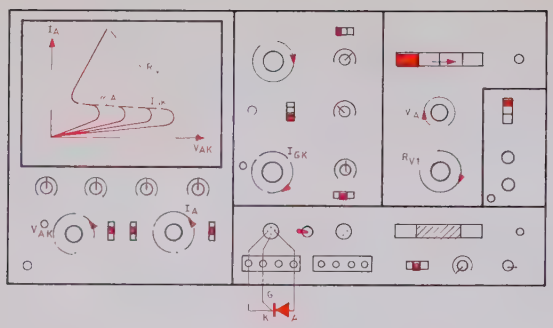

Fig. 32

Silicon controlled rectifier
THYRISTOR (SCR)

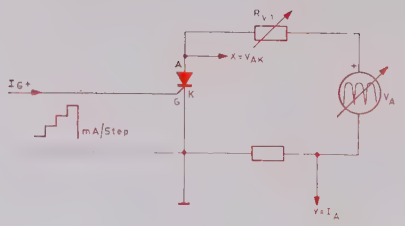

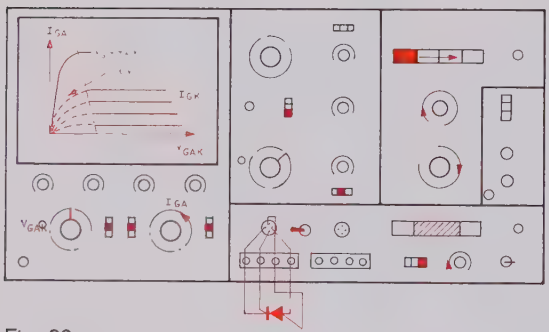

Fig. 33

Silicon controlled switch
(SCS)

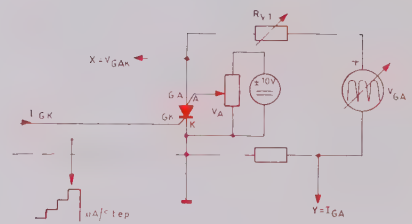

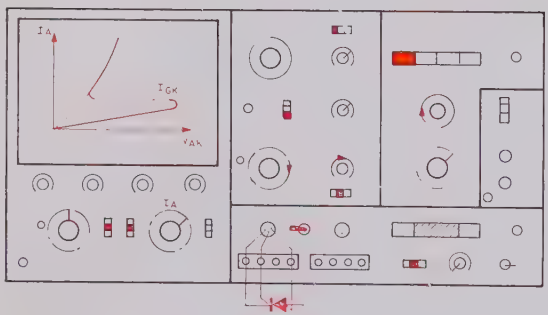

Fig. 34

(SCS)

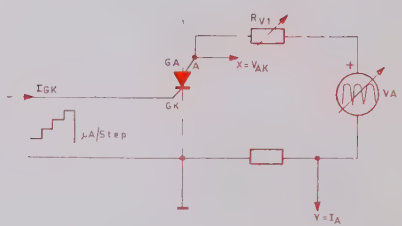

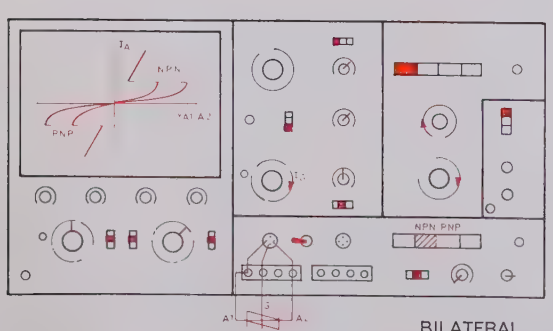

Fig. 35

UNILATERAL SWITCH
BILATERAL SWITCH

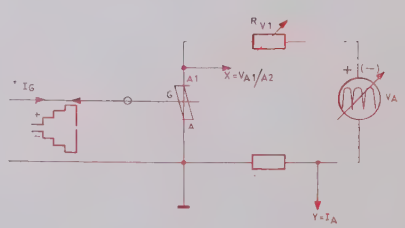

BILATERAL

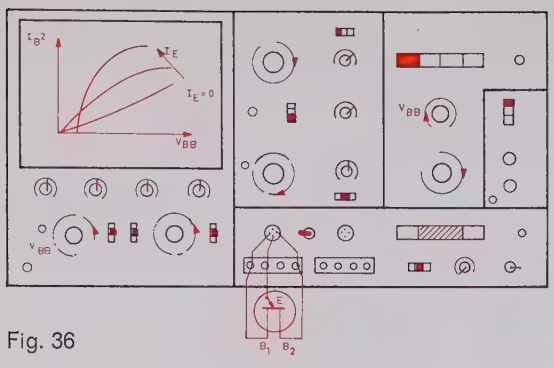

Fig. 36

UNJUNCTION-TRANSISTOR
(UJT)

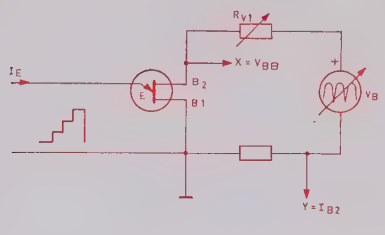

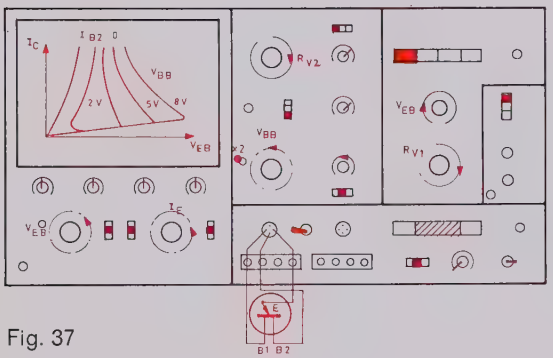

Fig. 37

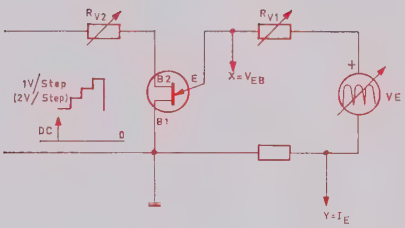

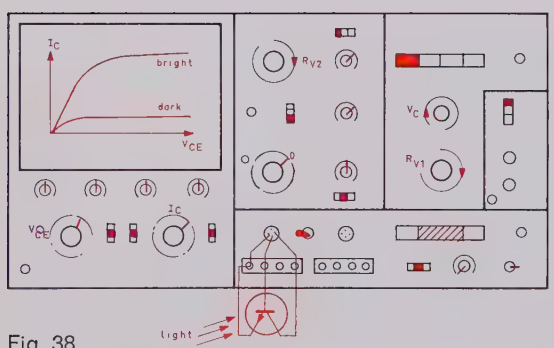

Fig. 38

FOTO-TRANSISTOR
NPN

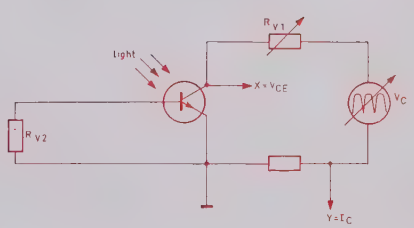

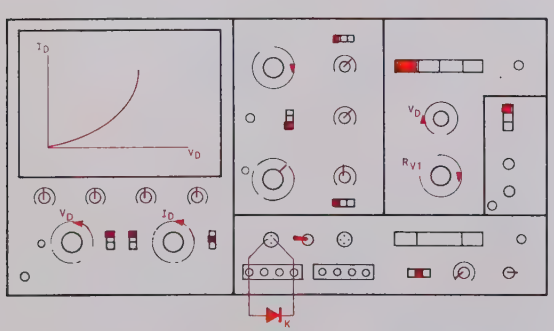

Fig. 39

Forward direction
Zener diode
Diode

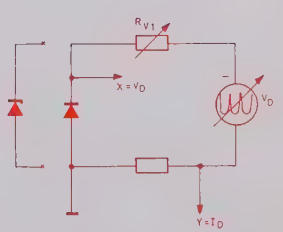

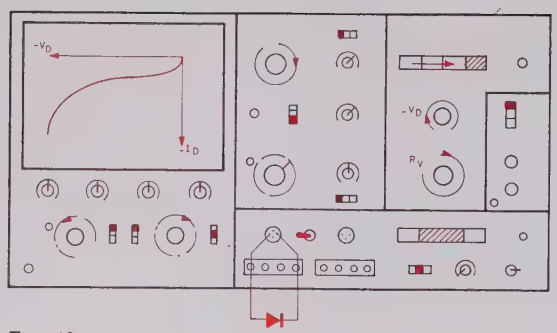

Fig. 40

Leakage current measurement,
breakdown
DIODE reverse direction
NPN

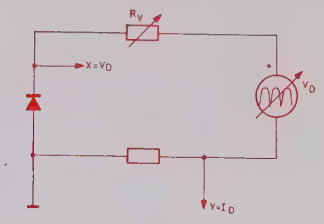

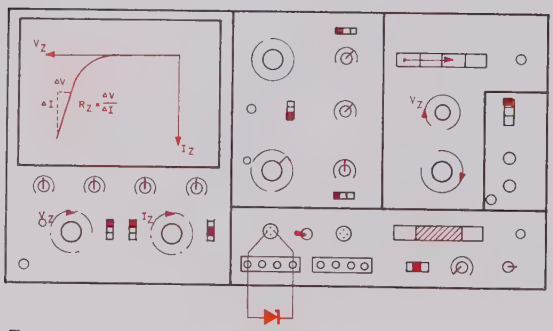

Fig. 41

Zener diode
Zener range
NPN
Expansion and shift 10 x screen

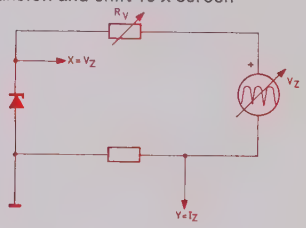

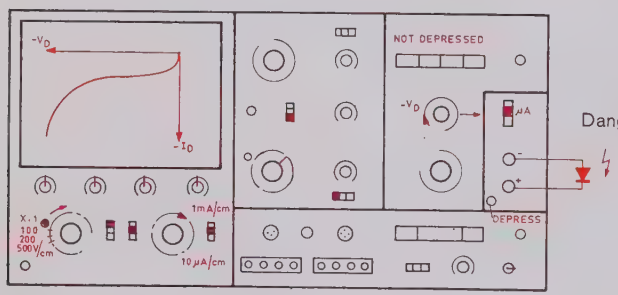

Danger

Diode breakdown voltage
Measuring range 10 μA - 1 mA

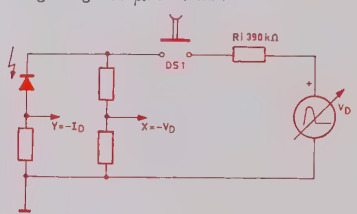

Fig. 42

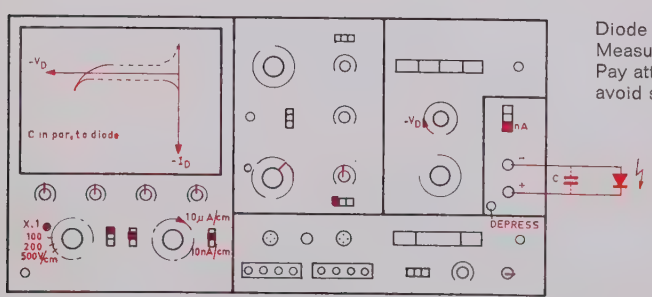

Diode breakdown voltage
Measuring range 10 nA - 10 μA
Pay attention to screening to
avoid stray capacitance C

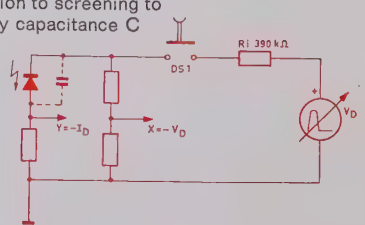

With adapter PM 6546
no influence of C

Fig. 43

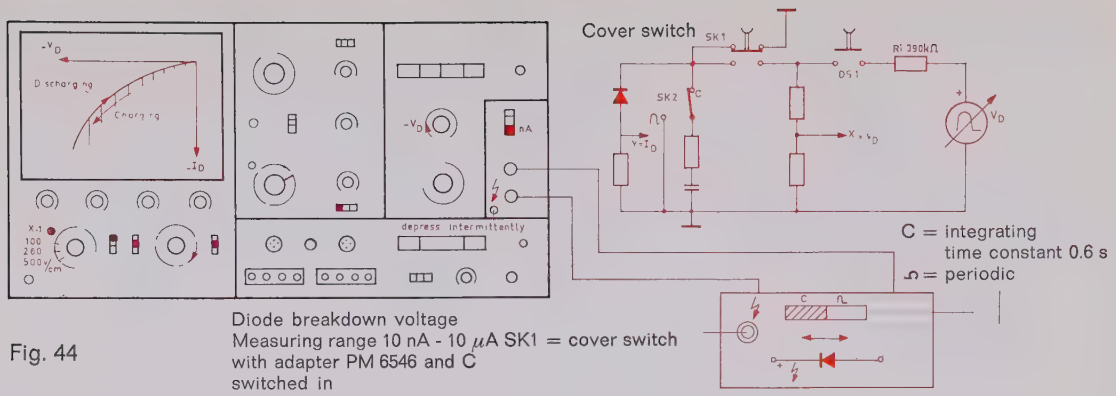

Fig. 44

Diode breakdown voltage
Measuring range 10 nA - 10 μA SK1 = cover switch
with adapter PM 6546 and C
switched in

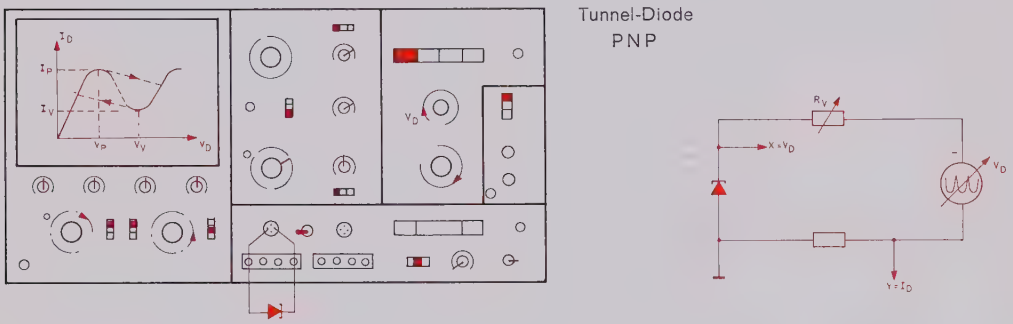

Fig. 45

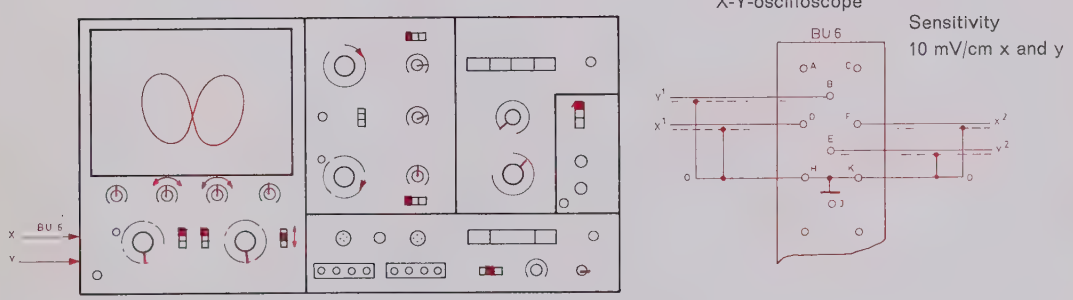

Fig. 46

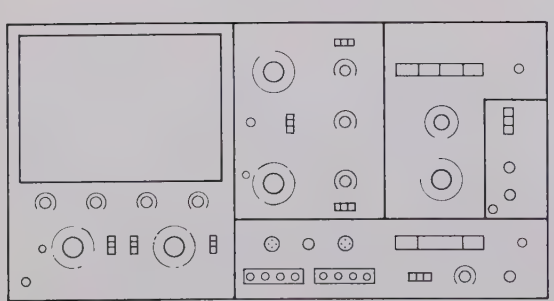

Fig. 47. Various measurements with the curve tracer

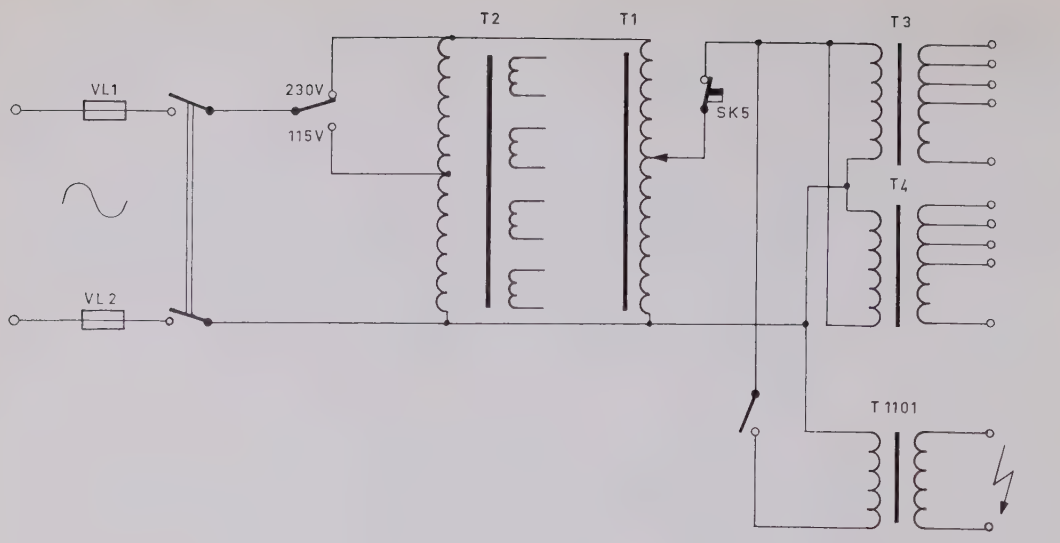

Fig. 48. Supply part

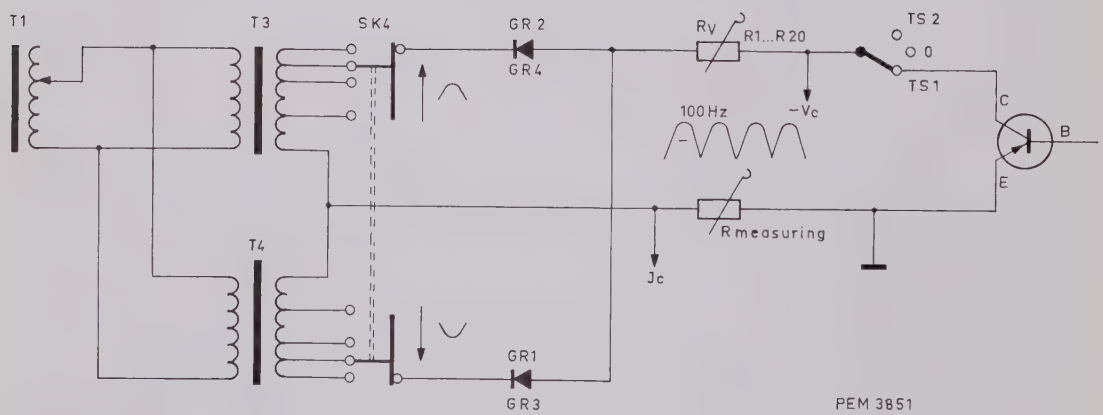

Fig. 49. Collector-voltage source

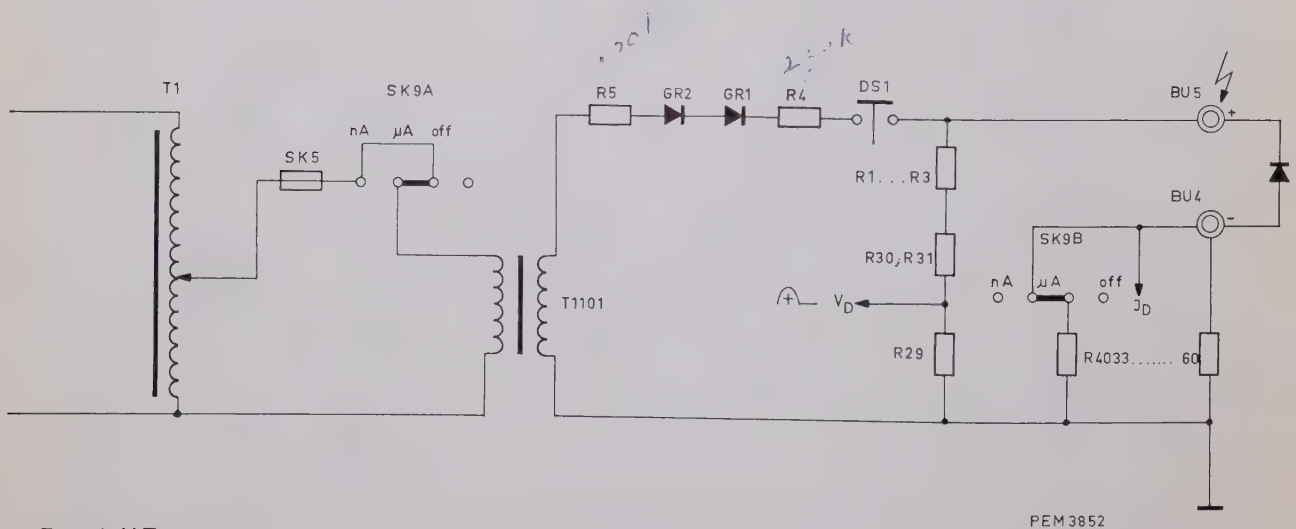

Fig. 50. H.T. source

SERVICE DATA

VIII. Circuit description

NOTE: The hundreds of the electrical-component numbers refer to the unit to which these components belong. E.g. GR714 means GR14 of unit 7.

A. SUPPLY SECTION

1. Mains supply

The PM 6507 is supplied via a mains transformer and a variable transformer. At mains voltages of 230 V ± 15 % autotransformer T1 is connected in parallel to the primary of mains transformer T2. When the voltage adapter is set at 115 V transformer T1, which can only opegrate at 230 V, is supplied via the primary of T2 (Fig. 48).
Variable transformer T1 serves for continuous adjustment of the collector voltage which is delivered by the two transformers T3 and T4.
T1 moreover serves for continuous adjustment of the high tension on the transformer T1101. Mains transformer T2 has four isolated windings on the secondary side which deliver the voltages for the (partially stabilised) direct voltage sources as well as the trigger voltages for the step generator.

2. Collector voltage supply

The two symmetrical transformers T3 and T4 supply 4 alternating voltages which are shifted 180° in phase with respect to each other. The voltage ranges are selected by means of the push-buttons of SK4. Two pairs of diodes (GR3 and GR4 for the 10-V, 50-V and 100-V ranges and GR1 and GR2 for the 500-V range) supply a pulsating direct voltage of 100 Hz. Via the current limiting resistors RV and measuring resistor R this voltage is applied to the collector-emitter junction of the semi-conductor under test (Fig. 49). Fine adjustment of the collector voltage is effected with variable transformer T1. This enables continuous adjustment from 0 to maximum in each voltage range. The values on the scale of variable transformer T1 and the voltage ranges of the push-buttons are the approximate maximum values. The pulsating direct voltage should not be smoothed, in order to obtain complete curve display.

3. H.T. supply

For measuring the breakdown voltage or leakage current of diodes, transistors and high-ohmic resistors a 3-kV H.T. supply has been provided. The basic circuit diagram of this voltage source is shown in Fig. 50. H.T. transformer T1101 is supplied via variable transformer T1. As a result of this the voltage can be adjusted continuously from 0 to 3 kV. Diodes GR1 and GR2 serve for rectification so that a half-wave voltage of positive polarity is available on socket BU5 when button DS1 is depressed. A functional diagram of the measuring circuit is given in Fig. 60. On the positive side the voltage is divided into three measuring ranges of 100, 200 and 500 V/cm by SK13/II and resistors R329 . . . 31 and R1101 . . . 3. The output voltage of SK13/II is applied to the horizontal amplifier.
In case of a leakage current measurement measuring range µA or nA is selected with SK9. The individual ranges are divided accordingly by means of switch SK16II+IV, and SK16/V+VI. Diodes GR421 and GR422 serve for protection against excess voltage in the mA ranges and GR1301 in the nA ranges. R1304 serves for 0 adjustment (nA ranges!).
Caution! High tension.
When using the H.T. source do not touch the semiconductor under test!

4. Direct voltage source +31.5/+30/0/–30 V, U7

Transformer winding 9-10-11 of T2 supplies the alternating voltage to rectifier GR702 which delivers two equal voltages. Smoothing is effected in the first by means of C711 and C721.
Apart from the additional output voltage of 31.5 V the stabilising circuits of these two voltages are practically identical. Therefore the circuit description may be restricted to the +30 V output voltage.
Zener diode GR714 is the reference source and in combination with R712 determines the voltage at the base of TS706. This transistor together with TS705 forms a difference amplifier and R710 and R711 are the load resistors. Common emitter resistor R709 together with R710 and R711 determines the setting for these two transistors. The output voltage is present across resistors R706 and R707/708. The base of TS705 then practically has the same level as the base of TS706. TS704 is driven by the voltage difference which arises in the difference amplifier as an output voltage variation. As a result of this the collector-emitter current of TS704 will vary and thus the voltage on the base of TS702. Transistors TS702 and TS701 form a cascade circuit: TS701 assumes such a setting that the output voltage corresponds to the nominal value but for the regulating voltage difference.

Regulation:

In case of a load increase the output voltage will slightly decrease. The voltage on the base of TS706 will remain practically constant due to the stabilising action of the zener diode. The voltage on the base of TS705 however, decreases so that the collector-emitter current of this transistor is reduced. The voltage on the base of TS704 will consequently become more positive and a larger base current starts flowing and consequently a higher collector emitter current. The base of TS702 now becomes more negative and a larger collector-emitter current flows, so that the base-emitter voltage of TS701 will increase. The internal resistance of the collector-emitter junction of TS701 will now decrease and a larger current will flow through the output circuit so that the voltage will in-

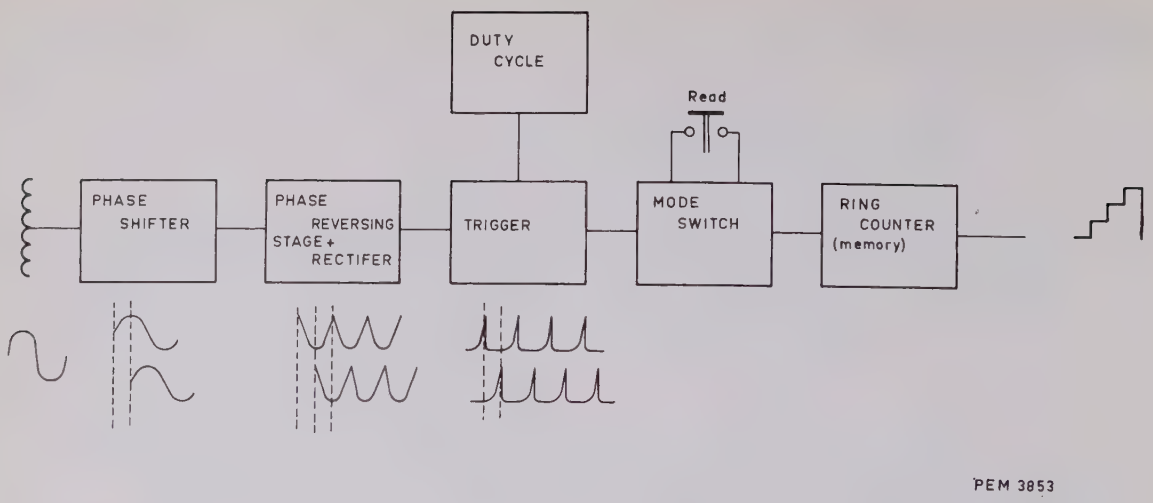

Fig. 51. Step-voltage generator

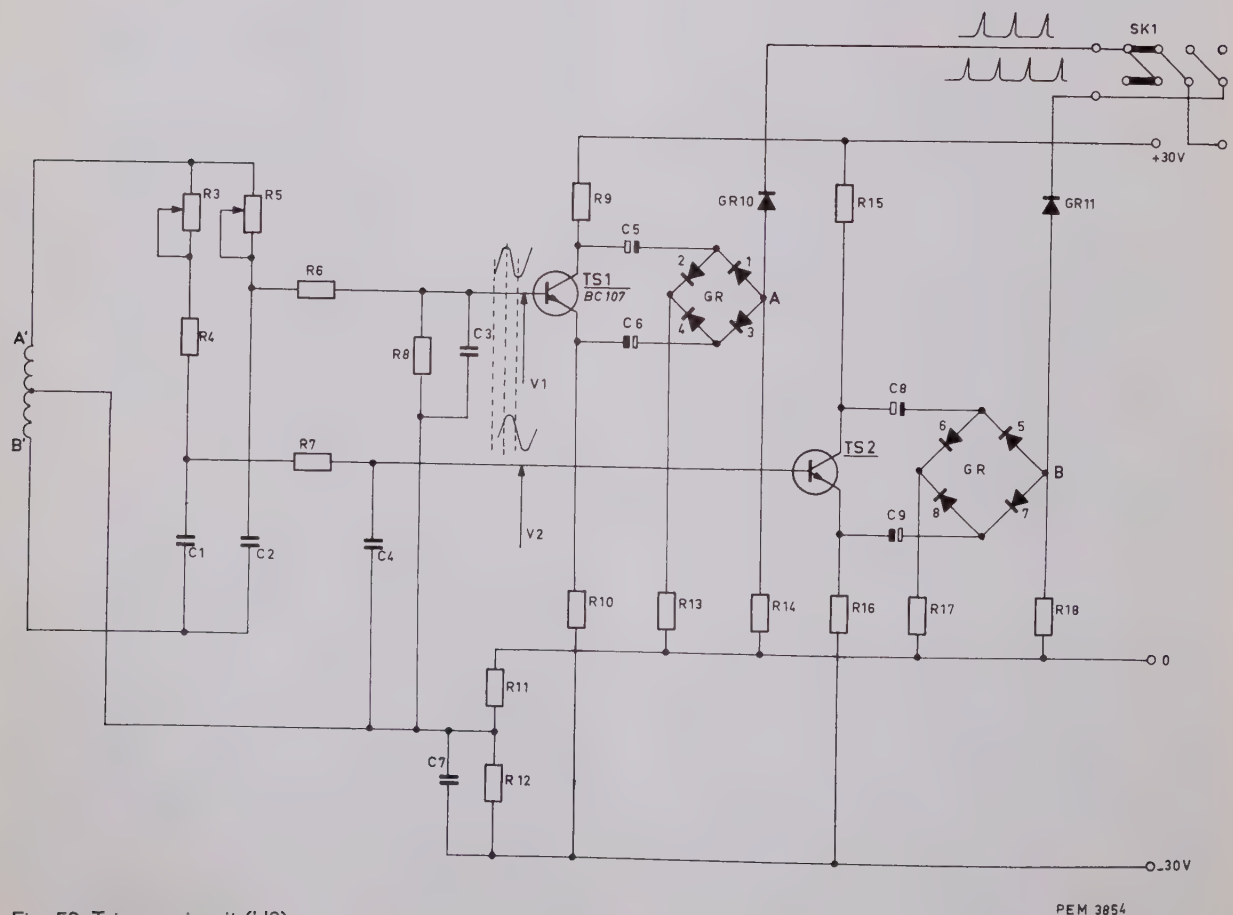

Fig. 52. Trigger circuit (U9)

crease until the regulating process is stable. The additional 1.5 V voltage is derived from the voltage of TS701 by means of diodes GR712 and GR713 which, in combination with R703, form a voltage divider. Thus a voltage of approximately 1.5 V is obtained on the diodes.
Current limiting:
If the stabilised voltage source is overloaded a larger voltage drop will arise across R701. As soon as this voltage drop is larger than the V_{BE} of TS703 $+V_D$ of GR711, transistor TS703 will become conductive and will consume the base current of TS702. Thus current limitation is obtained.

B. STEP GENERATOR

The basic construction of the step generator appears from the diagram given in Fig. 51: Phase shifter, rectifier + amplifier stage, trigger stage, duty cycle circuit, mode selector, ring counter.
The output signal is a step voltage the number of steps, step width and frequency of which can be adjusted by means of the relevant controls.

1. Phase shifter, amplifier and rectifier, pulse shaper (Fig. 52)

The phase shifting elements, R903/4 and C901 as well as R905 and C902 are connected to winding 15-17 (A' and B').
The voltages V1 and V2 which are adjustable in phase can be adjusted by means of R903 and R905, and are smoothed by means of filter R907/C904 and R906/C903. Phase-inverter transistors TS901 and TS902 have collector voltages which are 180° shifted in phase.
The two diodes GR901/903 and GR905/907 serve for full-wave rectification of the voltage. Charging of capacitors C905/6, 8/9 is prevented by diodes GR902/904 and GR906/908 respectively. The half-wave voltages on points A and B are shifted 90° in phase with respect to each other. The bases of TS901 and TS902 are connected to minus potential via a voltage divider consisting of R911 and R912. As a result of this the lower peaks of the half-wave voltage drop below the circuit zero level. On account of this, short trigger pulses are obtained across diodes GR910 and GR911. These pulses can be selected by means of SK1 and drive the trigger generator (see Fig. 103).
Transistors TS903, 904 and 905 form a pulse shaper which converts the pulses from GR910 and GR911 into an amplified trigger signal of a well-designed shape. The pulses applied to the base of TS904 cause an increase of the collector-emitter current. As a result of this the base of TS903 becomes more negative and so does the emitter and consequently the base of TS905. The collector-emitter current of TS905 increases so that its collector and consequently the base of TS904 will become more negative. This takes place very fast due to the positive feedback so that TS905 discharges capacitor C910. As a result of this a positive voltage surge arises on R927. Because R926 cannot supply such a large current, the collector of TS905 becomes more negative again and blocks the base of TS904.
As a result of this the circuit is reset to its rest condition until the next half-cycle of the switching process is started. Via C913 and trigger mode switch SK7 the output pulse is applied to the ring counter and via C911 to the duty cycle control circuit.

2. Duty cycle

By means of the duty cycle controls (R901 and SK8) the duty cycle of the step signal can be varied from 2.5 . . . 60 % or 100 %.
The duty cycle switch basically consists of a bistable multivibrator with transistors TS906 and TS907 which are coupled by means of RC element R901 and C914/15. From C911 positive trigger pulses are applied to the base of TS907 via GR919. This transistor passes this pulse and discharges capacitors C914/15 via R935, GR918 and the collector-emitter junction of TS907.
Via R901, R932 and R933, capacitors C914/915 are re-charged and as soon as the voltage on the base of TS906 becomes positive, the flip-flop is reset to its initial position.
Adjustment of the lower scale value of 2.5 % is effected by means of R933 and for 60 % by means of R932 of the RC circuit. In position 100 % SK8 short circuits the base so that only TS907 will be conductive. Diodes GR916 and 917 together with the appertaining voltage divider, supply a biasing voltage for the base potential of TS906. GR919 and 920 form a diode input for positive pulses which drive the base of TS907. GR920 prevents C911 from being charged.
The output pulses of the duty cycle switch drive the base of TS908 via R940/C919. This transistor operates as a switch and short circuits the step signal outside the duty cycle switching phase.

3. Ring counter

For the display of a certain number of curves (2 . . . 8) a step signal is required, whose step difference determines the distance from one curve to another. For this, two requirements should be met, viz.:
stepwise switching until the number of pre-selected steps is obtained as well as the inclusion of resistance dividers which define the step voltages. These two processes are performed by the ring counter.
Each stage namely has a division ratio which has a certain value. This value determines the step voltage, which is different for each stage.
The basic circuit diagram of the ring counter is shown in Fig. 53, in which all switches are open. During operation only one of the switches is closed, so that the voltage divider circuit shown in Fig. 54 is obtained.
The step generator can operate in 3 different modes, viz.:

a. Permanent display of recurrent characteristics (REP. FAM).
b. Display of characteristics which are non-recurrent (SINGLE FAM.)
c. Permanent display of a single curve with manual stepping (ONE CURVE).

These three modes are obtained by driving the ring counter accordingly (Fig. 55a, b, c).

a. In switching mode REP. FAM. (Fig. 55a) the ring counter is driven directly by the trigger pulses from the pulse generator. Via C913 and switch SK7 a positive pulse is applied to the base of TS911. This

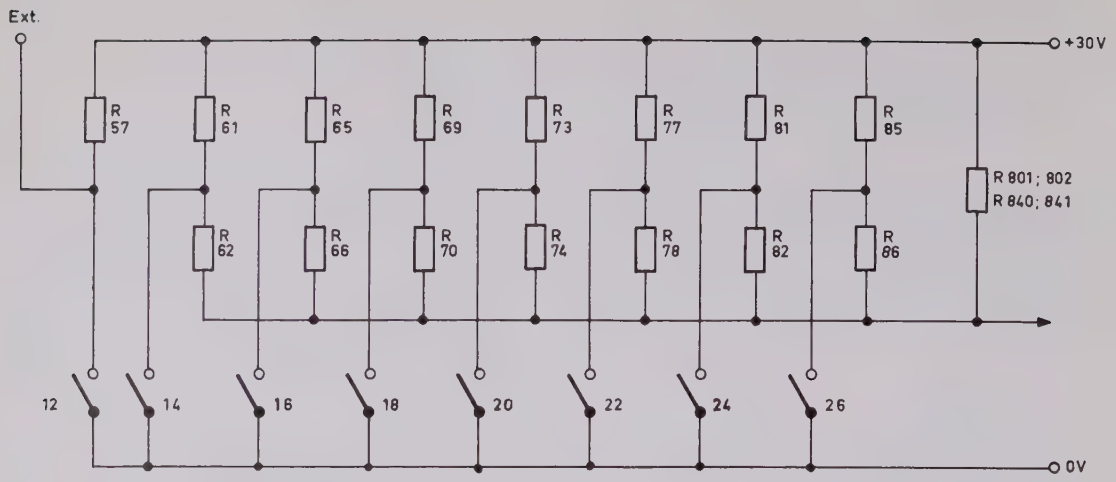

Fig. 53. Principle of the ring counter

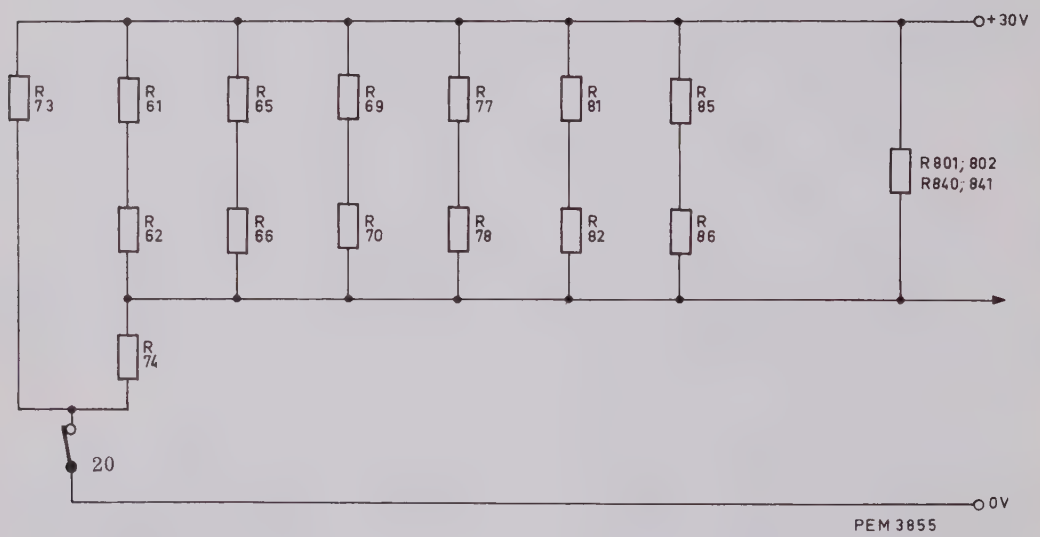

Fig. 54. Voltage-divider circuit

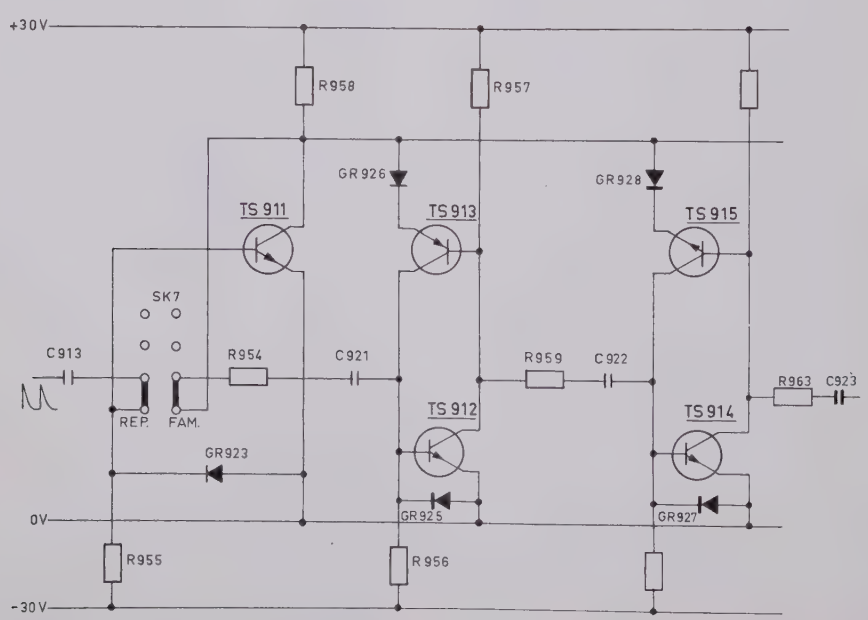

Fig. 55a. Switch position REP FAM

transistor becomes conductive and its collector voltage drops to practically zero. Capacitor C921 is now connected to approximately 0 V. After the pulse, TS911 is turned off again and via R958, R954 and C921 a current will flow through the base of TS912. This transistor changes over. As soon as the collector-emitter junction is conductive the base of TS913 becomes more negative and this transistor is also turned on.
Due to negative feedback from TS912 to TS913 and vice versa, this circuit will remain in the on-state until the emitter of TS913 becomes more negative than its base (this effect also occurs with thyristors (SCR) and silicon controlled switches (SCS).
After the following pulse TS911 is turned on again and connects the collector potential to zero. TS913 and TS912 were conductive up to now and all the other transistors in the ring counter were blocked. Since the emitter of TS913 is connected to zero potential via diode GR926 memory TS912/913 will be released. During this switching process a current surge arises, which reaches the base of TS914 via R959 and C922. TS914 and TS915 change over and remain on until the next pulse.

In this way a further switching stage is connected in the ring counter after each pulse, till the number of stages selected with SK3 is attained. The relevant switch position of SK3 connects the output pulse to zero potential so that the pulse cannot switch on any more stages. The switching process then starts again with the first stage and in this way continuous switching from the first up to the selected number of stages is obtained.

b. In case of trigger mode "SINGLE FAM." the circuit is as shown in Fig. 55b.
The input pulses change over TS911, but the first ring counter stage does not receive a transfer pulse. Only when SK6 is depressed the base of TS912 receives a positive pulse so that stage TS912/ TS913 changes over. Switching of the following stages is effected automatically until the last stage is reached and the switching process is completed. A new switching process cannot be started until button SK6 is depressed. In this way the process takes place only once when the button is depressed. Switching from one stage to another is further described in section a.

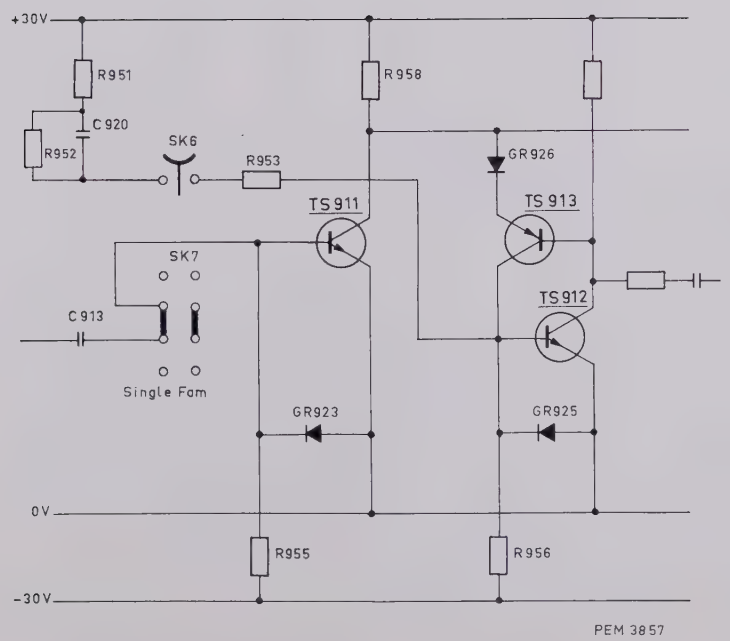

Fig. 55b. Switch position SINGLE FAM

c. In switch position "ONE CURVE" (Fig. 55c) switching-over of the ring counter is effected manually by means of button SK6. The input pulses are disconnected, so that triggering by the pulse generator is not possible.
When button SK6 is depressed a positive current surge arises across R951/C920, which changes over TS911. After C920 has been charged the pulse disappears, TS911 is turned off and drives TS912 into conduction via R954 and C921 and, via the feedback circuit, also TS913. Stage 1 retains this condition until the next pulse is applied. TS911 is turned on again by a new pulse, while TS912 and TS913 are already conductive. The memory of the PNP-NPN combination is released and via R959/C922 a new memory element becomes operative.

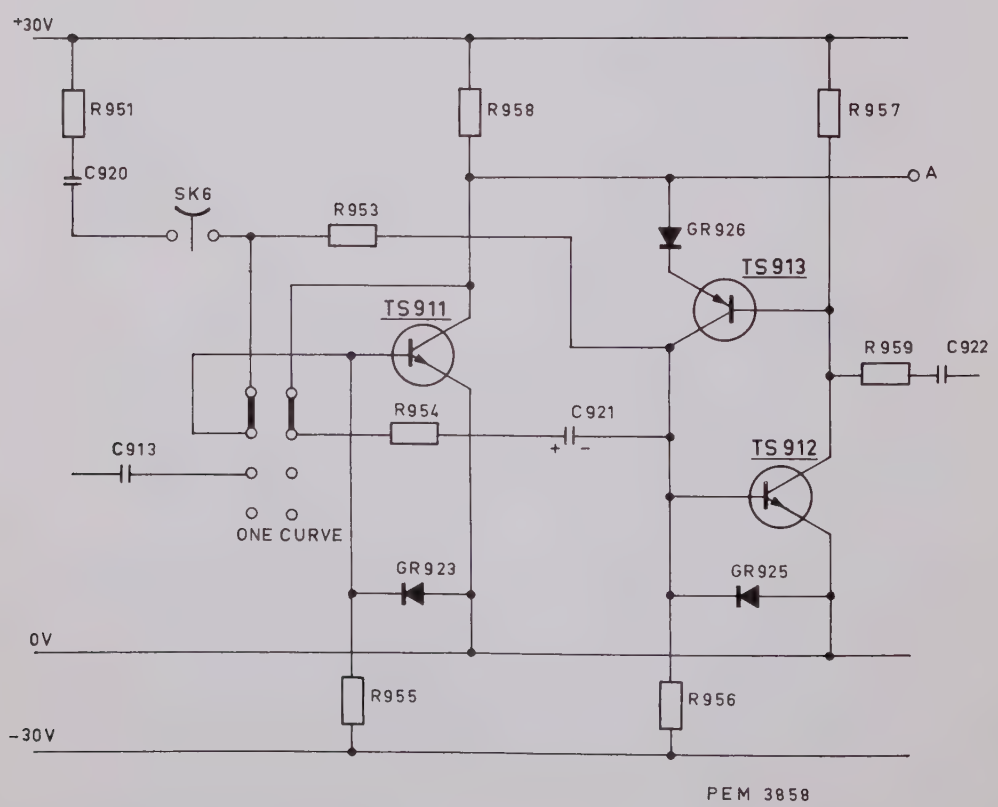

Fig. 55c. Switch position ONE CURVE

4. Amplifier (Fig. 56)

The output signal of the step generator is present on the base of TS801. This transistor operates as an impedance transformer which converts the step voltage into a constant step current of 100 μA per stage. Because the step signal — dependent on the function to be displayed — should be inverted, it is connected direct to the base of TS804 by means of a relay (RE801), or to the base of TS802. This transistor forms an inverter stage for the step signal which is then again applied to the difference amplifier. Moreover, the base potential of TS804 can be shifted within a certain range so that zero adjustment of the step signal is possible by means of control "ZERO". The base current of TS803 is varied by means of potentiometer R902. The collector of this transistor is connected to the base of TS804, so that the bias current at the input of the difference amplifier is thus determined.

The differential circuit with transistors TS804 and TS805 compares the step voltage across R810/R811 and R828 with the voltage on step switch R607 . . . 623 in the output circuit. The constant step voltage on TS804, which can be adjusted with R811, serves as a reference. In case of a difference TS805, which receives the drive signal via an impedance transformer, drives the power amplifier so that the voltage is corrected in voltage divider R607 . . . 623 until the difference is eliminated. The step current adjusted with SK10 always remains constant independent of the resistance in the base circuit.

When the transistor under test is not current but voltage-driven (with a constant voltage from step to step), voltage division is effected by the 200-mA current stage. The power amplifier in this case operates in the same way as with a constant current of 200 mA, whereby this current flows through R623 (Fig. 57). Series resistors R601 . . . 606 are included with SK10 II+I.

The current from the 200-mA stage then causes a voltage drop across these resistors. In this way 6 voltage ranges are obtained for a step signal which can be selected by means of SK10.

In case of voltage drive, series resistors R501 . . . R523 should be selected so that the voltage-drive characteristic is not lost. At high resistance values this property may be employed for current drive (e.g. 0.1 mV/step 1 MΩ = 0.1 μA/step). In switch position 0 resistors R501 . . . R523 can also be switched in so that characteristics can be displayed with resistance termination of the base circuit (I_{CER}).

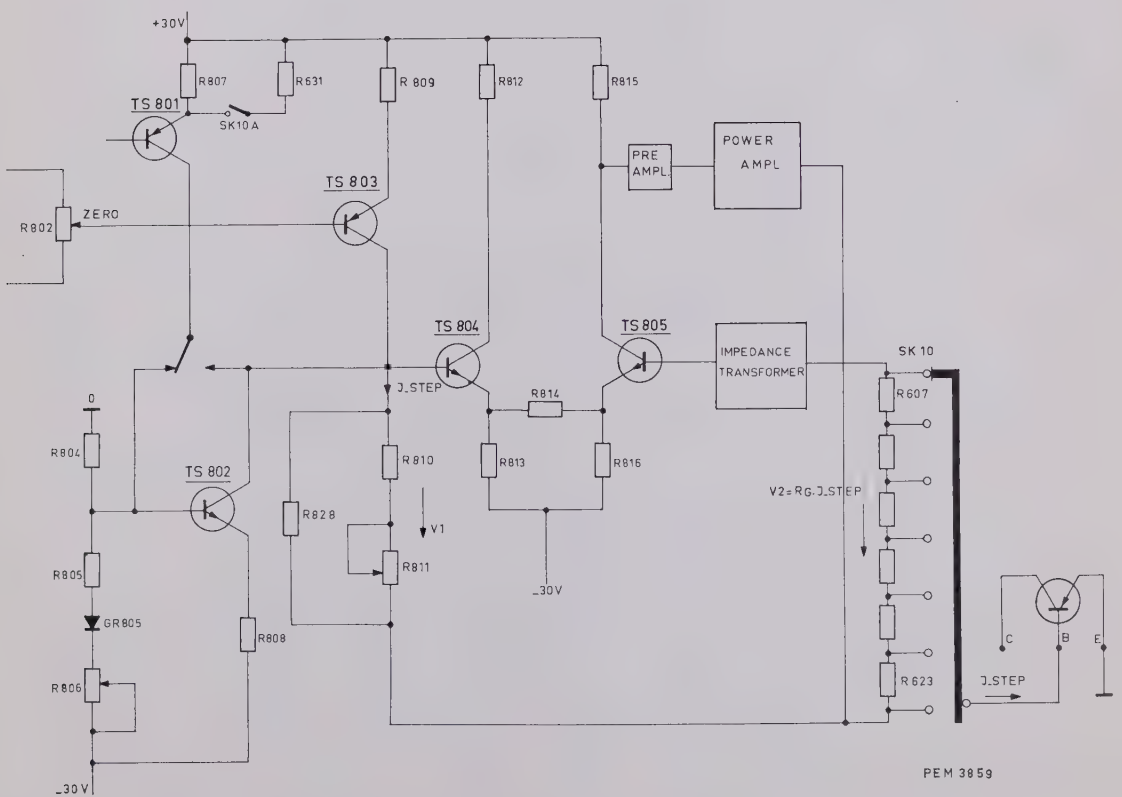

Fig. 56. Amplifier

5. Power amplifier

As appears from the description under point 4, the current or voltage value of the step signal is determined by a difference amplifier. This difference amplifier supplies the control signal for the power amplifier. The latter consists of pre-amplifier TS806, emitter-follower TS807 and the final stage with TS808... TS811. TS808 and TS809 serve as a driver stage for the final stage with TS810 and TS811 which is a class AB push-pull output stage. Diodes GR801 and 802 provide the potential difference by which the d.c. setting of the output stage is determined. The output stage is supplied by a separate voltage source of +18 V/0/−18 V which is delivered by full-wave rectifier GR1 and smoothed by C703 and C704.

C. DISPLAY SECTION

The display section serves for displaying the current and voltage relations in the transistor under test. By means of 2 mode and range switches, SK13 and SK16, it is possible to select the horizontal and vertical deflection coefficients for displaying the characteristics and selecting the display method.
The switches enable selection of various modes and moreover a position "EXT" has been provided for connection of an external signal.

Horizontal deflection (SK 13):
The horizontal deflection determines the collector voltage in 15 ranges. The 3 upper ranges (100, 200 and 500 V/cm) serve for measuring breakdown voltages (H.T. source). These three voltage ranges can be reduced by a factor 10 with push-button x.1 (SK 13A); when this button is depressed, parallel resistor R385 is disconnected (Fig. 60). Switch position "⌐⌐" serves for displaying the step signal whereby the range value selected with SK10 should be employed for reading the signal amplitude. For displaying the base voltage, e.g. as a function of I_B, 4 ranges are available from 10 ... 100 mV/cm.
External connection: 10 mV/cm, 1 MΩ.
Vertical deflection (SK16):

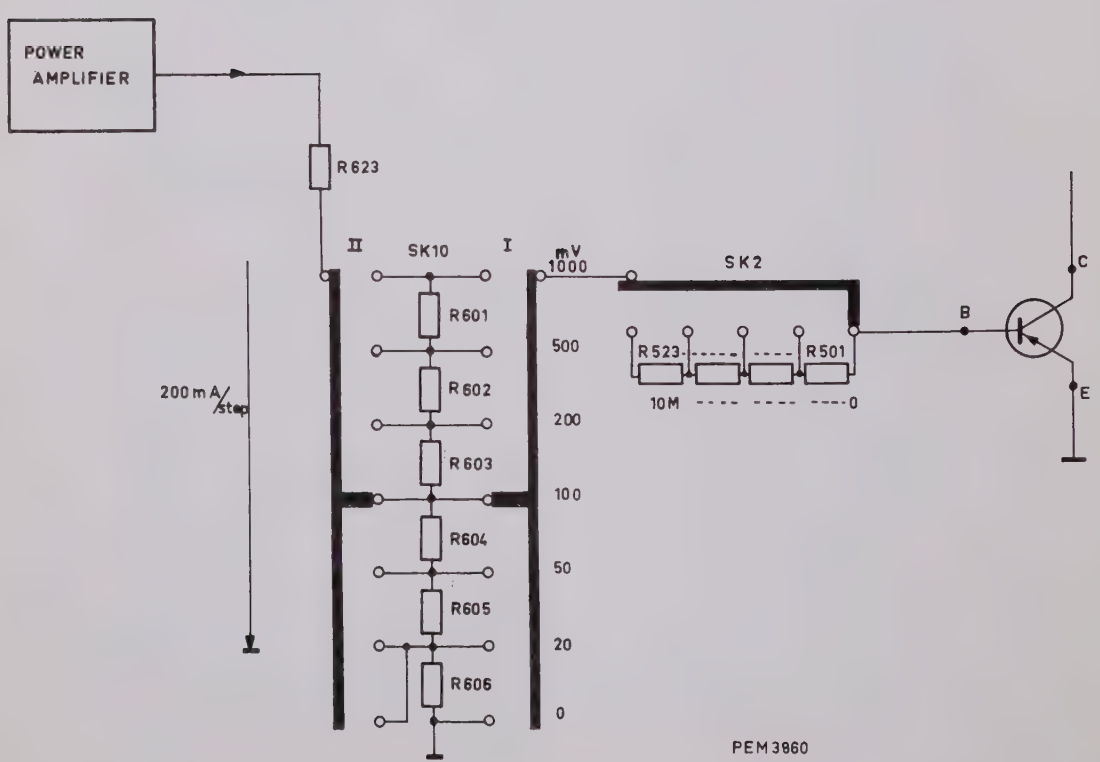

Fig. 57. Voltage drive

The vertical deflection operates in the same way as the horizontal deflection (SK13) and serves for range selection of the collector current. From 10 μA to 5 A/cm the collector current can be sub-divided into 18 ranges. Moreover, it can be extended x0.5 and x5 in downward and upward direction.
The sensitivity of the 10 lowest ranges can moreover be increased by a factor 1000, so that the indications become nA/cm instead of μA/cm. This sensitivity is only employed for leakage current measurements; changing over takes place by means of slide switch SK9. Switch position " ⌐¬ " has the same function as with SK13, and the same applies to the base voltage and position "EXT". In this way different display methods are possible by means of SK14 and SK15.

1. Circuit for I_C and V_{CE} measurements

The measuring circuit for displaying I_C/V_{CE} curves (as a function of the base current or voltage) is based on the diagram shown in Fig. 58. The collector-emitter voltage applied to the transistor under test is determined by SK13 and applied to the c.r.t. via the horizontal amplifier. The measuring ranges can be selected by means of the voltage divider consisting of R332 . . . R344, and the corresponding step voltage is applied to one input of difference amplifier X.

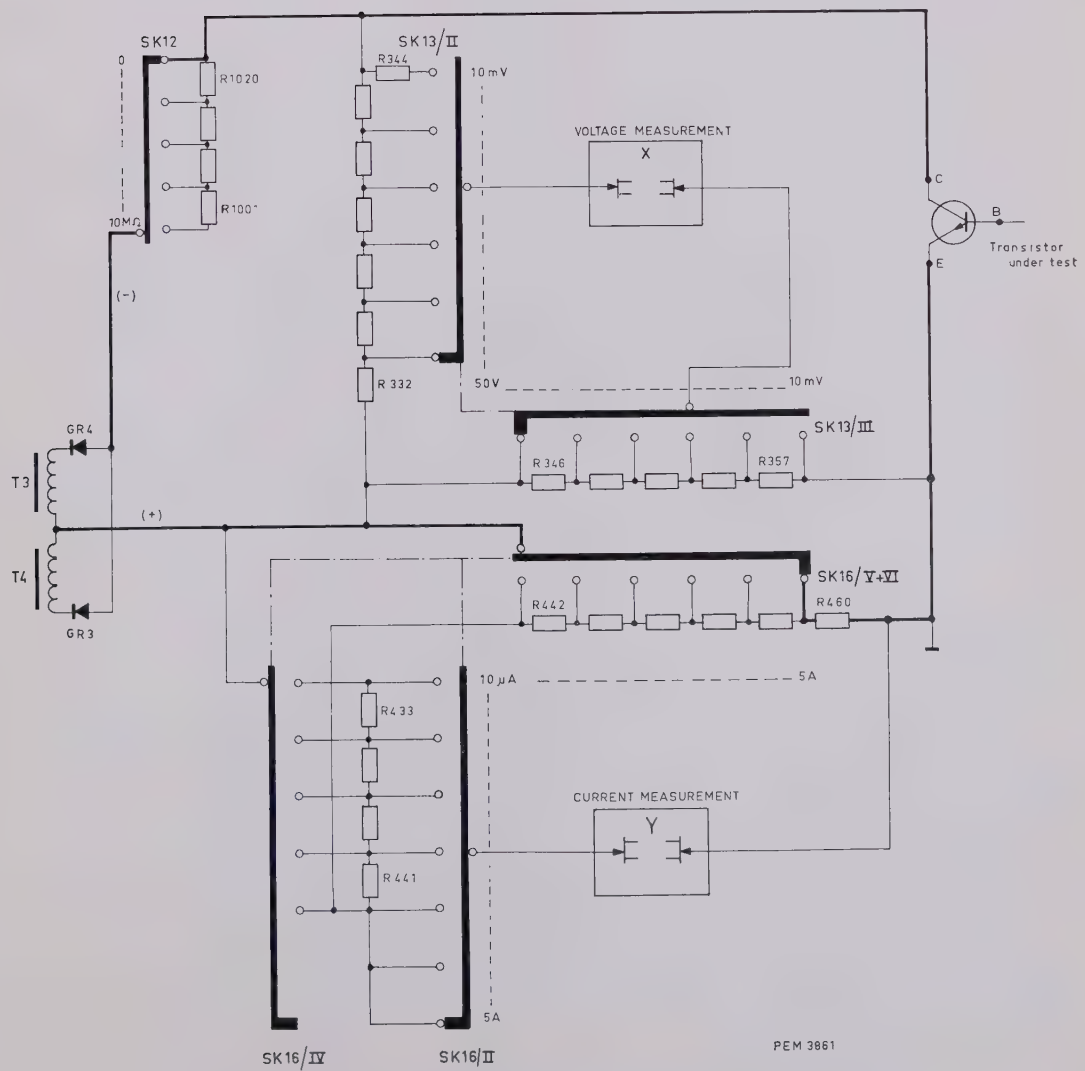

Fig. 58. Collector-current circuit

The other side of the difference amplifier is connected to attenuator R346 . . . R357 which is also operated by means of SK13. The combination of SK13/II and SK13/III enables accurate determination of the actual voltage present on the transistor by determining the loads presented by the resistors of SK13/II. Measurement of the current flowing through the transistor is effected by means of range switch SK16/V+VI and the corresponding voltage divider. Resistors R442 . . R460 are the measuring resistors for the current stages. The step attenuator coupled with SK16/V+VI (III+IV) is only switched in for the "nA" ranges. The voltage drop across shunt resistors R442 . . . R460 is applied to difference amplifier Y via SK16/II or IV, one input of which is connected to the measuring potential and the other to earth U4/C5.

2. Circuit for V_{BE} measurements

For curve display, with V_{BE} signal in the horizontal or vertical direction, e.g. $I_C = f(V_{BE})$ or $V_{BE} = f(V_{CB})$, the measurement is based on the principle shown in the diagram of Fig. 59. The difference amplifiers for horizontal or vertical deflection are connected to the base-emitter circuit of the semi-conductor. The step signal from SK10 is determined by this amplifier and applied to the relevant attenuator. The desired display range can be selected by means of switch SK13/I or SK16/I.

The corresponding voltage component then drives the output amplifier. The collector-emitter circuit is supplied by the half-wave voltage obtained from T3 + T4 and GR1 . . . 4.

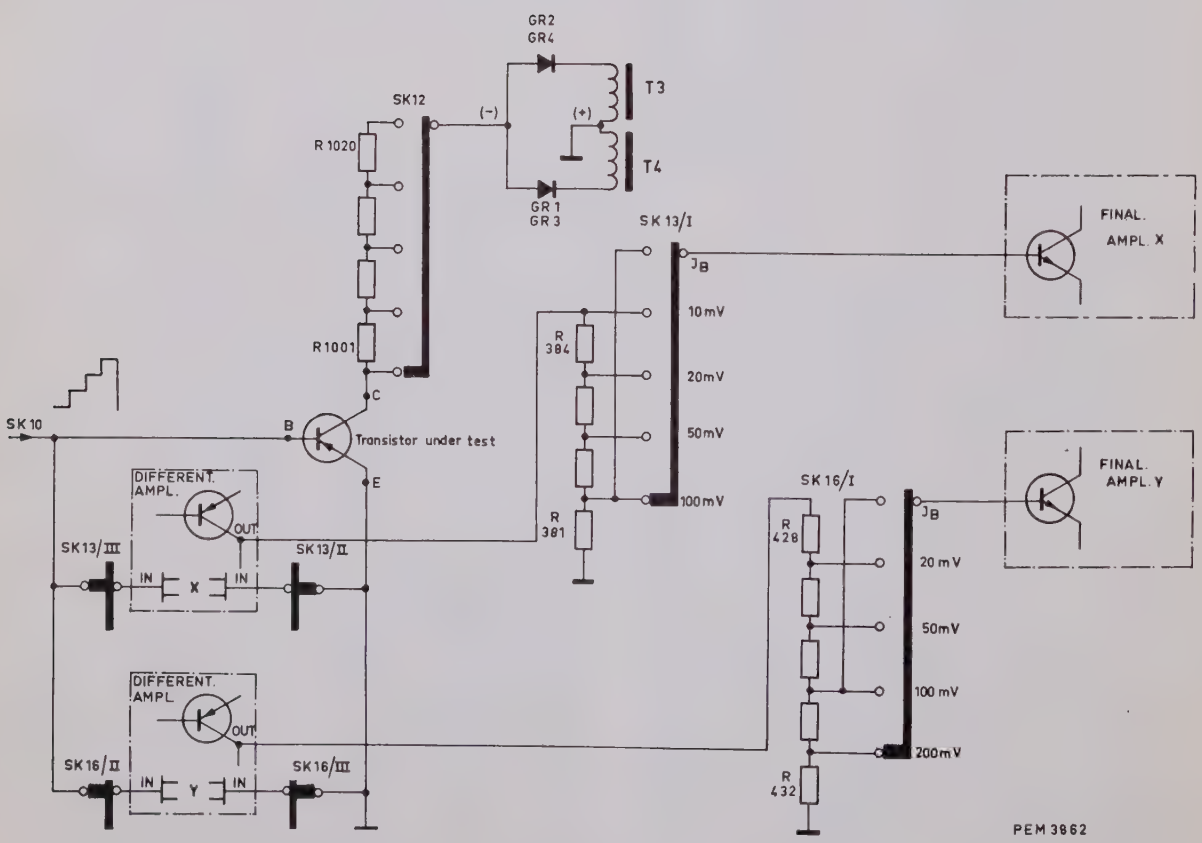

Fig. 59. Measuring circuit for V_{BE} measurement

3. Circuit for breakdown voltage and leakage current measurements (Fig. 60)

Fos testing 2-pole semi-conductors as regards breakdown voltage or leakage current, a half-wave voltage is generated by means of continuously variable transformer T1, H.T. transformer T1101 and GR1101 and 1102.

This voltage is applied to socket BU5 via switch contact DS1.

Voltage measurement is effected by means of the voltage divider consisting of resistors R1101 . . . 1103 and R329 . . . 331. By means of switch SK13/II one of the three voltage stages is applied to the horizontal amplifier.

Via socket BU4 the current through the semi-conductor is determined. This measuring circuit is connected to earth via step switch SK16/IV, II, R433 . . . R441 and R442 . . . R450.
The voltage arising across the resistance selected with range switch SK16 is applied to the input of the vertical amplifier and thus to the vertical deflection of the c.r.t.
Slide switch SK9 for switching on the h.t. generator, moreover serves for changing over from μA to nA ranges. In position "μA" of SK9 resistors R442 . . . R450 are included, and in position "nA" R433 . . . R441 are moreover included in series with R442 . . . R450. Dependent on the selected range a voltage drop will arise across the included resistors which is proportional to the leakage current flowing through the semi-conductor under test.

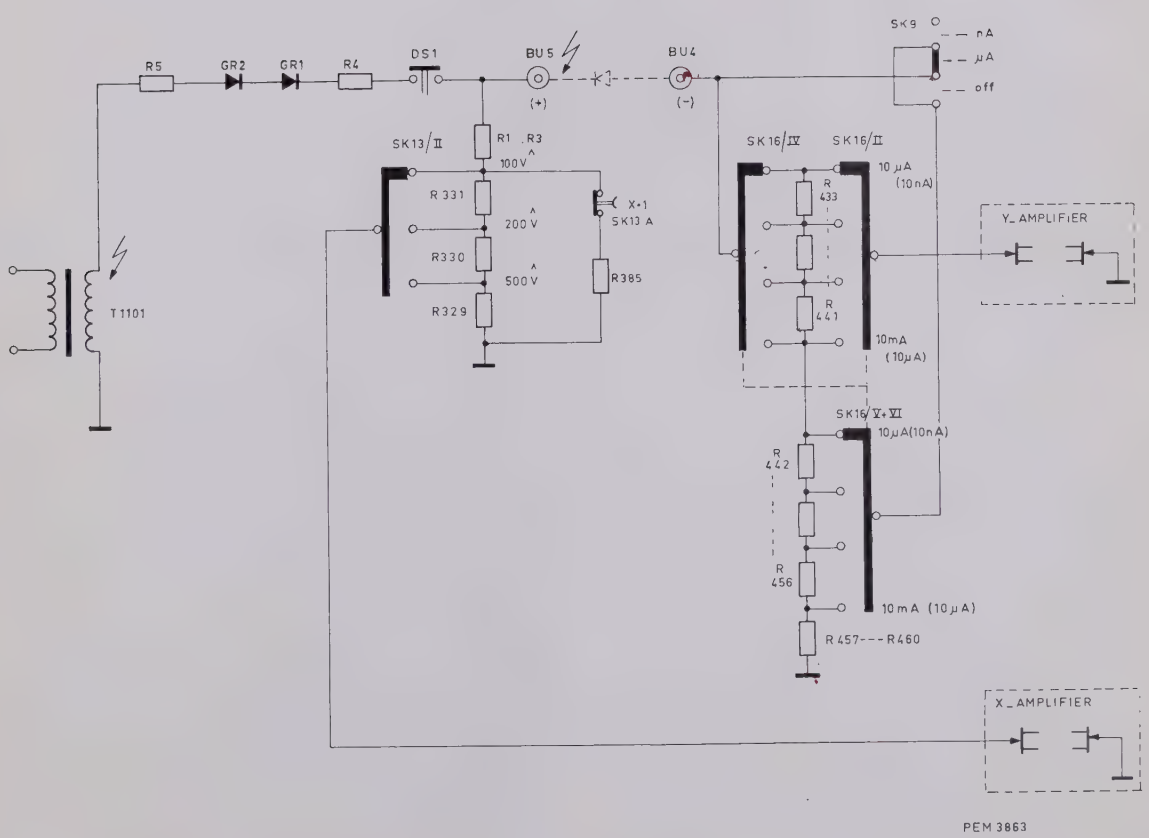

Fig. 60. Measuring circuit for breakdown-voltage and leakage-current measurements

4. Difference amplifier for X and Y deflection

The preset drive signal is amplified or changed by the semi-conductor under test. This signal is applied to the X and Y amplifiers dependent on the selected mode and range, which apply proportional voltages to the horizontal and vertical deflection units of the c.r.t. These output signals are determined and amplified by 2 independent difference amplifiers. The following description applies to the X amplifier which functions identically to the Y amplifier.
The input stage consists of two field-effect transistors which operate as impedance transformer and amplifier. The input signal is applied to the first gate and the second gate serves for adjusting the d.c. balance with R303 or R319. The working points of these transistors are automatically adjusted by means of TS303 and TS304 which are controlled by the constant voltage drop on zener diodes GR4 and 5 in case of a varying drain current.
The output signal on the drain connection of TS301 and TS306 drives the following difference stage which consists of TS302 and TS305.
The control voltage for TS304 is derived from their emitter currents and TS304 in turn serves as current source for TS301 and TS306.
The output signal of the difference amplifier drives TS307.
The amplified drive signal is present on the collector of the latter and is applied to the output amplifier via range selector SK13. It moreover closes the negative feedback circuit via R22, R17, R10, R4.
Adjustment as parallel circuit to R310 and R317 is effected with R311 in series with R318. On unit U3A the +50 mV calibration voltage is derived from the +30 V by means of a voltage divider. The voltage divider consists of resistors R370 . . . 372 which is adjusted by means of R373. Contrary to the X amplifier the Y amplifier has three gain factors which are obtained by changing the negative feedback circuit. These three stages can be selected by means of SK17 and extend the measuring ranges (with respect to 1) 0.5 and 5 in both directions. In position x1 resistors R407, R411 and R418 are included, in position x5 all resistors are switched out, and in position x5 only R411 and R18 are switched in.

5. Output amplifiers X and Y deflection

The output signals from the difference amplifiers drive the relevant output amplifiers via range selectors SK13 and SK16. These amplifiers consist of an input stage, a differential circuit and a two-stage push-pull output stage (Fig. 61). The negative feedback voltage from the differential amplifier is taken from a resistor which is connected in series with the deflection coil. The current is determined by means of this resistor. The input signal consequently causes an output current through the deflection coil, which is exactly proportional to the input signal. Diodes GR103/104 form a voltage threshold, which determines the working points of TS105 and 106, together with R121 + R122. R108 serves for balancing the working points of the limiter diodes GR101 and 102 and RC element R110/C102 increases the stability of the output amplifier.
Potentiometer R157 in the Y output amplifier and R311 in the X pre-amplifier serve for gain control.

6. Brightness control

The brightness control of the electron beam serves the following tasks:

a. At high sweep speeds the beam current intensity is increased thus ensuring uniform display of the oscilloscope trace.
b. Brightness control is also effected by means of the duty cycle generator which also increases the brightness during the written part of the cycle.

The function mentioned under point a is performed by RC elements R174/176 and C162 plus R173/175 and C163. These RC elements are frequency dependent so that at higher frequencies the beam current intensity increases with respect to the low frequencies.
Dependent on the position of the picture on the screen the deflection direction should be determined. This is effected by diodes GR161 . . . 164. In case of a bright-up TS161 inverts the phase of the voltage obtained from GR161 . . . 164. To transistor TS162 three information signals are applied: via R169 the positive cycle, via GR163/164 the negative cycle and via R161 the duty cycle. The collector of TS162 is connected to the first grid of B1. In case of a positive control voltage the beam current intensity increases, or the anode current, and at a more negative voltage the intensity is reduced.
In order to ensure that during the flyback of the step signal no or only a weak display is obtained, the duty cycle generator causes blanking of the electron beam. When TS907 is in the off state the base of TS162 is connected to a positive voltage via R945 and R161. TS162 is turned off and the first grid of B1 receives a negative potential via R163 so that the beam current of the c.r.t. is small during this period.

H.T. generator U2

The H.T. generator (U2) supplies the acceleration voltage of +4.5 kV for the c.r.t. and the +300–V focusing voltage.
Basically the generator consists of a regulated oscillator, which derives the two voltages from the two isolated secondary windings. These voltages are rectified in a doubler circuit.

Working principle:

The tuned circuit of the oscillator is formed by the inductance and stray capacitance of the coil. The collector-emitter current of switching transistor TS203 flows through windings S1 and S2 of T201. This transistor is controlled by TS201 and TS202, the control voltage for TS202 being derived from the +300–V voltage by means of a voltage divider. With R209 the base-emitter voltage is adjusted so that the focusing voltage is +300 V.
Regulation:
When the +300–V voltage decreases the base-emitter voltage of TS202 decreases and thus the collector-emitter current. The base of TS201 now becomes more positive and the collector-emitter current decreases. The base potential of TS203 is consequently shifted towards the negative side and the base-emitter voltage of this transistor increases. As a result of this the collector-emitter current of TS203 increases and thus the current through windings S1 and S2 of T201. The secondary voltage in winding S4 increases until the +300–V output voltage is attained and the stabilised condition is obtained.

IX. Disassembly

CAUTION

In this instrument high tensions of 500 Vp, 3 kVp and 4.5 kVp are generated. Therefore due care should be taken when working on a switched-on instrument.

A. CABINET

Top panel:
Loosen the two upper screws at the rear of the instrument (Fig. 3) by giving them a quarter turn. The panel can then be slid out to the rear.
Bottom panel:
Remove the corresponding screws from the bottom plate and remove the tilting bracket by pressing the ends of the bracket together.

Rear panel:
First remove the top and bottom panels, then remove the three screws on each side. Unsolder the earthing connection or unscrew the soldering tag, if the rear panel should be completely removed. Remove the 4 fixing screws; the panel can then be taken out.

B. CRT

The CRT should be replaced with due care so that undesired mechanical tensions are avoided. It should, moreover, be taken into account that the external dimensions of the CRT may vary. Therefore, when replacing the tube strictly adhere to the following instructions.
Removing the CRT:
- Remove the top, bottom and side plates as well as the rear panel.
- Pull out the tube socket and detach the EHT cable from the tube by slightly compressing the clips.

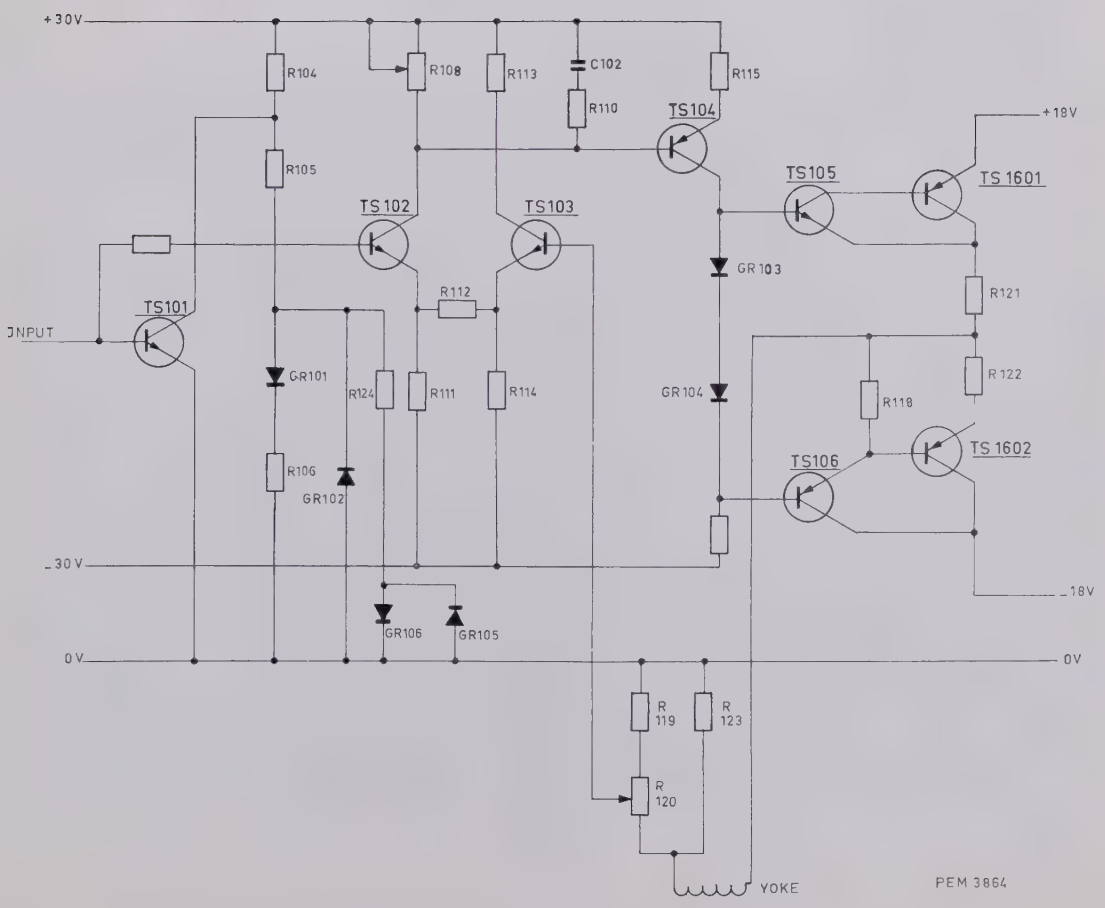

Fig. 61. X-Power amplifier

– Remove the bezel (remove the 4 knurled nuts).
– Remove the screw of the bracket at the rear of the deflection unit.
– Slightly loosen the 4 nuts on the threaded studs (on which the bezel was fitted) at the front of the instrument (do not remove them).
– Loosen screw M (Fig. 62) until the tensioning strip is loose.
– The tube can now be removed in forward direction after carefully pushing it out of the corner pieces. For fitting a new tube it is advisable to completely remove the deflection unit.

Removing the deflection unit:
– Unsolder the connection wires of the deflection coil at the relevant soldering tags.

IMPORTANT:
Before unsoldering first make a note of the wire colours to prevent interchanging.

– Remove the two fixing screws L (Fig. 62) and take out the complete holder with deflection unit.
– Remove screw K (Fig. 63).

Mounting the deflection unit on the picture tube:
– Slide the deflection unit on the tube neck in the correct position (the screw of bracket down; the correction magnets should be situated on the broad side of the tube).
– Slide the mumetal jacket about 5 mm into the deflection unit.
– Push the deflection coil on the tube, align it and slightly tighten screw K (so that the tube can still be turned in the unit).

Mounting the CRT:
– Push the tube into the cornerpieces, mind the correct position.
It should be possible to shift the 4 cornerpieces. The rubber supports should be correctly positioned.
– Fit the tensioning strip but do not yet tighten the screw.
– Slightly tighten the four nuts on the threaded studs so that the cornerpieces can still be shifted.
– Position the tube symmetrically in the front frame; the screen should be flush with the front plate.
– Tighten screw M of the tensioning strip (Fig. 62).

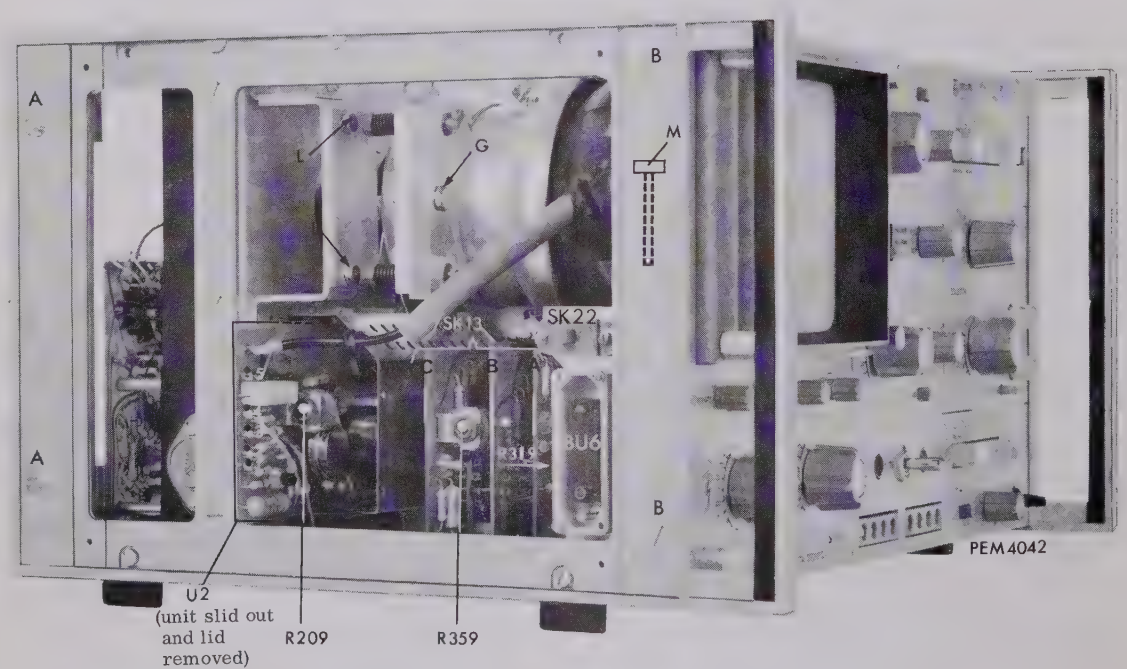

Fig. 62. Side view (left)

— Re-align the tube with respect to the front frame and completely tighten the four nuts of the threaded studs (the screen should now be exactly flush with the front plate).
— Fit the yoke holder, by means of the two screws L (Fig. 62) and make sure that the plexiglass support properly fits against the yoke.
— Align the plexiglass support in the centre position and fix it by means of screw G (Fig. 62).
— Tension the plexiglass support as much as possible. Accurately align the yoke; it should be slid forward as far as possible.
Secure the bracket on the plexiglass support with screw G (Fig. 62). The springs should now press the yoke against the picture tube.
— Connect the deflection unit (mind the colours of the wires), fit the tube socket and the EHT connection.
— Fit the bezel.
— Adjust the yoke and the picture tube according to the instructions of chapter XI.F.2.

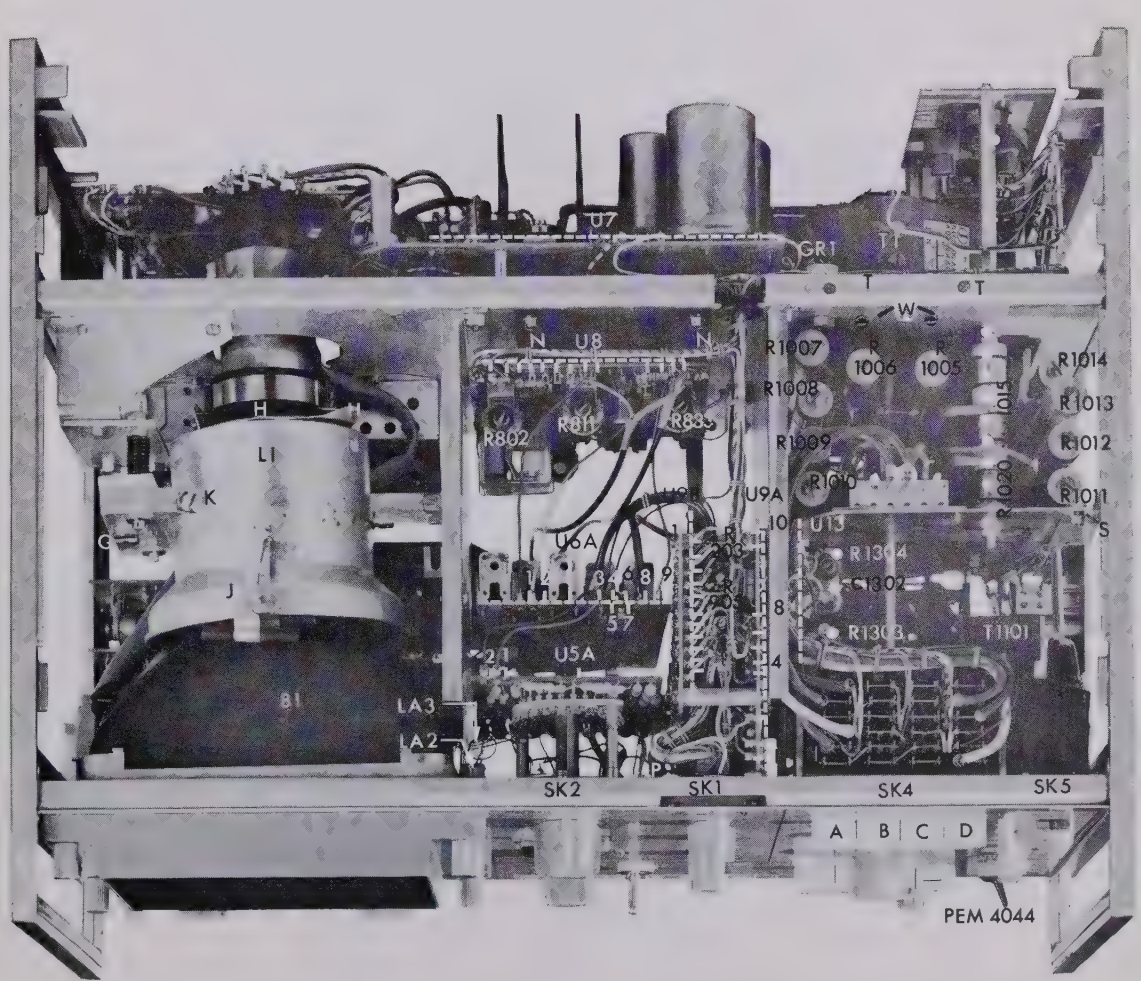

Fig. 63. Top view

C. REMOVING THE SUB-UNITS

When removing the sub-units be careful when soldering connection wires and short connections. Make sure that no wires are interchanged or skipped.
Make a wiring list and note the wire colours!

1. Unit U1

This unit is located at the rear of the instrument and is easily accessible after removal of the rear panel.

2. Unit U2 (Fig. 65)

Remove the left-hand side panel and loosen 2 screws E (Fig. 64). The cover can now be removed and the EHT unit can be pulled out.

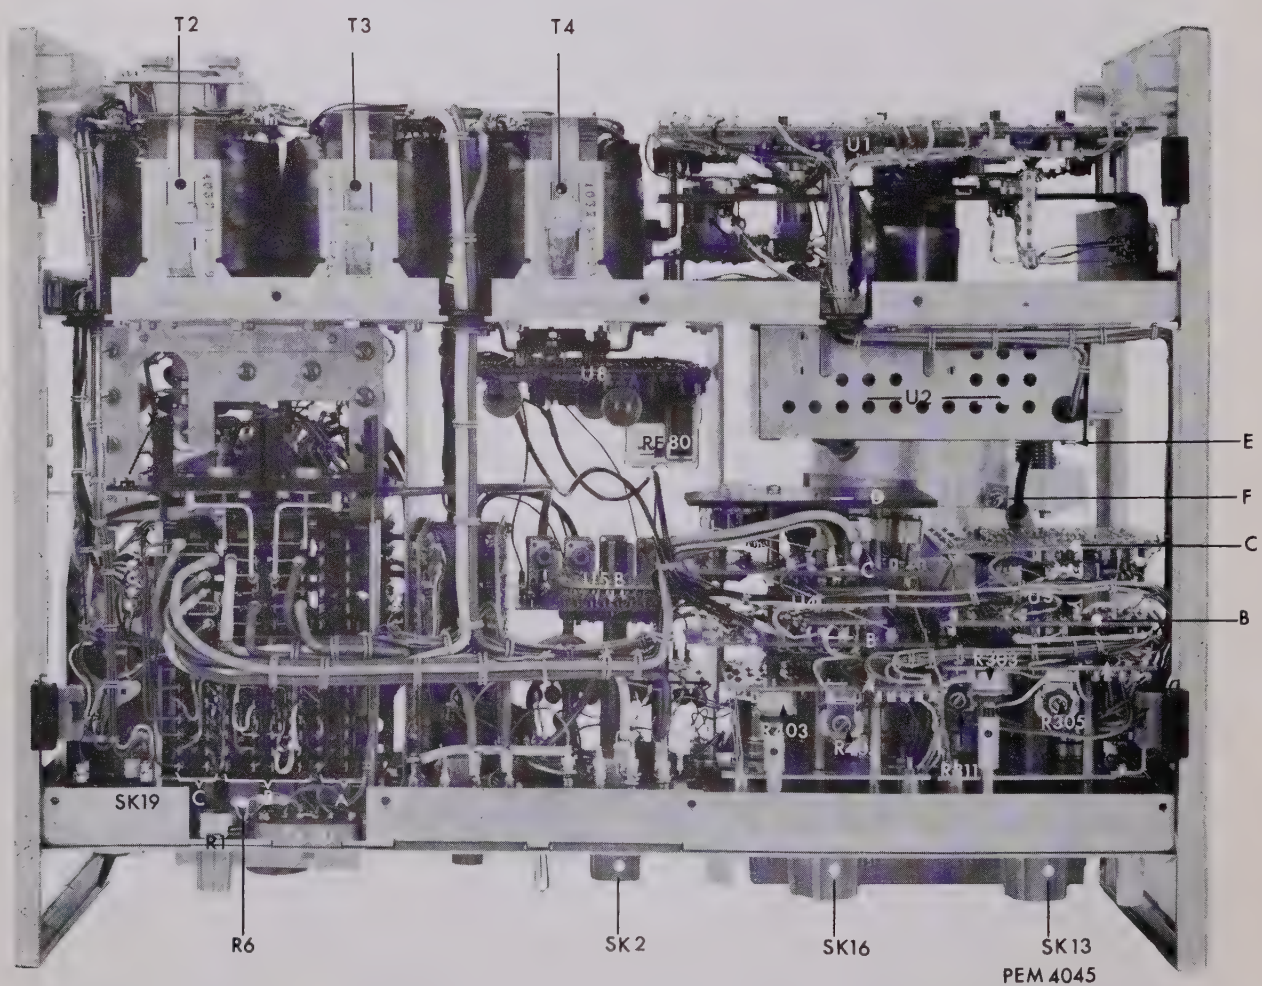

Fig. 64. Bottom view

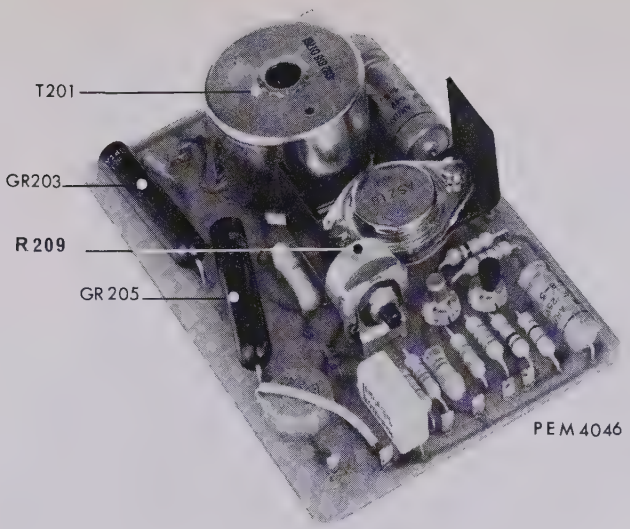

Fig. 65. H.T. unit U2 (supply for C.R.T.), taken off

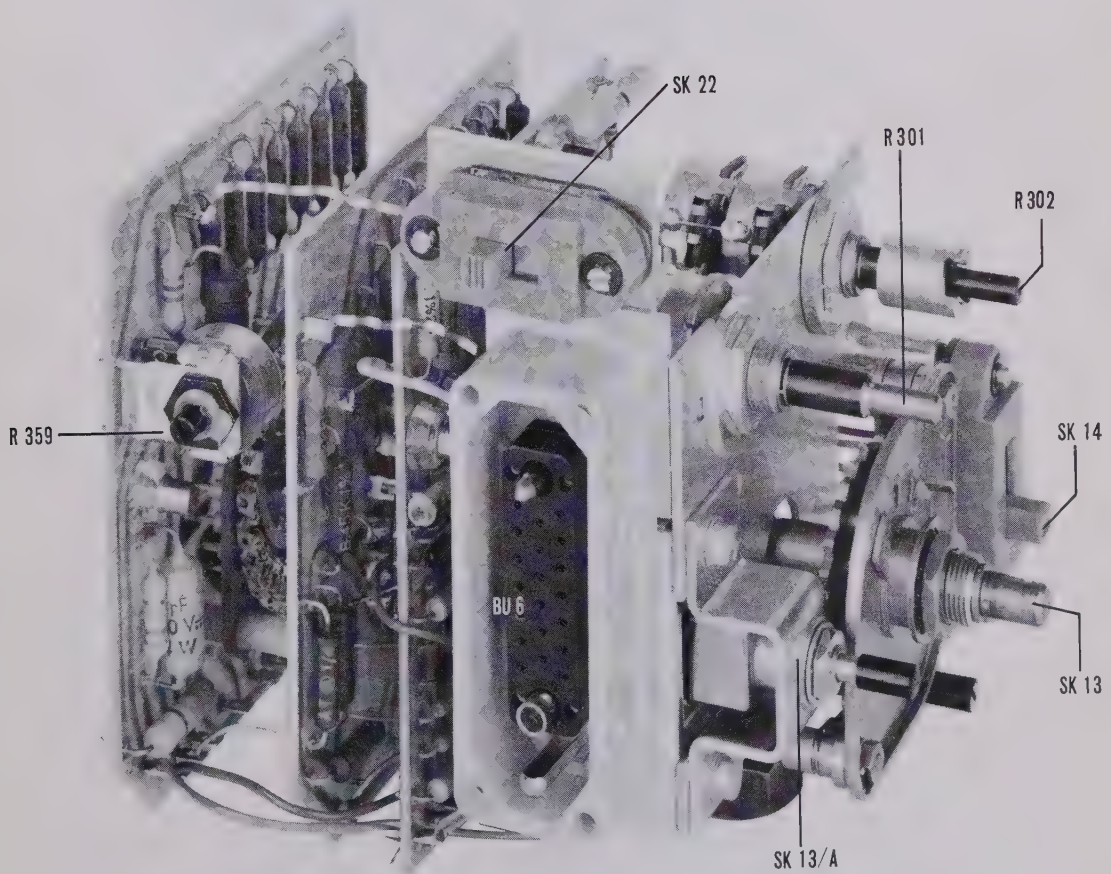

Fig. 66. X-Deflection unit U3, taken off

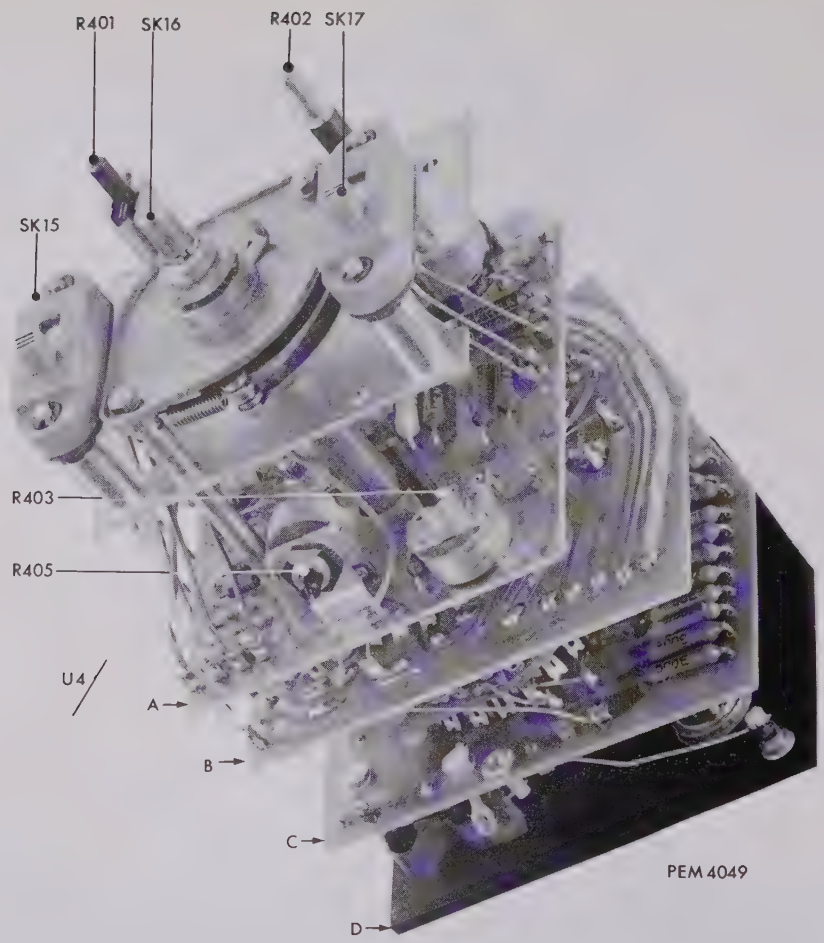

Fig. 67. Y-Deflection unit U4, taken off

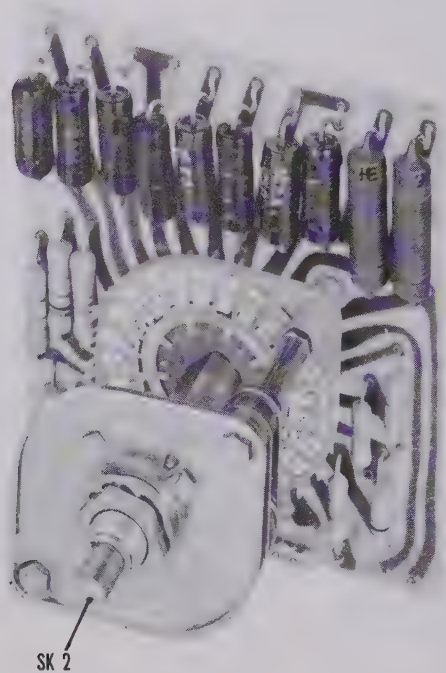

Fig. 68. Base-resistor unit U5, taken off

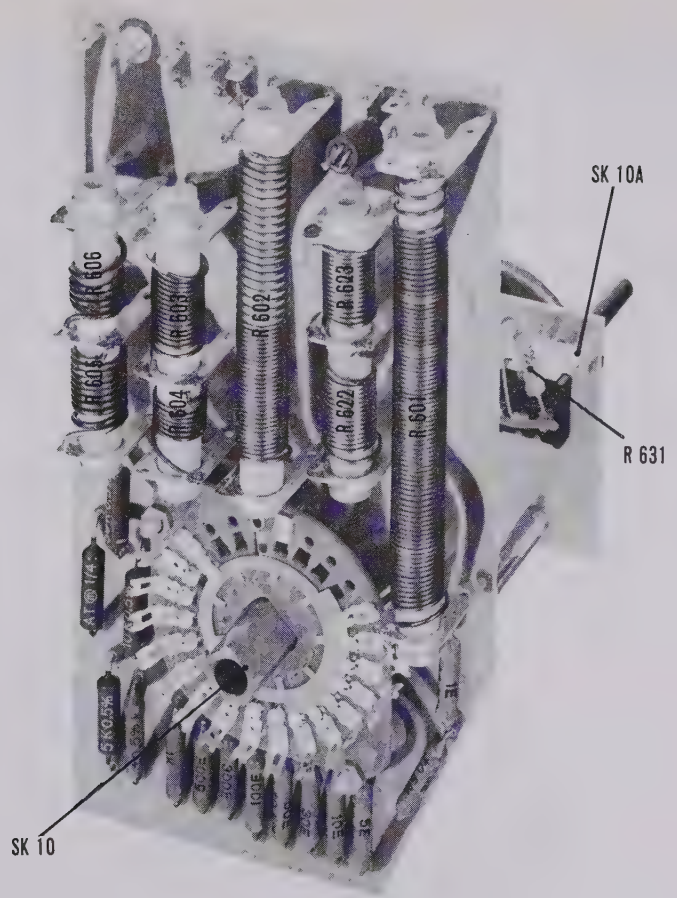

Fig. 69. Shunt unit U6, taken off

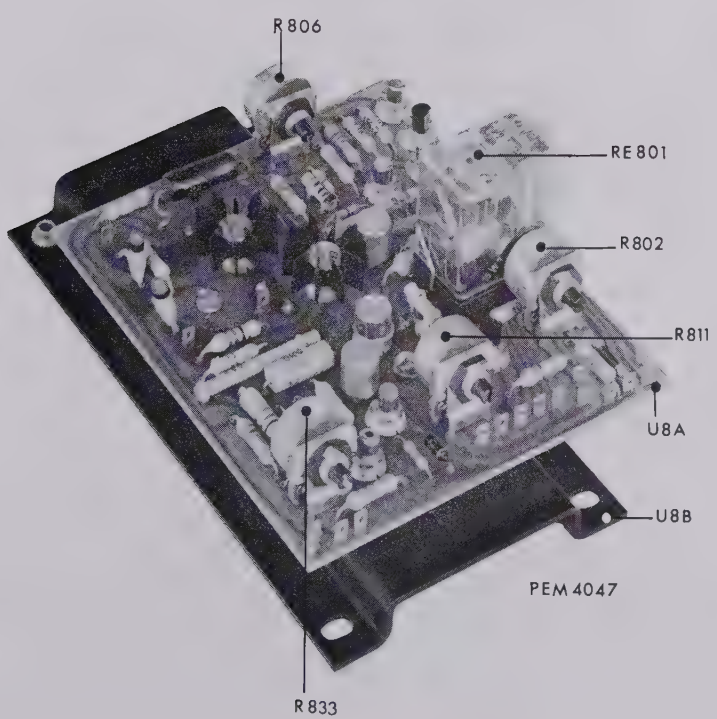

Fig. 70. Final-amplifier unit U8, taken off

3. Units U3, U4, U5 and U6 (Fig. 66, 67, 68, 69)

These units are centrally fixed. Remove the knobs, loosen the central fixing nuts, and unsolder the relevant connection wires.
Remove the bottom plate, the top plate and, if necessary, the left-hand side panel.

4. Unit U7

Remove the rear panel.
The unit is then readily accessible (4 fixing screws).

5. Unit U8 (Fig. 70)

Remove the rear panel. Remove 2 screws N (Fig. 63) and loosen 2 screws O. Unsolder the connection wires. When the unit is slightly pushed down, the screws can be removed from the bayonet holes.

6. Unit U9 (Fig. 72)

Remove the top plate, and then remove unit U5. Remove the knobs, the fixing nuts of SK3, SK8 and R902 as well as the knurled nut of SK6. Remove screw P (Fig. 63) and loosen screw Q (Fig. 71). Unsolder the wires, slide the unit backwards and take it out.

7. Unit U10 (Fig. 74)

Remove the bottom plate, the top plate and the rear panel. Loosen fixing nut R (Fig. 73) and pull out the spindle and knob of T1. Loosen the spindle coupling of SK12 (accessible from the top) and pull out the spindle. Remove the two screws T (Fig. 63) at the base plate of U10 and loosen screws S (Fig. 63). Unsolder the connection wires and lift out the units.

8. Unit U11 (Fig. 75)

Remove the top plate and the left-hand side plate.
Remove three screws U (Fig. 71) as well as screws S (Fig. 63) and take out the angle support.
Remove the two screws V (Fig. 71) the EHT unit can now be taken out.

9. Unit U12 (Fig. 76)

Remove the bottom plate and unscrew the knurled nut of SK18. The complete socket and switch unit can now be removed.

10. Unit U13

Remove the top plate. Loosen the fixing clips and take out the printed circuit board.

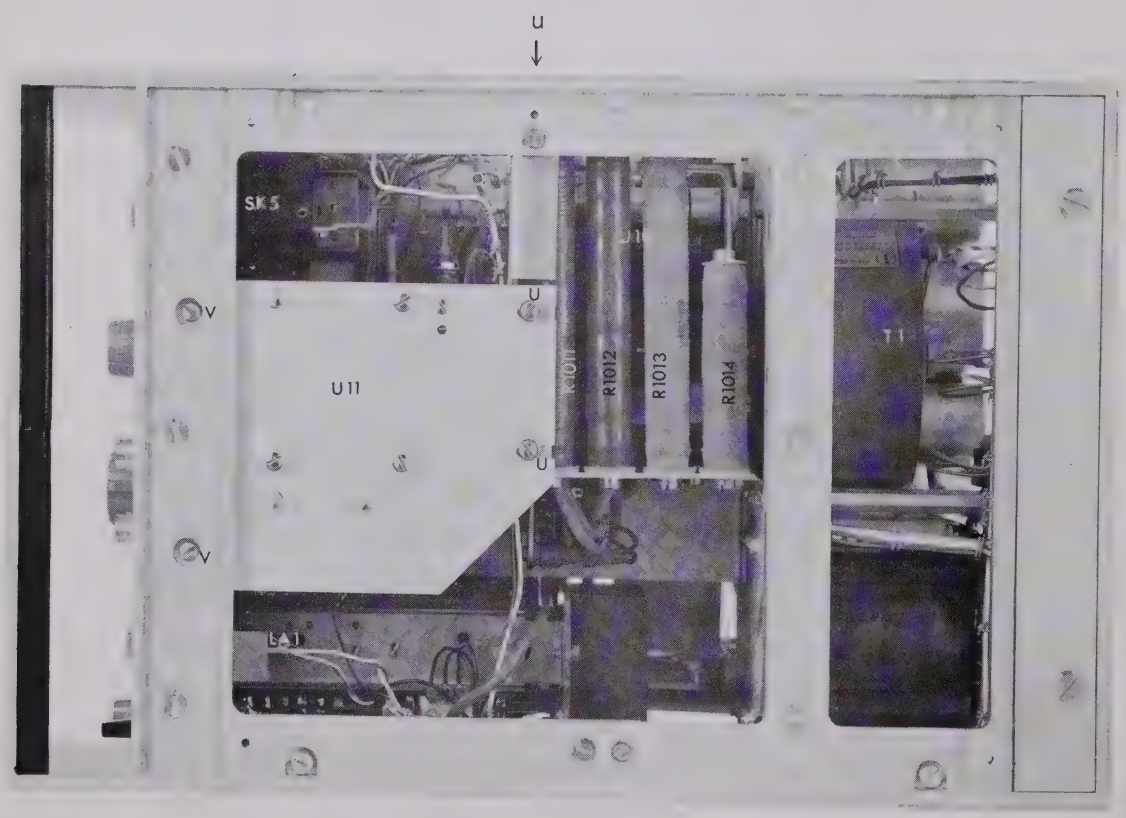

PEM4050

Fig. 71. Side view right

D. REMOVING COMPONENTS

If components are to be replaced which are located in one of the sub-units, it will generally be necessary to disassemble the relevant unit. The components can then be easily replaced.

1. Variable transformer T1

Remove the top-panel, the cover-plate of the mains-fuses and loosen the mounting plate which has been fitted with the three screws. Remove screws Y (Fig. 63). Loosen tightening nut R (Fig. 73) and pull out the spindle of T1. Unsolder the connection wires of T1. Loosen the two hexagon screws W (Fig. 63) by means of a spanner (7 mm). The transformer can now be slightly pushed up and the screws can be removed through the bayonet holes, after which the transformer can be lifted out of the instrument. Before mounting the new transformer, fit the soldering tags and remove the stopping cams on the front of the transformer. The front of the transformer should be fitted completely against the mounting plate.

2. Push-button units SK4
(Fig. 77)

Remove the top plate. Remove the two screws at the side of the push-button unit and unsolder the connection cables.

3. Push-button unit SK19
(Fig. 77)

Remove the bottom plate. Remove the fixing screws on either side and also remove screw X (Fig. 64).

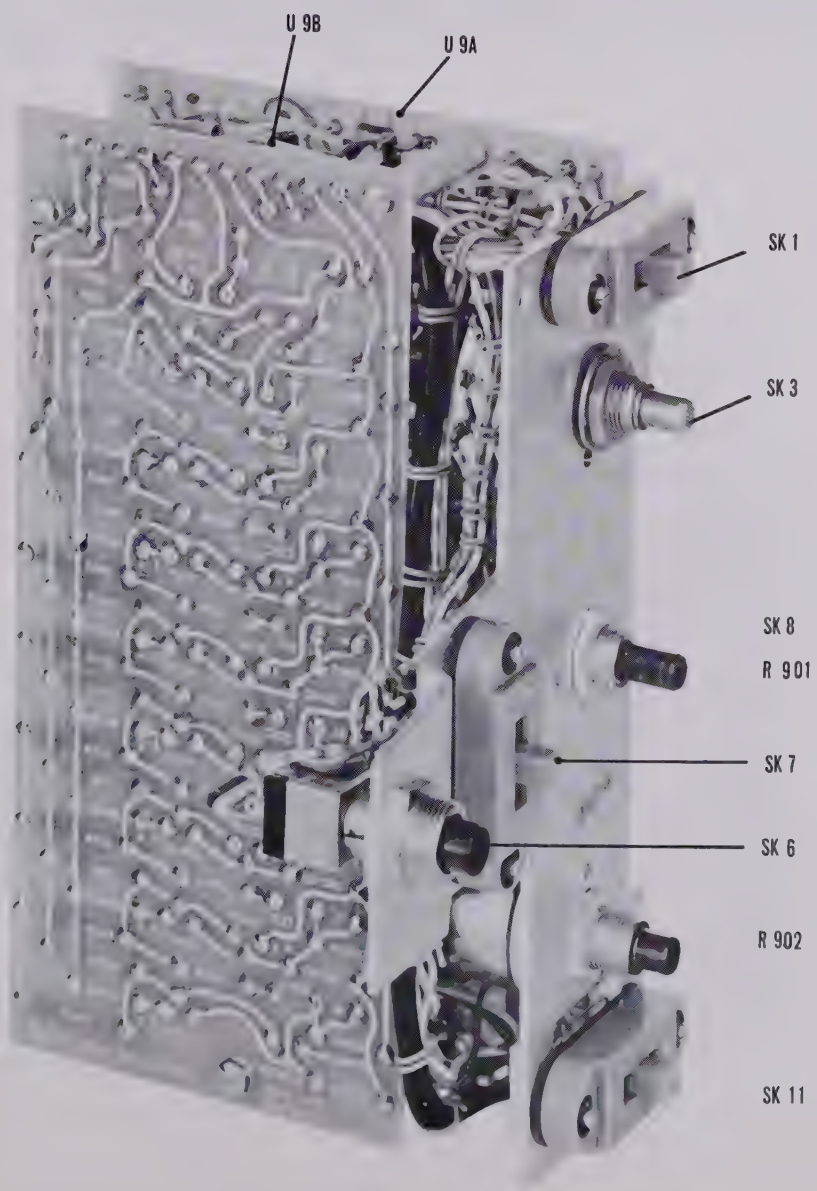

Fig. 72. Step generator U9, taken off

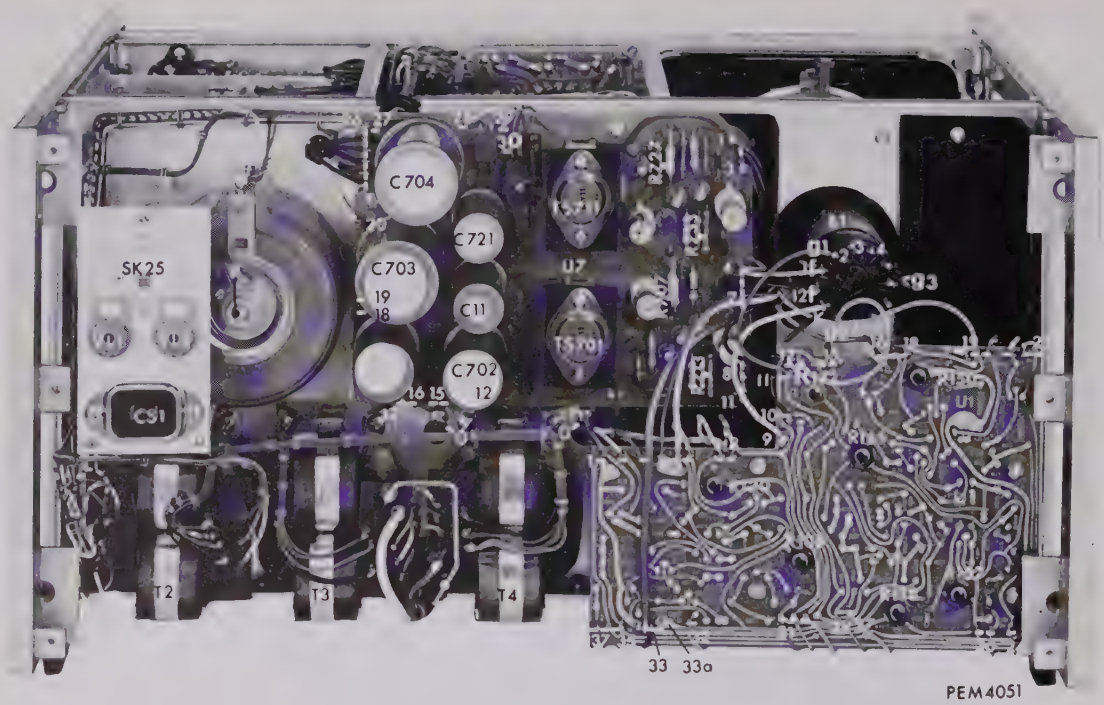

Fig. 73. Rear view (rear panel taken off)

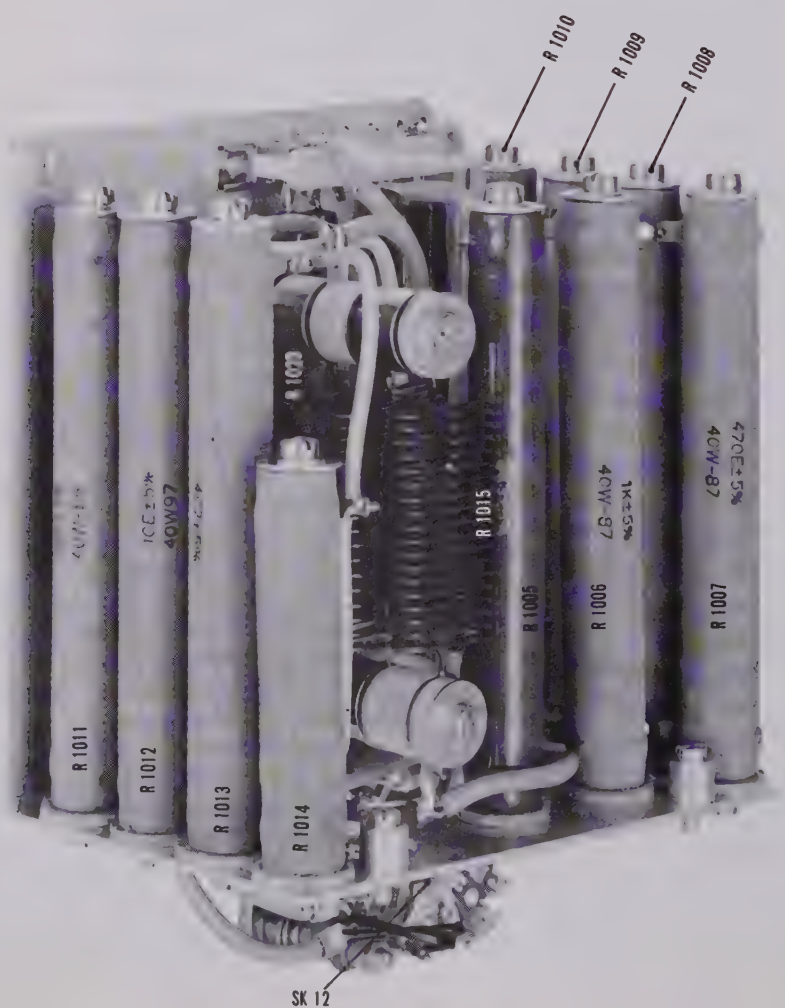

Fig. 74. Collector-load unit U10, taken off

4. Pilot lamp LA1

Remove the right-hand side panel (Fig. 71). Pull out the lamp holder in backward direction.
The lamp can now be easily replaced (screw fitting E10, voltage 6 V).
Pilot lamps LA2 and LA3.
Remove the bezel and the measuring lattice.

The lamps can then be replaced.
Bayonet sockets BA7s, voltage 6 V.

5. Switch knobs

The round switch knobs can be removed by carefully prizing off the cap with a knife and loosening the nut of the clamping cone. The knob can then be pulled off the spindle.

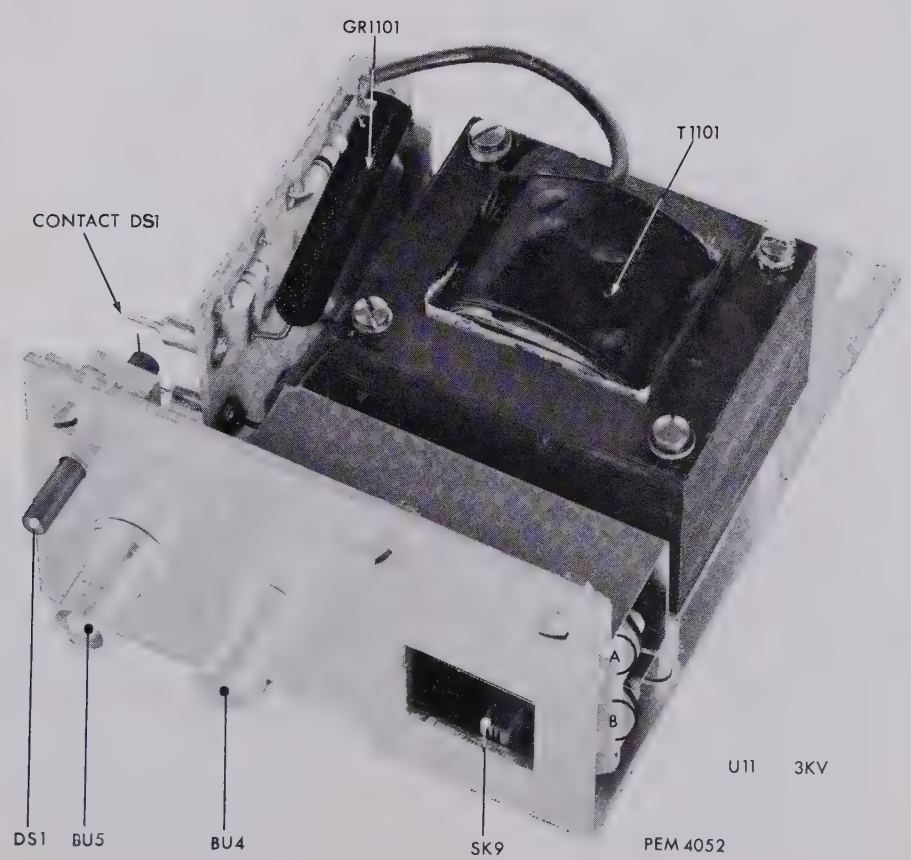

Fig. 75. H.T. unit U11 (3 kV), taken off

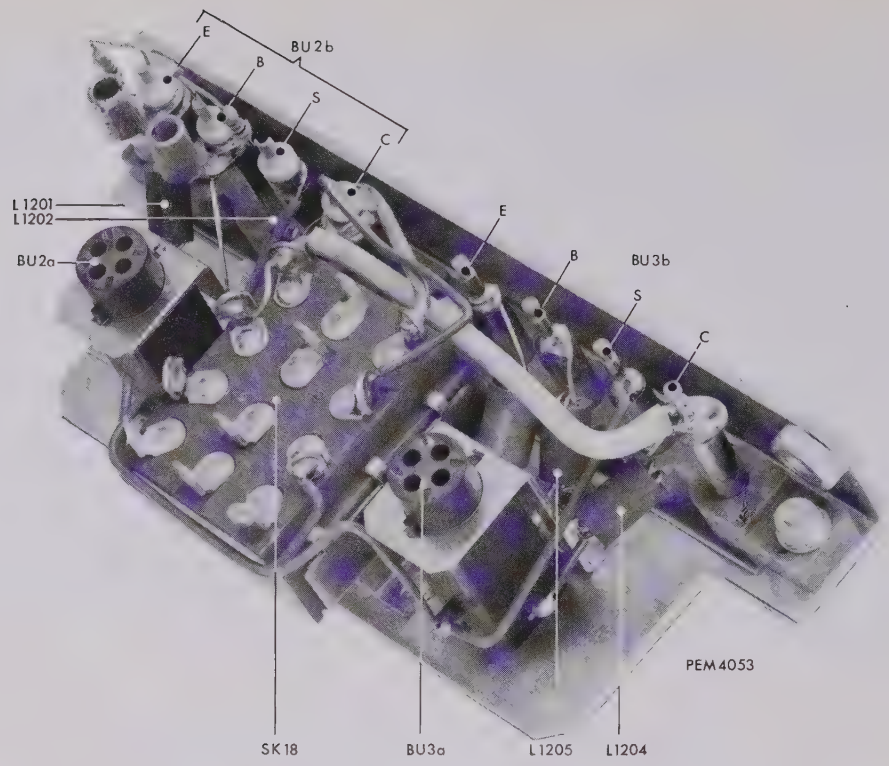

Fig. 76. Socket unit U12, taken off

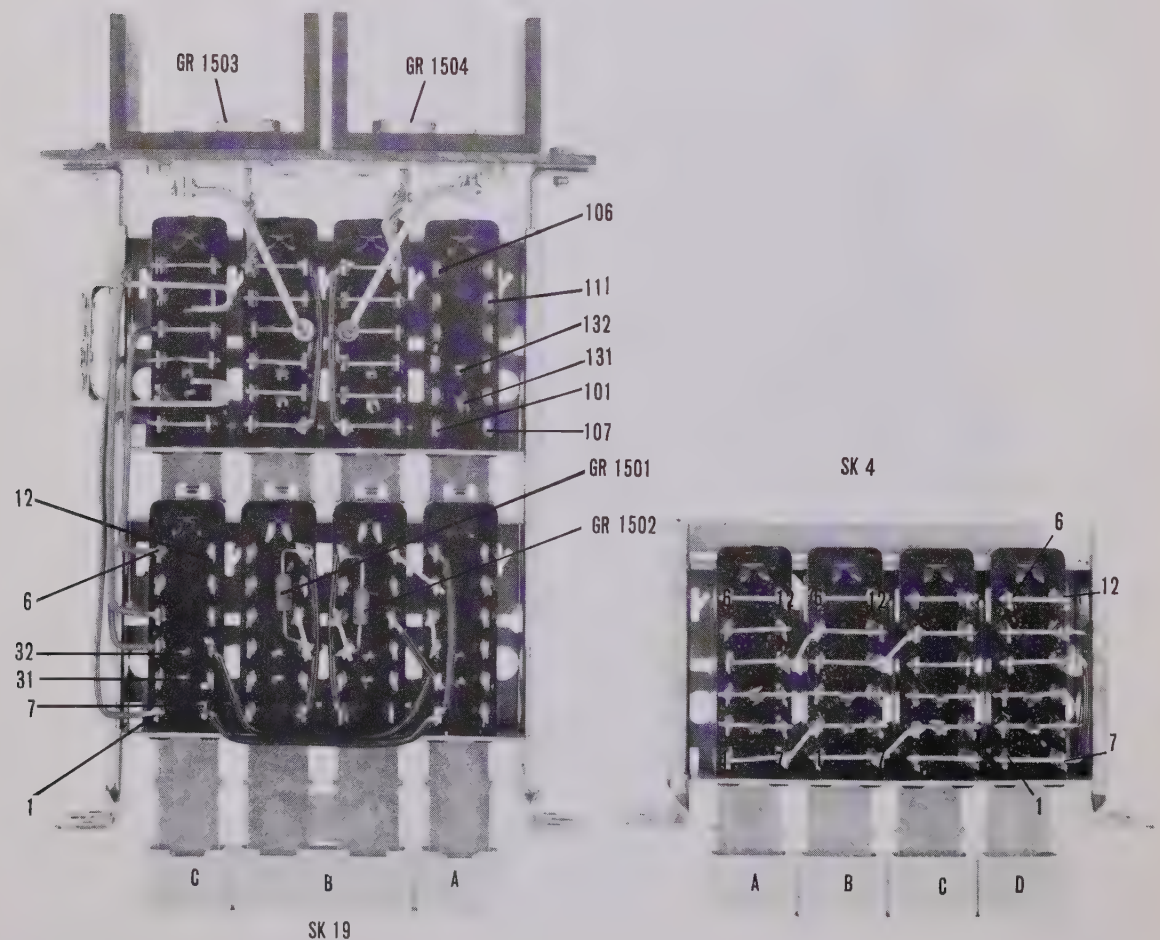

Fig. 77. Push-button unit U15 and SK4, taken off

X. Maintenance

Transistor curve tracer PM 6507 has no components which are actually subject to wear; therefore, the measuring instrument requires practically no maintenance.

However, to ensure trouble-free operation the instrument should not be exposed to excessive heat, moisture or dust. The perforations in the top plate should not be covered because otherwise the natural cooling will be impeded.

CAUTION:

Do not set the brightness to an unnecessarily high value. In case of continuous operation and a stationary image, the brightness should be kept as low as possible.

Avoid spots of high intensity to prevent burning in of the picture tube.

A few hints in the event of faults.

Due to the great number of controls and switching possibilities operating errors are likely to occur. It is advisable to first check the switch settings. Further instructions as regards the relevant mode of operation are given in the directions for use.

In case of a fault it is always possible to consult the local service organisation.

CAUTION!

When carrying out measurements on an opened instrument be extremely careful to avoid short-circuits; in view of the EHT source only use insulated tools and clips!

XI. Survey of adjusting elements

The order given below is arbitrary. For the complete adjusting procedure please refer to chapter XII.

Fig.	Adjusting element	Function	Chapter XII, point
73	R713	Adjusting the Zener diodes	A1
73	R733		A1
73	R707	+30 V	A2a
73	R727	−30 V	A2a
62	R209	+300 V	Ba
63	R903	Phase adjustment	D1
63	R905		D2
110	R932	Duty-cycle adjustment	D2
110	R933		D2
63	R833	Step generator, gain	D3a
63	R802	Step adjustment	D3c, d
63	R806		
63	R811		
62	R359	V_{CE} adjustment	E1d
63	R1303		
63	C1302		
63	R1304	Diode voltage adjustment	E2b
64	R6	Shield voltage	E3
62	R319	Balance adjustment	F1b
9	R303		
9	R403		
64	R305		
64	R405		
103	R419		
64	R311	Amplification	F1b
103	R411		
100	R373	Calibration voltage	F1c
73	R120	Output amplifier X-deflection	F2c
73	R108		
73	R157		
64	R311		
73	R138	Output amplifier Y-deflection	F2d
73	R150		
73	R172	Focusing	F3
73	R165	Brightness	F4

XII. Checking and adjusting

The tolerances mentioned are factory tolerances; they apply when the apparatus is readjusted completely. They may differ from the data given in IV.
A summary of the adjusting elements, their nomenclature and location has been given in XI. Before carrying out separate checks or adjustments, ensure that the instrument has no basic faults or deviations. The checking and adjusting instructions given in this chapter are therefore based on the assumption that the instrument basically is in good working order, as certain adjustments can only be carried out if the other adjustments are correct.
Moreover, the following general hints should be observed:

- Before the adjustment carry out a general functional check.
- Switch off all voltage and current sources in the instrument which are not required, or adjust them to the lowest possible value.
- During all adjustments the mains voltage should have the nominal value.
- When adjusting a switched-on instrument proceed with due care to avoid short-circuits with adjacent circuit elements. Use INSULATED screwdrivers and test clips only.
- For the connection of test clips or in case of soldering operations always switch off the instrument!

A. DIRECT VOLTAGES +30 V AND –30 V (U7)

Zener diodes GR714 and GR722 operate as reference elements for stabilising these voltages. These Zener diodes have been selected as regards optimum temperature coefficient.

1. Adjusting the Zener diodes

When Zener diodes GR714 or GR722 operate at a certain current the temperature coefficient within a certain temperature interval will remain practically zero.
This current is determined and adjusted as follows: The choice resistor should be selected so that Zener voltage Uz remains constant when the diode is warmed up to approx. 60 °C and subsequently cooled down to approx. 20°C and $\triangle U = \pm 1$ mV. Once the diode current has been adjusted, current Iz should lie between 4.5 and 6 mA and the voltage between 5.4 and 5.6 V. If these values cannot be obtained the Zener diode is not suitable for this purpose.
Adjustment is effected outside the instrument according to the measuring diagram given in Fig. 78.
If no voltage of 30 V ± 0.1 % is available, the other supply voltage can be employed provided that it has the correct value. Connection on U7: for +30 V: points 8, 9, 10; with respect to zero, for –30 V points 1, 2, 3 with respect to zero (points 4 - 7).
It is advised to warm up the diodes on the CATHODE CONNECTION by means of a soldering iron.

2. a. Output voltages +30 V and –30 V

These voltages are adjusted with R707 for +30 V and with R727 for –30 V.
Permissible deviation of the output voltage: 30 V ± 30 mV (± 0.1 %).
The load of the output voltage should be approx. 100 - 150 mA, which corresponds to the quiescent current at the datum setting of the instrument (SK4 completely released, SK9 "OFF", SK10 at 0, SK18 "OFF").

b. Stability of the output voltages

At a load of 50 – 150 mA the voltage variation should be < 5 mV.
Current limiting: for +30 V at 300 mA and for – 30 V at 260 mA. The maximum current should not exceed 330 mA.

c. Hum voltage

At mains voltage variations of ± 15 % the hum voltage at the output should be ≤ 150 μVrms at a load of 180 mA.

3. Output voltage +31.5 V

The 1.5 V component added to the stabilised +30 V voltage is determined by GR12 and GR13. The output voltage should lie between 31.4 V and 31.6 V. In case of deviations replace the diodes.

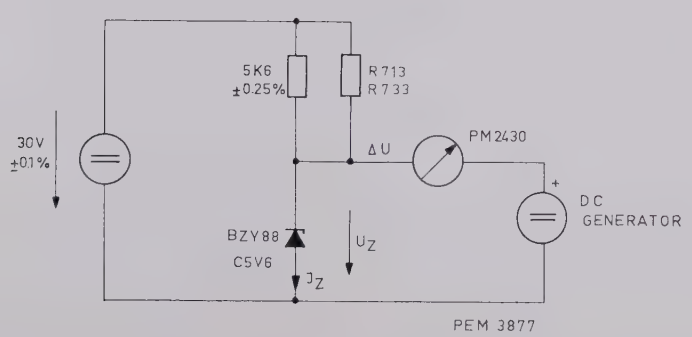

Fig. 78. Adjusting the zener diodes

B. EHT UNIT 4.5 kV (U2)

a. Adjust the +300 V voltage with R209 at average brightness.

b. Check the 4.5 kV voltage by means of HT probe GM 6071 and d.c. voltmeter GM 6020, PM 2440 or PM 2430. Input resistance of the voltmeter 100 MΩ. Load resistance of the EHT circuit > 200 MΩ. Nominal value: 4500 V ± 200 V.

C. 3 kV VOLTAGE FOR TESTING DIODES (U11)

Half-wave voltage adjustable with T1, max. value at nominal mains voltage approx. 3 kV.
Visual check on CRT:
SK13 at 500 V,
SK9 at μA or nA,
Slowly turn T1 fully clockwise. The voltage curve on the screen will then be 6 cm for 3 kV.

D. STEP GENERATOR (U9)

1. Phase adjustment of the trigger pulses
Phase adjustment of the trigger points can be effected by using a transistor as test object and observing the characteristics on the screen of the CRT.

1st Phase

- Depress the 10 V button of SK4.
- Set T1 (V_{CE}) to mid position (e.g. 5 V).
- SK8 at 2.5 % duty cycle.
- SK13 at 1 V/cm.
- Set SK16 at a high sensitivity so that accurate adjustment is possible.
- Set SK1 at "100 from 0".
- SK7 at "REP FAM".
- SK3 at 8.
- Adjust the intersection point of the curves to zero or minimum by means of R903.

2nd Phase

Initial setting as above, however:
- SK1 at "100 to 0".
- With R905 adjust the trigger point to max. reversing point.

2. Duty-cycle adjustment 2.5 . . . 60 % +100 %

- Initial setting of instrument: use a transistor as test object and display a set of curves with SK7 at "REP. FAM".
- Turn SK8 fully clockwise (switch in the locked position). The mark on the knob should point towards the centre of position 100 %.
- Connect an oscilloscope to U9A/3.
- Set SK8 (R901) at position 2.5 %.
  The duty cycle phase should now be 250 μs ± 10 μs.
- Adjustment is effected with R933 (for this, unit U9 must be removed).
- Set SK8 at 60 %.
  The duty cycle phase should now be 6 ms ± 250 μs.
- Adjustment is effected with R932.

3. Adjusting the amplifier (U8)

a. Adjustment of potentiometer "ZERO"

- Connect a resistor of 100 Ω ± 0.2 % to sockets B and E.
- SK1 at "100 from 0".
- SK3 at 8.
- SK7 at "ONE CURVE".
- SK8 at 100 %.
- SK10 at 1 mA.
- R902 at the centre of its control range (mark under "ZERO").
- SK19: all buttons released.
- Connect a microvoltmeter or digital voltmeter to the external 100 Ω resistor.
- Adjust potentiometer R833 until the output current is 0 ± 10 μA (≦ ± 1 mV). If this is not possible replace TS814.
- This tolerance should also be maintained if button SK19A is depressed.

b. Adjustment of the negative deflection

Setting as under a, however:

- Set SK3 at 2 . . . 7.
- Set SK7 at "Single Fam".
- Adjust potentiometer R811 so that the current per step is 2 - 7 mA.
- Adjust the 1st step (SK3 at 1) by means of R802. These adjustments should be carried out very accurately (± 1 % per step or 0.1 V ± 1 mV across the 100 Ω resistor connected to B-E).

c. Adjustment of the positive deflection
Setting as under b, however:
- SK19A: depressed.
- Adjust potentiometer R806 so that the current per step is 1 mA for steps 1 - 8 (SK3); (tolerance ± 1 % or 0.1 V ± 1 mV across the 100 Ω resistor connected to B-E).

E. COLLECTOR VOLTAGE SUPPLY

1. Voltage ranges 10 Vp, 50 Vp, 100 Vp, 500 Vp

a. Range 0 - 10 Vp

- SK4A (10 V) depressed.
- SK13 at 2 V/cm.
- SK16 at 5 A/cm.
- SK18 at TS1.
- Turn T1 clockwise and check the X-deflection on the picture screen.
  Adjustment: 10 V = 5 cm screen distance.
- Connect an oscilloscope to BU2b C (high) and E (low) and check that both halfwaves are present.
- Connect a resistor of 1 Ω, 100 W to BU2b, C and E.
- The trace should be deflected in the vertical direction over approx. 2 cm (2 cm = 10 A), according to Fig. 79 (the collector voltage source is not stabilised).
  Short-circuit C-E (R_C = 0.5 Ω), V_{CE} = 10 Vp, I_C = 20 Ap. After approx. 20 - 25 sec thermal switch SK5 should cut out.
- Hum on the picture tube (Fig. 80):
  Short-circuit C-E (R_C = 0.5 Ω), V_{CE} = 10 Vp, I_C = 20 Ap.
  SK13 at 1 V/cm.

b. Range 0 - 50 Vp

- SK4 B depressed.
- SK13 at 10 V/cm.
- SK16 at 1 A/cm.
- Connect a resistor of 10 Ω, 100 W to BU2b C-E.
- Set SK18 at TS1.
- Adjust V_{CE} to 50 V with T1 (5 cm).
- I_C should be approx. 4 A (≥ 4 cm).

c. Range 0 - 100 Vp

- SK4 C depressed.
- SK13 at 20 V/cm.
- SK16 at 500 mA/cm.
- Connect a resistor of 50 Ω, 100 W to BU2b, C-E.
- Set SK18 at TS1.
- Adjust the V_{CE} to 100 V with T1 (5 cm).
- I_C should be approx. 1.6 A (≧ 3.2 cm).

d. Range 0 - 500 Vp

- Depress SK4 D.
- SK13 at 50 V/cm.
- SK16 at 50 mA/cm.
- Connect a resistor of 2 kΩ, 100 W to BU2, C.E.
- Set SK18 at TS1.
- Adjust the V_{CE} to 500 V with T1 (10 cm).
- I_C should be approx. 0.2 A (≥ 4 cm).

Adjustment at smaller currents:

- SK13 at 50 V/cm.
- SK16 at 10 μA/cm.
- Adjust V_{CE} to 400 V with T1 (8 cm).
- By means of R1303 and C1302 reduce the angle enclosed by the diverging lines and make the two traces coincide. Adjust R359 until the loop as closely as possible approximates a straight line. After the adjustment the trace should fit inside a rectangle of max. 7 mm height (7 μA p-p) and a width of 8 cm (400 V).

2. High tension for testing diodes

a. μA ranges

- None of the buttons of SK4 depressed.
- SK9 at "μA".
- SK13 at 500 V/cm.
- SK14 at "INVERS".
- SK15 at "NORMAL".
- SK16 at 10 μA/cm.
- SK17 at "x0.5".
- Depress DS1.
- Turn T1 clockwise until a horizontal line of 4 cm is obtained on the screen, corresponding to a voltage of 2,000 Vp.

b. nA ranges

- None of the buttons of SK4 depressed.
- SK6 at "SINGLE FAM".
- SK9 "nA".
- SK10 at 1 μA/step.
- SK11 at "GROUNDED".
- SK16 at 10 nA/cm.
- SK17 at "x0.5".
- Turn R1 fully counter-clockwise.
- Depress DS1.
- Adjust the picture horizontally with R1304. The loop should be smaller than 6 mm (3 nA). Ensure that the instrument is earthed.

3. S control voltage

- Set SK20 at – (+).
- Turn R1 fully clockwise.
- The voltage on sockets S-E of BU2 (BU3) should be 10 V ± 0.1 V (adjust by replacing R6).
- Repeat the check for the other polarity + (–).
- Check of ⏚, with SK20 at ⏚: S-E = 0 V.

F. MONITOR

1. Pre-amplifiers U3 A, and U4 A

Checking and adjusting of the amplifiers can be effected independent of the step signal and the collector circuit by switching the instrument to external operation and by applying a sine-wave voltage of approx. 200 Hz to the sockets on the left of the instrument.
The adjustment is the same for the horizontal and vertical pre-amplifiers except for the expansion switch on unit U4. In the following description the indications in brackets refer to U4 A and the other indications to U3 A.

a. Checking the input stages as regards gate leakage current

With this check it should be observed that the leakage current of protection diodes GR301/GR302 (GR401/GR402) is also measured.
The diodes should therefore be unsoldered.
If the leakage current of a FET is too high, both transistors in the relevant stage should be replaced because they have been selected in pairs (for the ordering code, see list of electrical parts).

- Connect a resistor of 1 MΩ ± 5 % to sockets B and H of BU6 (on the left-hand side of the instrument).
- Set switches SK13 and SK16 at "EXT".
- All buttons of SK4 should be released and T1 should be turned fully counter-clockwise.

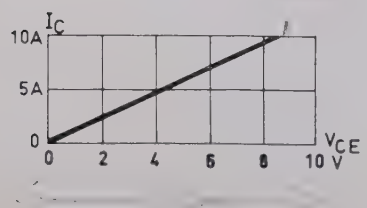

Fig. 79. Adjusting the collector-voltage source 0-10 V

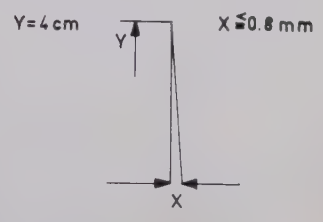

Fig. 80. Hum influence on the C.R.T.

– A small loop is now displayed on the screen. This trace should be adjusted to the centre of the screen at low brightness.

X-inputs:

– Short-circuit sockets D and H of BU6.
– The loop should not shift more than ± 3 mm in the horizontal direction (an angular shift of the loop does not affect this check).
– Short-circuit sockets M and H of BU6.
– Max. deviation in the horizontal direction ± 3 mm.

Y-inputs:

– Short-circuit sockets E and H.
– Max. deviation in vertical direction ± 3 mm.
– Short-circuit sockets B and H.
– Max. deviation in the vertical direction ± 3 mm.

b. Adjusting the pre-amplifiers

This is effected by means of an external sinewave voltage which should be applied to socket BU6 and checked by means of a millivoltmeter (e.g. PM 2520).
Balance adjustment
– Initial setting of the instrument according to Fig. 43.
– Set SK13 (SK 16) at "EXT".
– Set R303 (R403) "DC BAL" to the centre of the control range.
– Short-circuit sockets D and F of BU6 and connect a sinewave generator (e.g. PM 5121) to H/K (voltage 0 V).
– With R319 (R419) adjust the output voltage to < ± 0.5 Vd.c. (available on U1/32 for the X-amplifier, and on U1/25 for the Y-amplifier).
– Adjust the generator to 5 V_{rms} at 200 Hz.
– The alternating voltage on the output should be < 10 mV_{rms} (adjustable with R305-R405).
Gain adjustment
– With either input D or F connected to earth (E or B) connect the free input to the generator.
– Adjust the input voltage to 100 mVrms at 200 Hz.
– Connect an accurate millivoltmeter (e.g. PM 2451) to the output (U1/32 for X amplifier and U1/25 for the Y amplifier).
– Adjust the gain to 9.5 ± 2 % (950 mV) and to 12 ± 2 % (1.2 V) with potentiometer R311 (R411).
Check the ranges x5 and x0.5 (SK17).
These ranges are only present for the Y-amplifier.
The gain is 2.4 ± 5 % and 24 ± 5 %.
– After this check the adjustment with reversed input potential (arbitrarily earthed input).

c. Adjusting the calibration voltage

(Carry out this check when the instrument has attained operating temperature.) Measure the voltage between U3A/6b and U3A/9 with a digital voltmeter (e.g. PM 2433). This voltage should be 50 mV, + or –0.5 %. If necessary select a different value for R373.

2. Adjusting the output amplifiers and yoke U1

Before these adjustments can be carried out the pre-amplifiers should be adjusted. The focusing and brightness control should also be correct. Moreover, the position of the deflection coils should be checked before the adjustment, by checking the horizontal and vertical deflection axes. For this purpose the procedure below may be followed. If the axis is not correct, the deflection unit should be turned (for yoke fixation see under point IX. B).

a. Deflection coil (yoke)

Initial setting as under c and d respectively.
Adjust the picture axis accurately by means of the shift controls. By turning the yoke the line pattern can be made to coincide exactly with the graticule. This check should be effected both for the horizontal and the vertical deflection and in position "NORMAL" and "INVERS".
For minor corrections hexagon screw "G" (Fig. 62) should be loosened. The yoke can then be shifted slightly in both directions. For greater corrections screw "F" (Fig. 64) should be loosened; before this is done the holder should be aligned in the centre position and secured with screw "G" (for adjustment of the yoke see under IX. B).

b. Beam centring

Initial setting: as under c and d respectively.
– Shunt the yoke coils at the following points by means of short pieces of wire:
X: U1/4 - U1/5
Y: U1/18 - U1/19
– Before switching on the instrument turn down the brightness.
– By means of the adjusting plates at the rear of the yoke adjust the spot to the centre of the screen.
– Remove the short-circuit.
– Adjust the line pattern as described under point c.
– Use the correction magnets at top and bottom of the picture tube to correct the vertical lines so that the linearity error does not exceed ± 1 mm.
– Check the linearity at the top and bottom of the picture, the axis of the yoke should then be properly aligned.

c. X-deflection

Initial setting of the instrument for adjusting the X-amplifier:
SK1 at 200
SK2 at 20 Ω
SK3 at 8
SK4 button 10 V depressed
SK7 at REP FAM
SK8 at 100 %
SK10 at 20 mV/step
SK11 at DRIVEN
SK12 at 2 kΩ
SK13 at 20 mV/cm (BASE VOLTAGE)
SK14 at NORM
SK15 at INVERS
SK16 at μA/cm (COLL. CURRENT) 50μa/cm
SK17 at x1
SK18 at TS1
SK19B depressed (NPN)
R902 (ZERO) set to the centre of its control range
T1: Adjusted to collector voltage of approx. 10 Vp, so that the lines cover the full screen width or screen heigt
BU2b: sockets C-E short-circuited.

At this setting the pattern of Fig. 81a should be displayed. Symmetry adjustment for the vertical and horizontal axes is effected with controls R302 and R401. Switching-over from situation a to b is effected with switch SK14 NORMAL/INVERS.

Adjustment:

- Set potentiometer R157 to the centre of its control range.
- Potentiometer R311 should not be at the end of its control range.
- R108: This potentiometer serves for adjusting the symmetry of the gain limitation.
- R120: This potentiometer serves for gain adjustment.

Gain and limitation should be adjusted (both left and right; SK14) so that the lines run exactly in parallel with the lines of the graticule. The setting of R108 (limitation) should be such that proper adjustment is possible by means of gain control R120. This procedure should be repeated at various settings of R108 until correct result is obtained.

d. Y-deflection

The initial setting is the same as with the adjustment of the X-amplifier described under c., however:
SK13 at 1 V/cm (COLL. VOLTAGE)
SK14 at NORMAL
SK15 at NORMAL
SK16 at 20 mV/cm (BASE VOLTAGE)

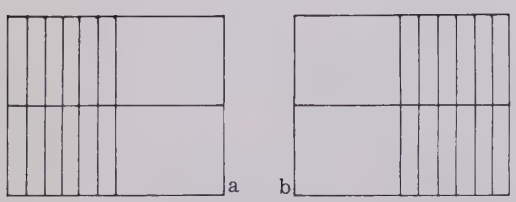

Fig. 81. Adjusting the X-deflection

At this setting the picture shown in Fig. 82a will be obtained.
Adjustment:
R138: This potentiometer serves for adjusting the symmetry of the gain limitation.
R150: This potentiometer serves for gain adjustment.
Adjustment of the lines displayed is effected in the same way as with the X-deflection. Reversal of the pattern is effected with SK15.

3. Focusing

For focusing adjustment potentiometer R172 should be used (Fig. 75). This potentiometer is accessible via a hole at the rear of the instrument. Adjustment should be effected at average brightness, until optimum sharpness is obtained.

4. Brightness control

The brightness is adjusted by means of potentiometer "INTENSITY" (R301) and brightness modulation with R165.
R165 should be adjusted so that the following requirements are met:

- It should be possible to completely suppress the beam with R301.
- When displaying a set of curves with reduced duty cycle (e.g. 40 %) the lower line (which is written 8 times when SK3 is at 8) should not be visible or only poorly.
- The control range of R301 should be sufficient to display the lower line completely or partially.

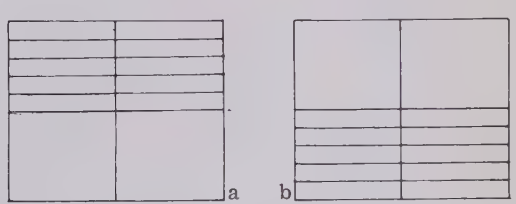

Fig. 82. Adjusting the Y-deflection

XIII. The shipment of the instrument

REMARK

In case of breakdowns one can always apply to the world-wide PHILIPS Service Organisation. Whenever it is desired to send the instrument to a PHILIPS Service Centre for repair, the following points should be observed:

- tie on a label, bearing full name and address of the sender;
- indicate as complete as possible the symptom(s) of the fault(s);
- carefully pack the instrument in the original packing, or, if no longer available, in a wooden crate;
- send the instrument to the address provided by your local PHILIPS representative.

XIV. List of parts

A. MECHANICAL PARTS

Item	Fig.	Qty	Ordering number	Description
1	83	4	4822 505 10314	Knurled nut
2	83	1	4822 450 10027	Measuring lattice
2a	83	1	4822 480 30073	Contrast filter
3	83	1	4822 276 10224	Push-button switch (SK6, SK10A, SK13A)
4	83	1	4822 455 90311	Instruction plate
5	83	10	4822 277 20009	Sliding switch 3-pos. (SK1, 7, 9a, 9b, 11, 14, 15, 17, 20, 21)
6		1	4822 413 30084	Switch knob, 14.5 mm dia.
7	83	1	4822 276 40098	Set of push-buttons SK4
8	83	1	4822 280 40097	Thermo-switch
9	83	1	4822 413 40211	Knob 23 mm dia.
10	83	1	4822 411 60086	Knob for SK9
11	83	1	4822 267 10008	B.N.C. socket BU4
12	83	1	4822 267 10008	B.N.C. socket BU5
13	83	1	4822 277 10021	Mains switch
14	83	1	4822 413 30083	Knob 14.5 mm dia., shaft 4 mm dia.
15	83	1	4822 276 40099	Set of push-buttons SK19
16	83	2	4822 267 40093	Socket block (BU2b, BU3b)
17	83	2	4822 255 40002	Transistor socket (h.f.) (BU2a, BU3a)
18	83	2	4822 413 30082	Knob 14.5 mm dia., shaft 6 mm dia.
19	83	4	4822 413 70038	Cover for 14.5 mm dia. knob
20	83	1	4822 277 10149	Switch SK18
21	83	5	4822 413 40112	Switch knob 23 mm dia.
22	83	6	4822 413 70037	Cover for 23 mm dia. knob
23	83	4	4822 413 30156	Knob 10 mm dia.
24	83	1	4822 290 40012	Earth terminal
25	84	2	4822 277 20014	Sliding switch (SK22, SK25)
26	84	2	4822 256 40012	Fuse holder
27	84	1	4822 265 20005	Mains connection

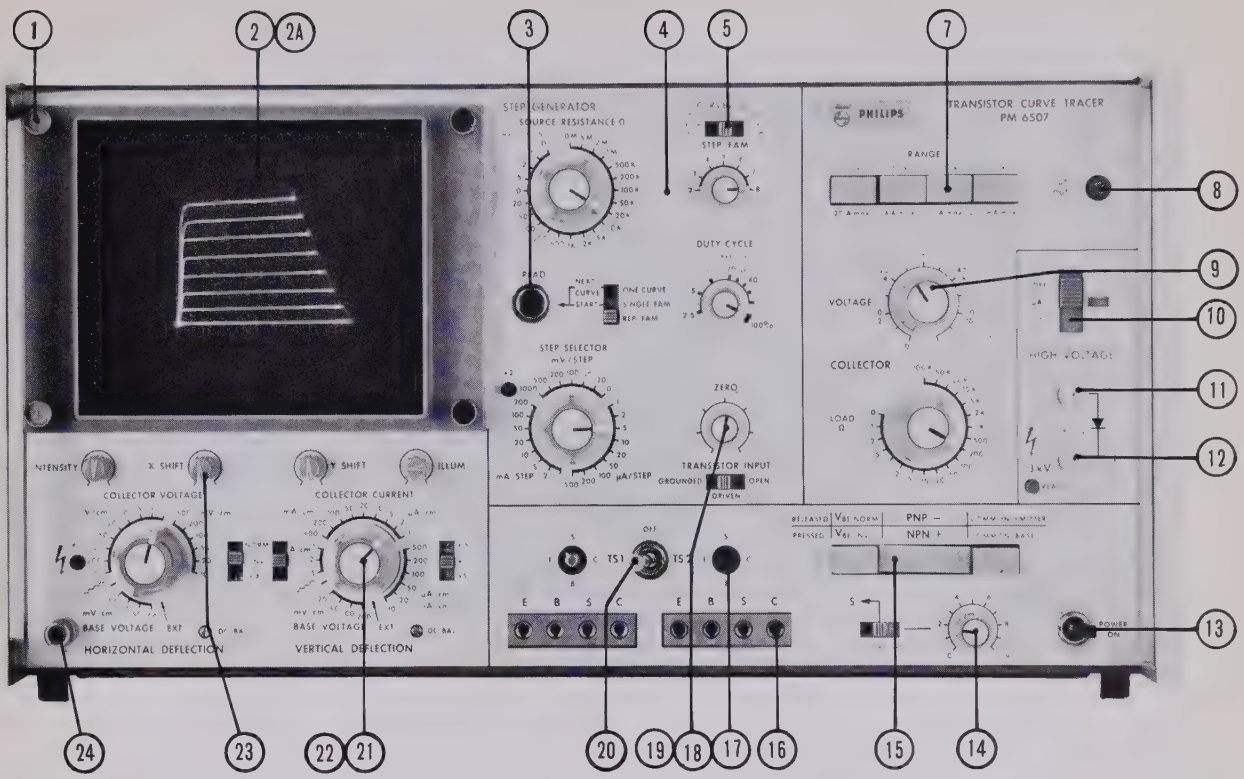

Fig. 83. Front view with item numbers

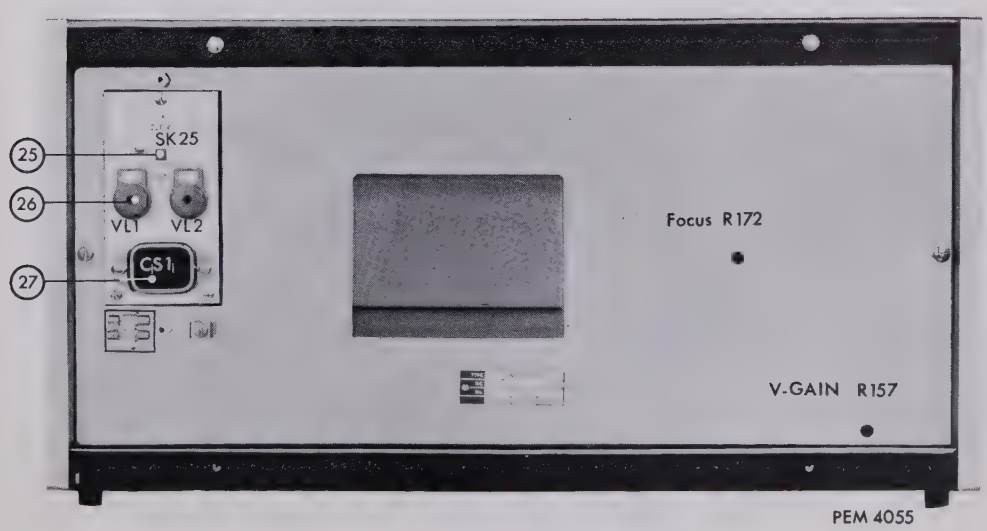

Fig. 84. Rear view with item numbers

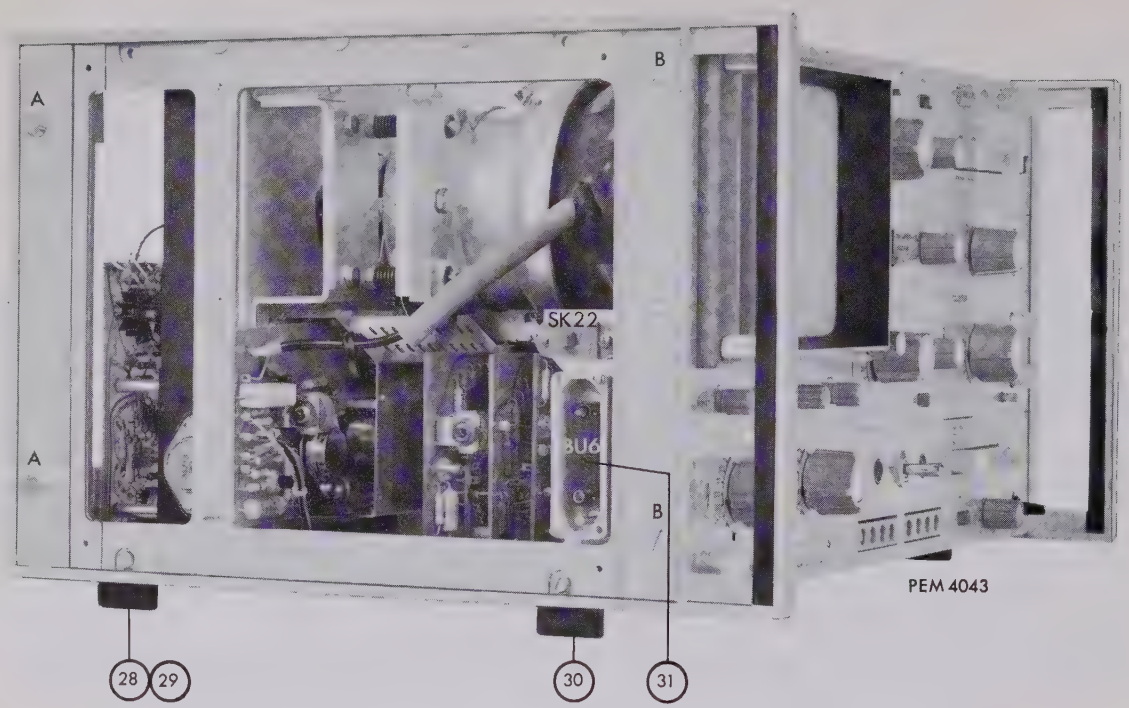

Fig. 85. Side view (left) with item numbers

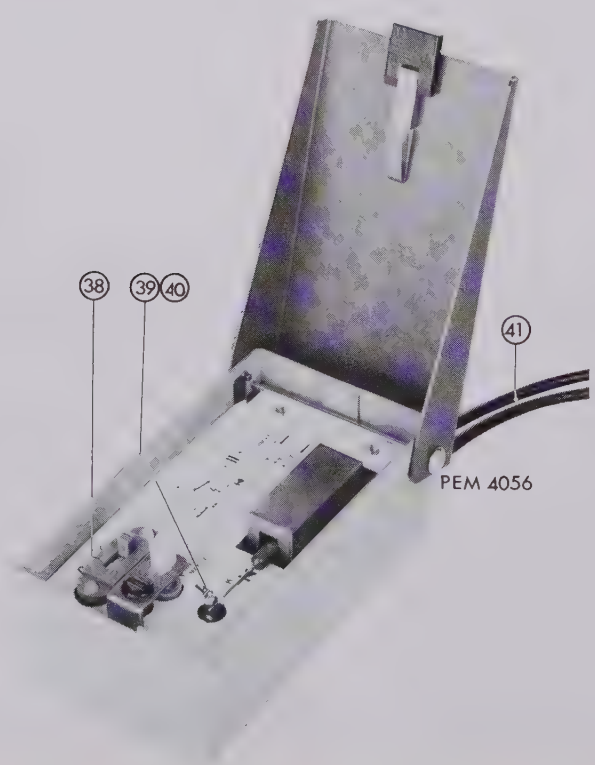

Fig. 86. PM 6546 with item numbers

Item	Fig.	Qty	Ordering number	Description
28	85	4	4822 462 40157	Rubber block for feet
29	85	2	4822 462 50101	Foot, rear
30	85	2	4822 462 40092	Foot, front
31	85	1	4822 267 50079	Connector BU6
32		1	4822 273 30136	Rotary switch SK2
33		1	4822 273 30135	Rotary switch SK3
34		1	4822 273 60058	Rotary switch SK10
35		1	4822 273 40178	Rotary switch SK12
36		1	4822 273 50078	Rotary switch SK13
37		1	4822 273 80098 PM6546	Rotary switch SK16
38	86	1	4822 277 20009	Sliding switch
39	86	2	4822 290 30094	Clamping spring
40	86	2	4822 462 70503	Protective cap
41	86	2m	4822 320 10008	Cable
42		1	4822 264 10006	BNC, long
43		1	4822 264 10028	BNC, short
44		1	4822 216 90175	Printed wiring board with components
C1 . . . 4		4	4822 121 40164	Capacitor 0.22 μF, 1000 V
R1,2		2	4822 111 50284	Resistor 100 MΩ, 5 %, 1 W
R3		1	4822 110 40161	Resistor 100 kΩ, 5 %, 0.5 W
			PM 6544, 47, 48	
		4	4822 268 10027	Plug pin
			PM 6547	
		1	4822 255 40002	Transistor holder
		3	4822 152 20377	Coil
			PM 6549A	
		1	4822 255 40001	Transistor holder

B. ELECTRICAL — ELEKTRISCH — ELEKTRISCH — ELECTRIQUE — ELECTRICOS

This parts list does not contain multi-purpose and standard parts. These components are indicated in the circuit diagram by means of identification marks. The specification can be derived from the survey below.

Diese Ersatzteilliste enthält keine Universal- und Standard-Teile. Diese sind im jeweiligen Prinzipschaltbild mit Kennzeichnungen versehen. Die Spezifikation kann aus nachstehender Übersicht abgeleitet werden.

In deze stuklijst zijn geen universele en standaardonderdelen opgenomen. Deze componenten zijn in het principeschema met een merkteken aangegeven. De specificatie van deze merktekens is hieronder vermeld.

La présente liste ne contient pas des pièces universelles et standard. Celles-ci ont été repérées dans le schéma de principe. Leurs specifications sont indiquées ci-dessous.

Esta lista de componentes no comprende componentes universales ni standard. Estos componentes están provistos en el esquema de principio de una marca. El significado de estas marcas se indica a continuación.

Carbon resistor E24 series
Kohleschichtwiderstand, Reihe E24
Koolweerstand E24 reeks
Résistance au carbone, série E24
Resistencia de carbón, serie E24
0,125 W 5%

Carbon resistor E12 series
Kohleschichtwiderstand, Reihe E12
Koolweerstand E12 reeks
Résistance au carbone, série E12
Resistencia de carbón, serie E12
0,25 W ≦ 1 MΩ, 5%
> 1 MΩ, 10%

Carbon resistor E24 series
Kohleschichtwiderstand, Reihe E24
Koolweerstand E24 reeks
Résistance au carbone, série E24
Resistencia de carbón, serie E24
0,5 W ≦ 5 MΩ, 1%
> 5 ≦ 10 MΩ, 2%
> 10 MΩ, 5%

Carbon resistor E12 series
Kohleschichtwiderstand, Reihe E12
Koolweerstand E12 reeks
Résistance au carbone, série E12
Resistencia de carbón, serie E12
0,5 W ≦ 1,5MΩ, 5%
> 1,5MΩ, 10%

Wire-wound resistor
Drahtwiderstand
Draadgewonden weerstand
Résistance bobinée
Resistencia bobinada
10 W 5%

Carbon resistor E12 series
Kohleschichtwiderstand, Reihe E12
Koolweerstand E12 reeks
Résistance au carbone, série E12
Resistencia de carbón, serie E12
1 W ≦ 2,2 MΩ, 5%
> 2,2 MΩ, 10%

Carbon resistor E12 series
Kohleschichtwiderstand, Reihe E12
Koolweerstand E12 reeks
Résistance au carbone, série E12
Resistencia de carbón, serie E12
2 W 5%

Wire-wound resistor
Drahtwiderstand
Draadgewonden weerstand
Résistance bobinée
Resistencia bobinada
0,4 – 1,8 W 0,5%

Wire-wound resistor
Drahtwiderstand
Draadgewonden weerstand
Résistance bobinée
Resistencia bobinada
5,5 W ≦ 200 Ω, 10%
> 200 Ω, 5%

Tubular ceramic capacitor
Rohrkondensator
Keramische kondensator, buistype
Condensateur céramique tubulaire
Condensador cerámico tubular
500 V

Tubular ceramic capacitor
Rohrkondensator
Keramische kondensator, buistype
Condensateur céramique tubulaire
Condensador cerámico tubular
700 V

Ceramic capacitor, "pin-up"
Keramikkondensator "Pin-up" (Perltyp)
Keramische kondensator "Pin-up" type
Condensateur céramique, type perle
Condensador cerámico, versión "colgable"
500 V

"Microplate" ceramic capacitor
Miniatur-Scheibenkondensator
"Microplate" keramische kondensator
Condensateur céramique "microplate"
Condensador cerámico "microplaca"
30 V

Mica capacitor
Glimmerkondensator
Micakondensator
Condensateur au mica
Condensador de mica
500 V

Polyester capacitor
Polyesterkondensator
Polyesterkondensator
Condensateur au polyester
Condensador polyester
400 V

Flat-foil polyester capacitor
Miniatur-Polyesterkondensator (flach)
Platte miniatuur polyesterkondensator
Condensateur au polyester, type plat
Condensador polyester, tipo de placas planas
250 V

Paper capacitor
Papierkondensator
Papierkondensator
Condensateur au papier
Condensador de papel
1000 V

Wire-wound trimmer
Drahttrimmer
Draadgewonden trimmer
Trimmer à fil
Trimmer bobinado

Tubular ceramic trimmer
Rohrtrimmer
Buisvormige keramische trimmer
Trimmer céramique tubulaire
Trimmer cerámico tubular

For multi-purpose and standard parts, please see PHILIPS' Service Catalogue.
Für die Universal- und Standard-Teile siehe den PHILIPS Service-Katalog.
Voor universele en standaardonderdelen raadplege men de PHILIPS Service Catalogus.
Pour les pièces universelles et standard veuillez consulter le Catalogue Service PHILIPS.
Para piezas universales y standard consulte el Catálogo de Servicio PHILIPS.

CONDENSATOREN

Item	Ordering number	Value	Tolerance	Voltage	Description
C101	4822 121 40047	10 nF	10 %	250 V	Tubular
C131	4822 121 40047	10 nF	10 %	250 V	Tubular
C161	4822 124 20091	8 µF		40 V	Electrolytic
C162	4822 121 50235	3.3 nF	10 %	125 V	Polyester
C163	4822 121 50149	2.2 nF	10 %	125 V	Polyester
C201	4822 124 20097	32 µF		64 V	Electrolytic
C202	4822 124 20056	6.4 µF		25 V	Electrolytic
C203	4822 121 40013	1 µF	10 %	250 V	Polyester
C205	4822 122 50032	680 pF	20 %	3000 V	Ceramic
C207	4822 121 40167	82 nF	10 %	400 V	Polyester
C208	4822 122 50031	1.5 nF	20 %	6000 V	Ceramic
C302	4822 121 40049	15 nF	10 %	250 V	Disc capacitor
C402	4822 121 40049	15 nF	10 %	250 V	Disc capacitor
C701	4822 124 40004	1250 µF		25 V	Electrolytic
C702	4822 124 40004	1250 µF		25 V	Electrolytic
C703	4822 124 40083	2500 µF		25 V	Electrolytic
C704	4822 124 40083	2500 µF		25 V	Electrolytic
C711	4822 124 30032	320 µF		64 V	Electrolytic
C713	4822 124 20093	8 µF		64 V	Electrolytic
C714	4822 124 20047	25 µF		40 V	Electrolytic
C721	4822 124 30032	320 µF		64 V	Electrolytic
C723	4822 124 20093	8 µF		64 V	Electrolytic
C724	4822 124 20047	25 µF		40 V	Electrolytic
C725	4822 124 20098	5 µF		64 V	Electrolytic
C726	4822 124 20098	5 µF		64 V	Electrolytic
C901	4822 121 40027	1.5 µF	10 %	100 V	Polyester
C902	4822 121 40044	560 nF	10 %	100 V	Polyester
C903	4822 121 40035	150 nF	10 %	100 V	Polyester
C904	4822 121 40097	270 nF	10 %	100 V	Polyester
C905	4822 124 20052	12.5 µF		25 V	Electrolytic
C906	4822 124 20052	12.5 µF		25 V	Electrolytic
C907	4822 124 20054	25 µF		25 V	Electrolytic
C908	4822 124 20052	12.5 µF		25 V	Electrolytic
C909	4822 124 20052	12.5 µF		25 V	Electrolytic
C910	4822 121 40097	150 nF	10 %	100 V	Polyester
C912	4822 124 20022	50 µF		40 V	Electrolytic
C914	4822 121 50275	150 nF	1 %	63 V	Polyester
C915	4822 121 50282	91 nF	1 %	63 V	Polyester
C918	4822 124 20086	16 µF		40 V	Electrolytic
C935	4822 121 40047	10 nF	10 %	250 V	Disc capacitor
C1302	4822 125 60015	18 pF		800/1300 V	Trimmer

RESISTORS

Item	Ordering number	Value	Tolerance	Power	Description
R1	4822 101 20084	10 kΩ	20 %	0.1 W	Carbon potentiometer
R108	4822 101 20084	10 kΩ	20 %	0.1 W	Carbon potentiometer
R111	4822 111 20034	100 kΩ	1 %	0.125 W	Carbon
R114	4822 111 20034	100 kΩ	1 %	0.125 W	Carbon
R120	4822 101 20073	1 kΩ	20 %	0.1 W	Carbon potentiometer
R123	4822 113 60027	1.2 Ω	10 %	2 W	Wire wound
R124	4822 110 60109	1.2 Ω	10 %	0.125 W	Carbon
R138	4822 101 20084	10 kΩ	20 %	0.1 W	Carbon potentiometer
R141	4822 111 20034	100 kΩ	1 %	0.125 W	Carbon
R144	4822 111 20034	100 kΩ	1 %	0.125 W	Carbon
R150	4822 101 20073	1 kΩ	20 %	0.1 W	Carbon potentiometer
R153	4822 113 60075	1.5 Ω	10 %	2 W	Wire wound (2 in par.)
R154	4822 110 60107	1 kΩ	5 %	0.125 W	Carbon
R157	4822 101 20076	4.7 kΩ	20 %	0.1 W	Carbon potentiometer
R165	4822 101 20071	100 kΩ	20 %	0.1 W	Carbon potentiometer
R172	4822 101 20081	470 kΩ	20 %	0.1 W	Carbon potentiometer
R209	4822 103 20081	470 kΩ	20 %	0.1 W	Carbon potentiometer
R301	4822 103 20191	15 kΩ	10 %	3 W	Wire potentiometer
R302a+b	4822 102 30085	47+470 kΩ		0.25 W	Dual carbon potentiometer
R303	4822 101 20076	4.7 kΩ	20 %	0.1 W	Carbon potentiometer
R304	4822 116 50245	14.5 kΩ	0.5 %	0.25 W	Metal film
R305	4822 101 20073	1 kΩ	20 %	0.1 W	Carbon
R310	4822 116 50246	10.7 kΩ	0.5 %	0.25 W	Metal film
R311	4822 101 20073	1 kΩ	20 %	0.1 W	Carbon potentiometer
R317	4822 116 50246	10.7 kΩ	0.5 %	0.25 W	Metal film
R318	4822 116 50247	3.6 kΩ	1 %	0.25 W	Metal film
R319	4822 101 20076	4.7 kΩ	20 %	0.1 W	Carbon potentiometer
R322	4822 116 50121	15 kΩ	0.5 %	0.25 W	Metal film (2 in par.)
R330	4822 112 10114	900 Ω	0.5 %	0.4 W	Wire wound (2 in par.)
R332	4822 113 10017 + 4822 112 10088	40 Ω	0.5 %	0.4 W	Wire wound (2 in par.)
R333	4822 112 10083	60 Ω	0.5 %	0.4 W	Wire wound (2 in par.)
R339	4822 116 50013	6 kΩ	0.5 %	0.25 W	Metal film
R340	4822 116 50189	10 kΩ	0.5 %	0.25 W	Metal film
R341	4822 116 50165	20 kΩ	0.5 %	0.25 W	Metal film
R342	4822 116 50145	60 kΩ	0.5 %	0.25 W	Metal film
R343	4822 116 50069	100 kΩ	0.5 %	0.25 W	Metal film
R346	4822 113 10017 + 4822 112 10088	40 Ω	0.5 %	0.4 W	Wire wound (in par.)
R347	4822 112 10083	60 Ω	0.5 %	0.4 W	Wire wound (in par.)
R353	4822 116 50013	6 kΩ	0.5 %	0.25 W	Metal film
R354	4822 116 50189	10 kΩ	0.5 %	0.25 W	Metal film
R355	4822 116 50165	20 kΩ	0.5 %	0.25 W	Metal film
R356	4822 116 50145	60 Ω	0.5 %	0.25 W	Metal film
R357	4822 116 50069	100 kΩ	0.5 %	0.25 W	Metal film
R359	4822 101 20076	4.7 kΩ	20 %	0.1 W	Carbon potentiometer
R365	4822 113 60026	0.82 Ω	10 %	2 W	Wire wound
R371	4822 116 50246	10.7 kΩ	1 %	0.25 W	Metal film
R372	4822 112 10087	91 Ω	1 %	0.4 W	Wire wound (2 in par.)
R381	4822 116 50248	3.43 kΩ	1 %	0.25 W	Metal film

Item	Ordering number	Value	Tolerance	Power	Description
R382	4822 116 50249	2.8 kΩ	1 %	0.25 W	Metal film
R383	4822 116 50037	8.45 kΩ	1 %	0.25 W	Metal film
R384	4822 116 50037	8.45 kΩ	1 %	0.25 W	Metal film
R385	4822 113 40035	333 Ω	0.5 %	0.4 W	Wire wound
R401a+b	4822 102 30085	47+470 kΩ		0.25 W	Dual carbon potentiometer
R402	4822 103 20186	47 kΩ		3 W	Wire potentiometer
R403	4822 101 20076	4.7 kΩ	20 %	0.1 W	Carbon potentiometer
R404	4822 116 50245	14.5 kΩ	0.5 %	0.25 W	Metal film
R405	4822 101 20073	1 kΩ	20 %	0.1 W	Carbon potentiometer
R407	4822 116 50254	1.74 kΩ	0.5 %	0.25 W	Metal film
R410	4822 116 50246	10.7 kΩ	0.5 %	0.25 W	Metal film
R417	4822 116 50246	10.7 kΩ	0.5 %	0.25 W	Metal film
R418	4822 116 50024	1.35 kΩ	0.5 %	0.25 W	Metal film
R419	4822 101 20076	4.7 kΩ	20 %	0.1 W	Carbon potentiometer
R422	4822 116 50121	15 kΩ	0.5 %	0.25 W	Metal film (2 in par.)
R428	4822 116 50037	8.45 kΩ	1 %	0.25 W	Metal film
R429	4822 116 50037	8.45 kΩ	1 %	0.25 W	Metal film
R430	4822 116 50249	2.8 kΩ	1 %	0.25 W	Metal film
R431	4822 116 50029	1.27 kΩ	1 %	0.25 W	Metal film (2 in par.)
R432	4822 116 50132 4822 116 50099	1.15 kΩ	1 %	0.25 W	Metal film (in par.)
R433	4822 116 50252	584 kΩ	1 %	0.25 W	Metal film
R434	4822 116 50253	323 kΩ	1 %	0.25 W	Metal film
R435	4822 116 50254	103 kΩ	1 %	0.25 W	Metal film
R436	4822 116 50255	51 kΩ	1 %	0.25 W	Metal film
R437	4822 116 50145	30 kΩ	1 %	0.25 W	Metal film (2 in par.)
R438	4822 116 50118	10 kΩ	1 %	0.25 W	Metal film
R439	4822 116 50118	5 kΩ	1 %	0.25 W	Metal film (2 in par.)
R445	4822 112 10081	50 Ω	.0.5 %	0.4 W	Wire wound (2 in par.)
R501	4822 113 60056	1 Ω	10 %	2 W	Wire wound
R502	4822 113 60056	1 Ω	10 %	2 W	Wire wound
R503	4822 112 20047	5.6 Ω	10 %	5.5 W	Wire wound
R504	4822 112 20105	8.2 Ω	10 %	5.5 W	Wire wound
R505	4822 112 20045	4.7 Ω	10 %	5.5 W	Wire wound
R506	4822 112 20054	10 Ω	10 %	5.5 W	Wire wound
R507	4822 112 20067	33 Ω	10 %	5.5 W	Wire wound
R508	4822 112 20072	47 Ω	10 %	5.5 W	Wire wound
R509	4822 112 20081	100 Ω	10 %	5.5 W	Wire wound
R510	4822 112 20094	330 Ω	5 %	5.5 W	Wire wound
R511	4822 110 40098	470 Ω	5 %	0.5 W	Carbon
R512	4822 110 40107	1 kΩ	5 %	0.5 W	Carbon
R513	4822 110 40121	3.3 kΩ	5 %	0.5 W	Carbon
R514	4822 110 40125	4.7 kΩ	5 %	0.5 W	Carbon
R515	4822 110 40134	10 kΩ	5 %	0.25 W	Carbon
R516	4822 110 50147	33 kΩ	5 %	0.25 W	Carbon
R517	4822 110 50152	47 kΩ	5 %	0.25 W	Carbon
R518	4822 110 50161	100 kΩ	5 %	0.25 W	Carbon
R519	4822 110 50174	330 kΩ	5 %	0.25 W	Carbon
R520	4822 110 50178	470 kΩ	5 %	0.25 W	Carbon
R521	4822 110 50187	1 MΩ	5 %	0.25 W	Carbon
R522	4822 110 50201	3.3 MΩ	10 %	0.25 W	Carbon

Item	Ordering number	Value	Tolerance	Power	Description
R523	4822 110 50205	4.7 MΩ	10 %	0.25 W	Carbon
R601	4822 115 80075				Shunt
R602	4822 115 80077				Shunt
R603	4822 115 80078				Shunt
R604	4822 115 80078				Shunt
R605	4822 115 80079				Shunt
R606	4822 115 80079				Shunt
R607	4822 116 50144	50 kΩ	0.5 %	0.25 W	Metal film
R608	4822 116 50145	30 kΩ	0.5 %	0.25 W	Metal film (2 in par.)
R609	4822 116 50118	10 kΩ	0.5 %	0.25 W	Metal film
R610	4822 116 50118	5 kΩ	0.5 %	0.25 W	Metal film (2 in par.)
R611	4822 112 10119	3 kΩ	0.5 %	0.4 W	Wire wound
R619	4822 112 10054	5 Ω	0.5 %	0.4 W	Wire wound (2 in par.)
R622	4822 115 80081				Shunt
R623	4822 115 80081				Shunt
R631	4822 110 30134	10 kΩ	1 %	0.125 W	Carbon
R708	4822 113 10001	1.54 kΩ	1 %	0.4 W	Wire wound
R728	4822 113 10001	1.54 kΩ	1 %	0.4 W	Wire wound
R802	4822 101 20071	100 kΩ	20 %	0.1 W	Carbon potentiometer
R806	4822 101 20076	4.7 kΩ	20 %	0.1 W	Carbon potentiometer
R811	4822 101 20073	1 kΩ	20 %	0.1 W	Carbon potentiometer
R833	4822 101 20084	10 kΩ	20 %	0.1 W	Carbon potentiometer
R841	4822 116 30062	15 kΩ	20 %	0.6 W	N.T.C.
R901	4822 101 50059	47 kΩ	20 %	0.125 W	Carbon potentiometer
R902	4822 103 20094	10 kΩ	5 %	3 W	Wire potentiometer
R903	4822 103 20081	22 kΩ	20 %	0.1 W	Carbon potentiometer
R905	4822 101 20084	10 kΩ	20 %	0.1 W	Carbon potentiometer
R962	4822 116 50366	151.5 kΩ	0.25 %	0.25 W	Metal film
R966	4822 116 50367	85.9 kΩ	0.25 %	0.25 W	Metal film
R970	4822 116 50368	59.9 kΩ	0.25 %	0.25 W	Metal film
R974	4822 116 50369	46 kΩ	0.25 %	0.25 W	Metal film
R978	4822 116 50371	37.25 kΩ	0.25 %	0.25 W	Metal film
R982	4822 116 50372	31.24 kΩ	0.25 %	0.25 W	Metal film
R986	4822 116 50373	26.83 kΩ	0.25 %	0.25 W	Metal film
R1001	4822 113 80027	47 kΩ	5 %	16 W	Wire wound
R1002	4822 113 80015	33 kΩ	5 %	16 W	Wire wound
R1003	4822 115 40109	10 kΩ	5 %	16 W	Wire wound
R1004	4822 115 40095	4.7 kΩ	5 %	16 W	Wire wound
R1005	4822 115 50102	3.3 kΩ	5 %	40 W	Wire wound
R1006	4822 115 50073	1 kΩ	5 %	40 W	Wire wound
R1007	4822 115 50069	470 Ω	5 %	40 W	Wire wound
R1008	4822 115 50067	330 Ω	5 %	40 W	Wire wound
R1009	4822 115 50062	100 Ω	5 %	40 W	Wire wound (adjusted to 100 Ω)
R1010	4822 115 50061	47 Ω	5 %	40 W	Wire wound (adjusted to 47 Ω)
R1011	4822 115 50059	33 Ω	5 %	40 W	Wire wound (adjusted to 33 Ω)
R1012	4822 115 50055	10 Ω	5 %	40 W	Wire wound
R1013	4822 115 50119	4.7 Ω	5 %	40 W	Wire wound
R1014	4822 115 50002	3.3 Ω	10 %	25 W	Wire wound
R1303	4822 101 20084	10 kΩ	20 %	0.1 W	Carbon potentiometer
R1304	4822 101 20084	10 kΩ	20 %	0.1 W	Carbon potentiometer

MISCELLANEOUS

Item	Ordering number		Description
T1	2422 530 01407		Variable transformer (supplied by ELCOMA)
T2	4822 146 40163		Mains transformer
T3	4822 148 20075		Collector transformer
T4	4822 148 20075		Collector transformer
T201	4822 158 40034		H.T. transformer
T1101	4822 148 20076		H.T. transformer
L1	4822 150 10072		Deflection coil
L601	4822 158 10132		Wide-band choke
L1201	4822 526 10036		Wide-band choke
L1202	4822 526 10036		Wide-band choke
L1203	4822 526 10036		Wide-band choke
L1204	4822 526 10036		Wide-band choke
LA1	4822 134 40054	6 V, 0.1 A	Bulb
LA2	4822 134 40005	6.3 V, 0.63 W	Bulb
LA3	4822 134 40005	6.3 V, 0.63 W	Bulb
B1	AW 17/69		C.R.T.
	Complete printed-wiring boards		
U1	4822 216 90074		Final amplifier
U2	4822 216 90075		H.T. circuit
U3A	4822 216 90076		Pre-amplifier
U3B	4822 216 90177		X-deflection coefficients
U3C	4822 216 90078		X-deflection coefficients
U4A	4822 216 90176		Pre-amplifier
U4B	4822 216 90079		Y-deflection coefficients
U4C	4822 216 90081		Y-deflection coefficients
U5A	4822 216 90082		Base resistors
U6A	4822 216 90083		Shunt plate
U7	4822 216 90084		Power supply
U8A	4822 216 90178		Final amplifier
U9A	4822 216 90086		Step generator
U9B	4822 216 90087		Ring counter
U11A	4822 216 90088		H.T. circuit
U13	4822 216 90089		Adjusting circuit
RE801	4822 280 70032		Relay
VL1	4822 253 30025	2A, delayed action	Fuse
VL2	4822 253 30025	2A, delayed action	Fuse

TRANSISTORS

Item	Type			Item	Type		
TS101	BC107			TS407	4822 130 40201	2N3703	Texas instruments
TS102	BC107			TS701	BDY11		
TS103	BC107			TS702	4822 130 40201	2N3703	Texas instruments
TS104	AF118			TS703	4822 130 40201	2N3703	Texas instruments
TS105	BFY67			TS704	BC107		
TS106	4822 130 40021	2N2905	Texas instruments	TS705	BC107		
TS131	BC107			TS706	BC107		
TS132	BC107			TS711	BDY11		
TS133	BC107			TS712	BC107		
TS134	AF118			TS713	BC107		
TS135	BFY67			TS714	4822 130 40201	2N3703	Texas instruments
TS136	4822 130 40021	2N2905	Texas instruments	TS715	BC107		
TS161	BC107			TS716	BC107		
TS162	4822 130 40201	2N3703	Texas instruments	TS801	4822 130 40201	2N3703	Texas instruments
TS201	4822 130 40201	2N3703	Texas instruments	TS802	BC107		
TS202	BC107			TS803	4822 130 40201	2N3703	Texas instruments
TS203	ASZ18			TS804	BC107		
TS301-			3N124 Motorola	TS805	BC107		
306	4822 130 40139		selected *)	TS806	AF118		
TS302	BC107			TS807	BFY51		
TS303	4822 130 40201	2N3703	Texas instruments				
				TS808	BFY52		
TS304	BC107			TS809	4822 130 40021	2N2905	Texas instruments
TS305	BC107			TS810	4822 130 40211	2N3713	Motorola
TS307	4822 130 40201	2N3703	Texas instruments	TS811	4822 130 40211	2N3713	Motorola
TS321	BC107			TS812	AF118		
TS322	BC107		for-103-version				
TS401-			3N124 Motorola	TS813	BC107		
406	4822 130 40139		selected *)	TS814	4822 130 40139	3N124	Motorola selected
TS402	BC107			TS901	BC107		
TS403	4822 130 40201	2N3703	Texas instruments	TS902	BC107		
TS404	BC107						
TS405	BC107						

*) When one FET of one of these pairs should be replaced, the whole pair should be replaced.

DIODES

Item	Type			Item	Type	
TS903	BC107			GR1	4822 130 30198	KBS01 (2) Pirelli
TS904	BC107			GR101	BAX16	selected
TS905	4822 130 40201	2N3703	Texas instruments	GR102	BAX16	selected
TS906	BC107			GR103	AAZ15	
TS907	BC107			GR104	BAX16	
TS911	BC107			GR105	AAZ18	
TS912	BC107			GR106	AAZ18	
TS913	4822 130 40201	2N3703	Texas instruments	GR131	BAX16	selected
TS914	BC107			GR132	BAX16	selected
TS915	4822 130 40201	2N3703	Texas instruments	GR133	AAZ15	
TS916	BC107			GR134	BAX16	
TS917	4822 130 40201	2N3703	Texas instruments	GR135	AAZ18	
TS918	BC107			GR136	AAZ18	
TS919	4822 130 40201	2N3703	Texas instruments	GR161	OA95	
TS920	BC107			GR162	OA95	
TS921	4822 130 40201	2N3703	Texas instruments	GR163	OA95	
TS922	BC107			GR164	OA95	
TS923	4822 130 40201	2N3703	Texas instruments	GR201	BYX10	
TS924	BC107			GR202	BYX10	
TS925	4822 130 40201	2N3703	Texas instruments	GR203	BY140	
TS926	BC107			GR205	BY140	
TS927	4822 130 40201	2N3703	Texas instruments	GR301	BAY32	
TS928	4822 130 40201	2N3703	Texas instruments	GR302	BAY32	
				GR303	BA114	
				GR304	BZY59	
				GR305	BZY59	
				GR306	BA114	
				GR307	BAY32	
				GR308	BAY32	
				GR309	BA114	
				GR310	BA114	
				GR311	BZY59	
				GR401	BAY32	
				GR402	BAY32	
				GR403	BA114	
				GR404	BZY59	
				GR405	BZY59	
				GR406	BA114	
				GR407	BAY32	
				GR408	BAY32	
				GR409	BA114	
				GR410	BA114	
				GR701	4822 130 30198	KBS01 (2) Pirelli
				GR702	BY123	
				GR711	BAX16	
				GR712	BAX16	
				GR713	BAX16	
				GR714	BZY/C5V6	
				GR716	BYX10	

Item	Type
GR721	BAX16
GR722	BZY88/C5V6
GR724	BYX10
GR801	BAX16
GR802	BAX16
GR803	BZY60
GR804	BAX16
GR805	BAX16
GR901	BAX16
GR902	BAX16
GR903	BAX16
GR904	BAX16
GR905	BAX16
GR906	BAX16
GR907	BAX16
GR908	BAX16
GR909	OA95
GR910	BAX16
GR911	BAX16
GR912	BAX16
GR913	BAX16
GR914	BAX16
GR915	BAX16
GR916	OA95
GR917	OA95
GR918	OA95
GR919	OA95
GR920	OA95
GR923	OA95
GR925 . . . 940	OA95
GR1101	BY140
GR1301	BAX16
GR1501	BYX10
GR1502	BYX10
GR1503	BYX20/400R
GR1504	BYX20/400R

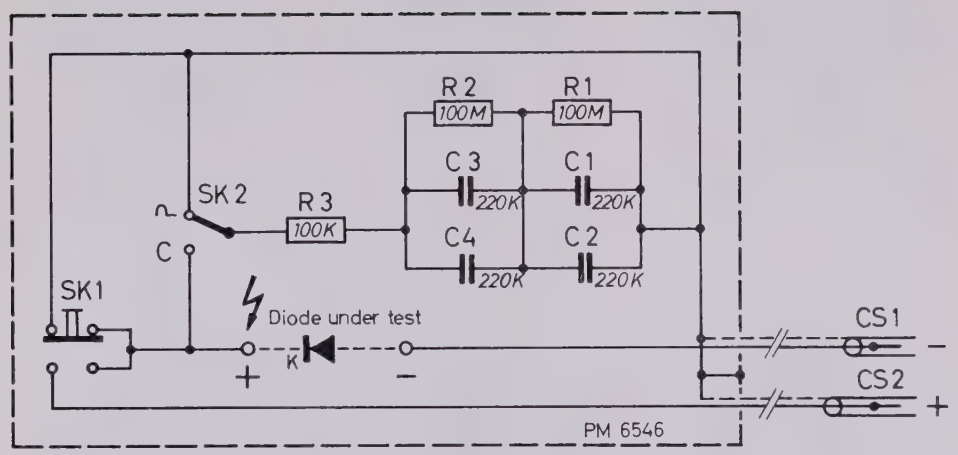

Fig. 87. Diagram PM 6546

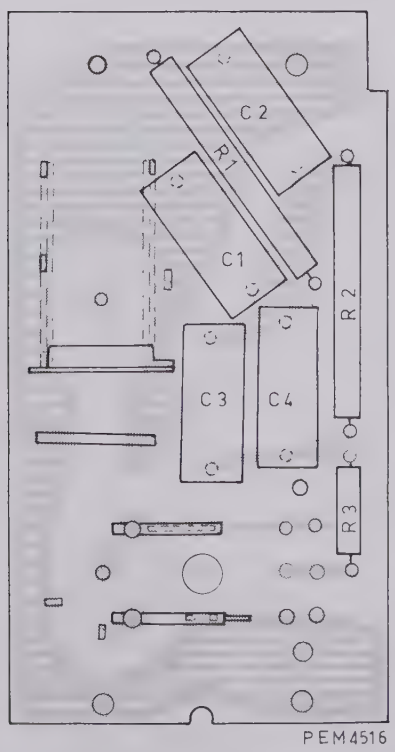

Fig. 88. Printed wiring board PM 6546

SK2/I

SK2/II

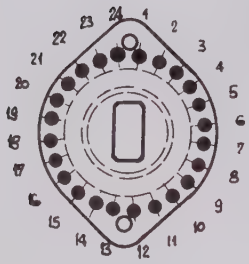

Fig. 89. Switch wafers SK2

SK10/I

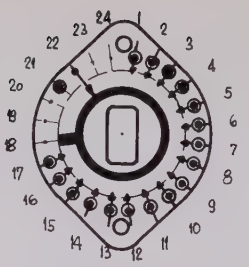

SK10/III

SK10/II

SK10/IV

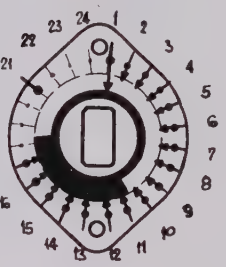

Fig. 90. Switch wafers SK10

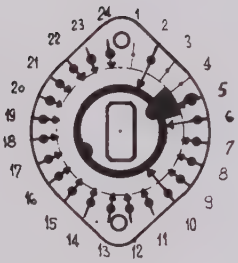

SK12/I

SK12/II

Fig. 91. Switch wafers SK12

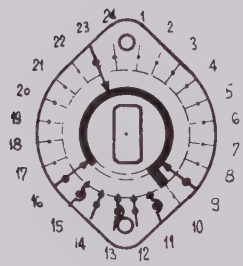

SK13/I

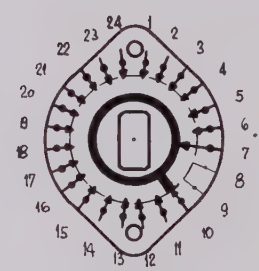

SK13/III

SK13/II

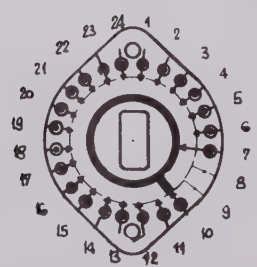

SK13/IV

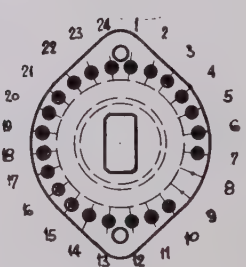

Fig. 92. Switch wafers SK13

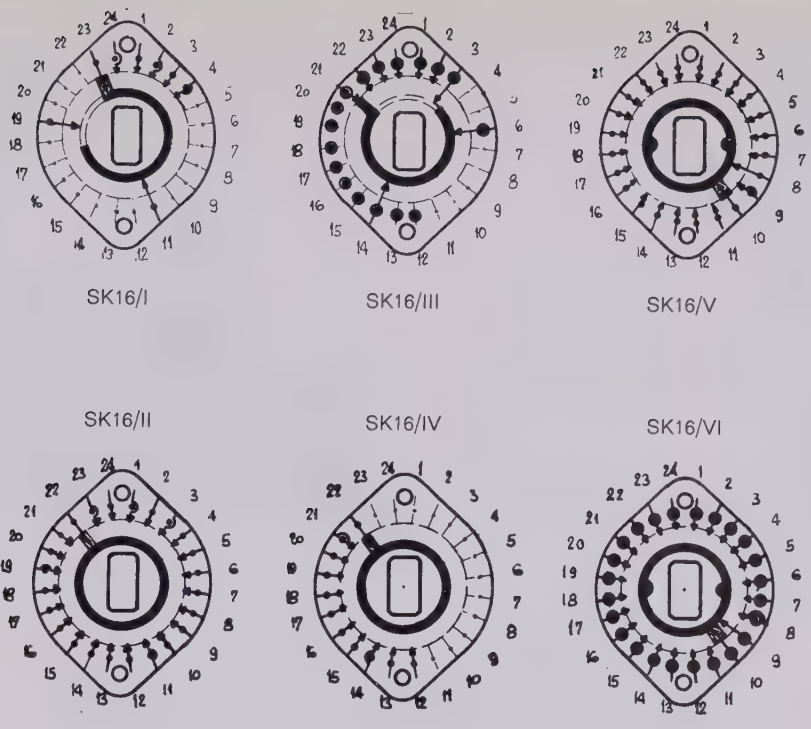

Fig. 93. Switch wafers SK16

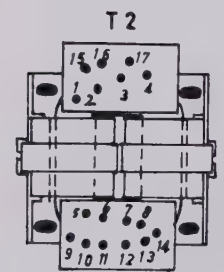

Fig. 94. Connection diagram for mains transformer T2

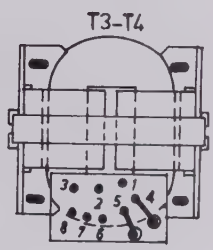

Fig. 95. Connection diagram for collector transformers T3 and T4

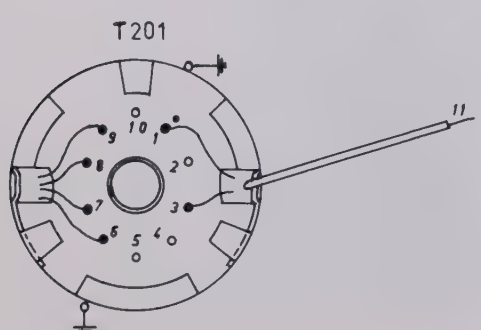

Fig. 96. Connection diagram for H.T. transformer T201

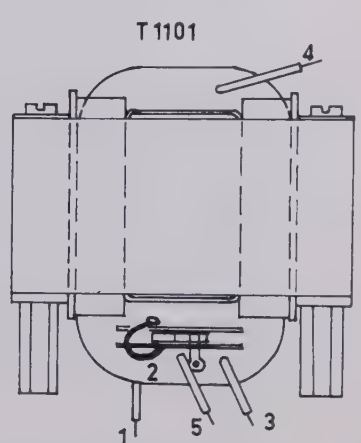

Fig. 97. Connection diagram for H.T. transformer T1101

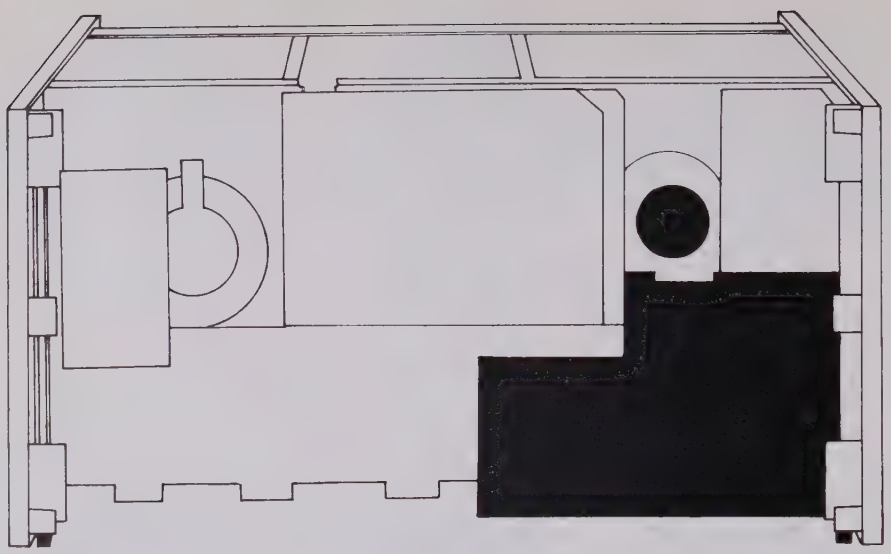

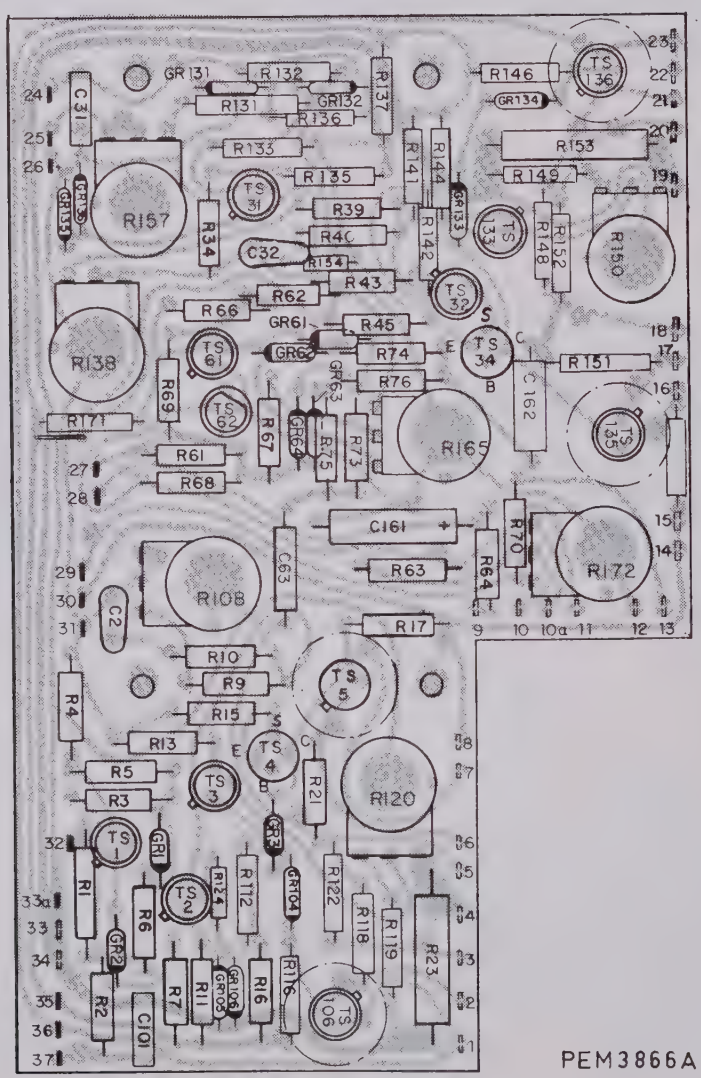

Fig. 98. Printed wiring board U1, final amplifier

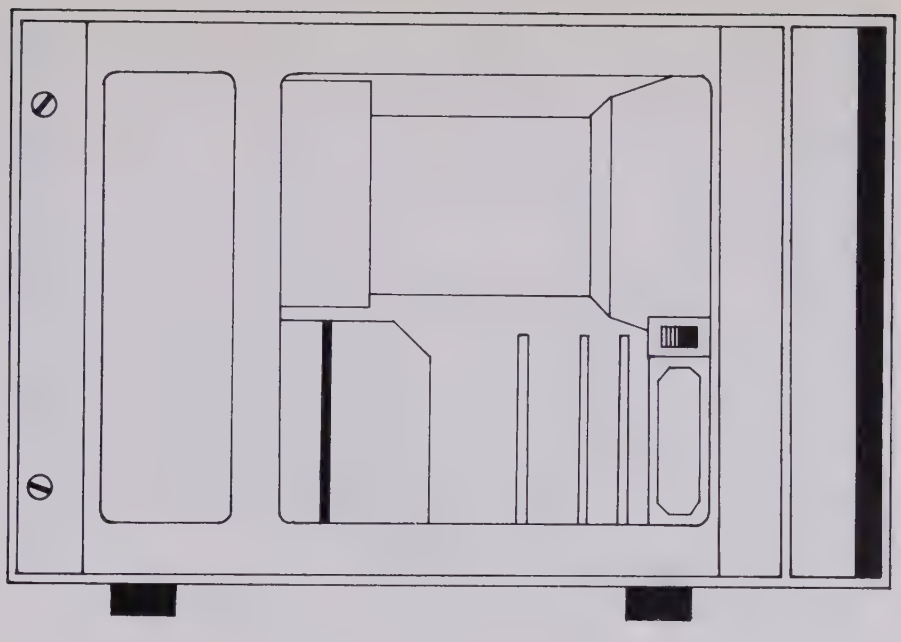

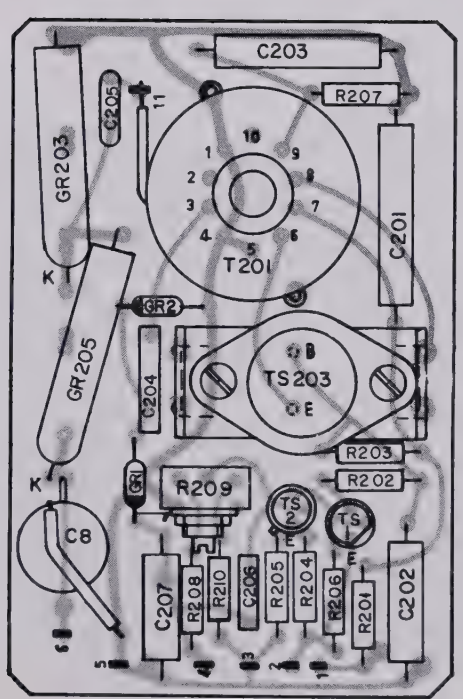

Fig. 99. Printed wiring board U2, H.T. circuit

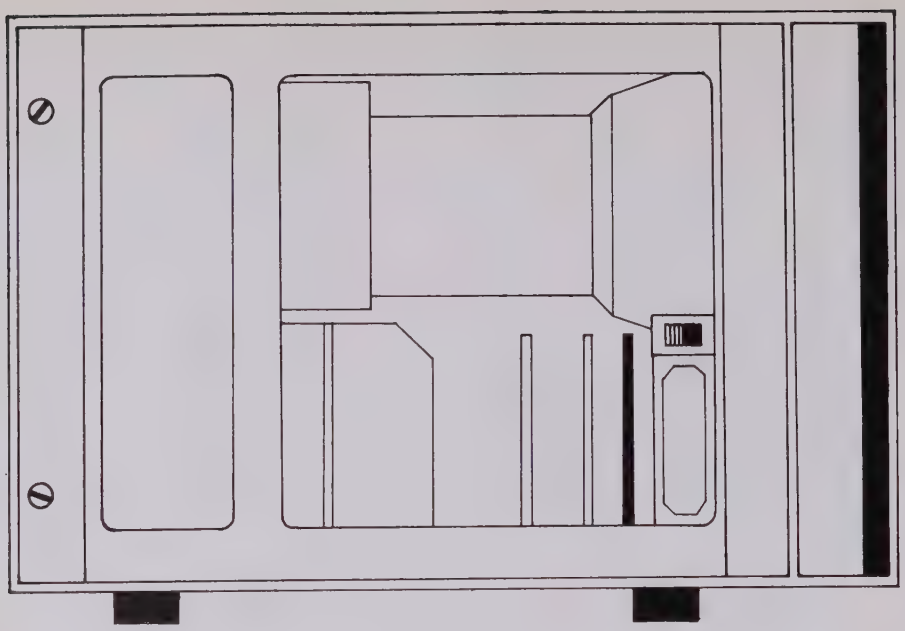

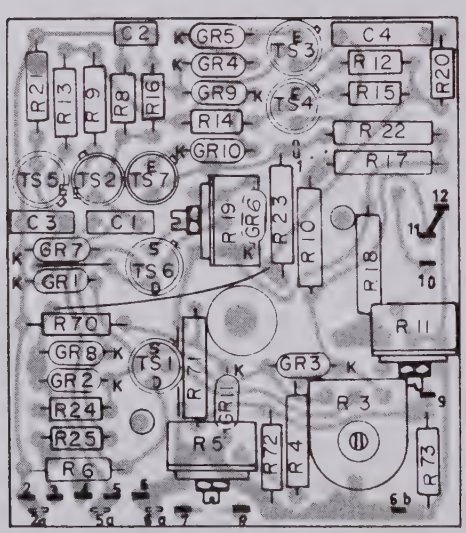

Fig. 100. Printed wiring board U3A, pre-amplifier

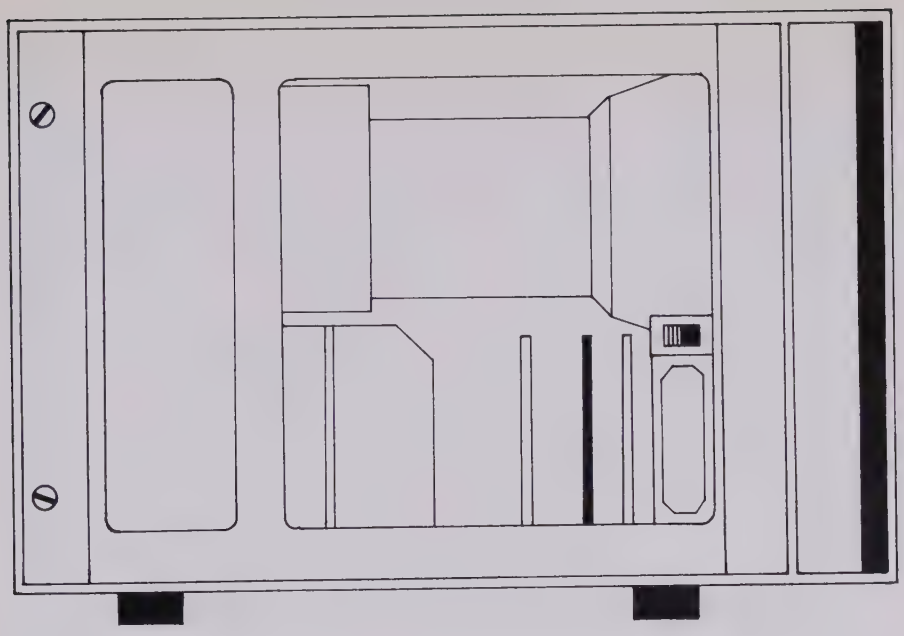

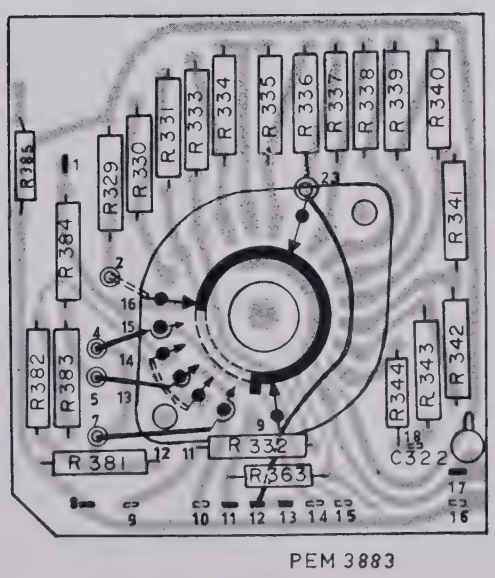

Fig. 101. Printed wiring board U3B, X-deflection

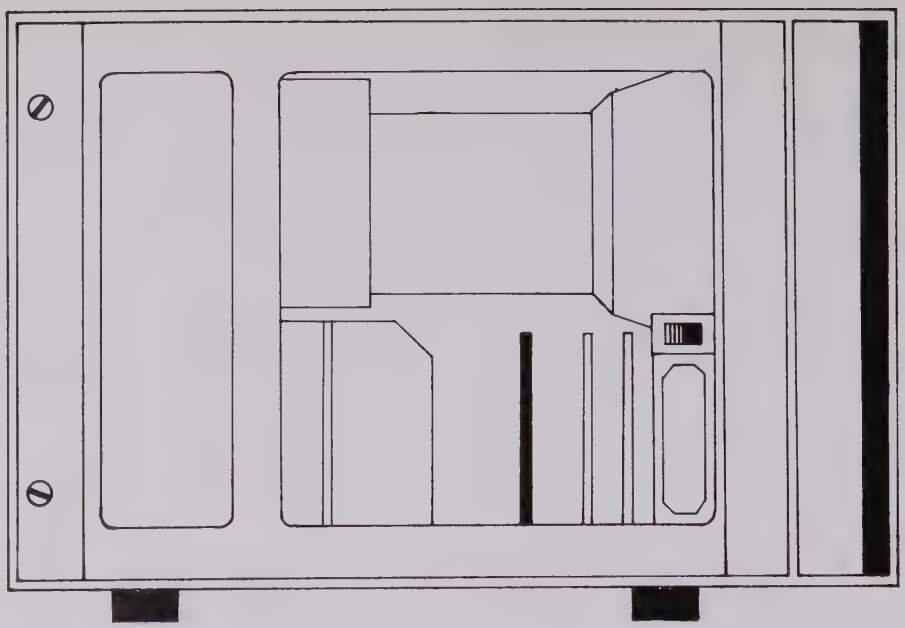

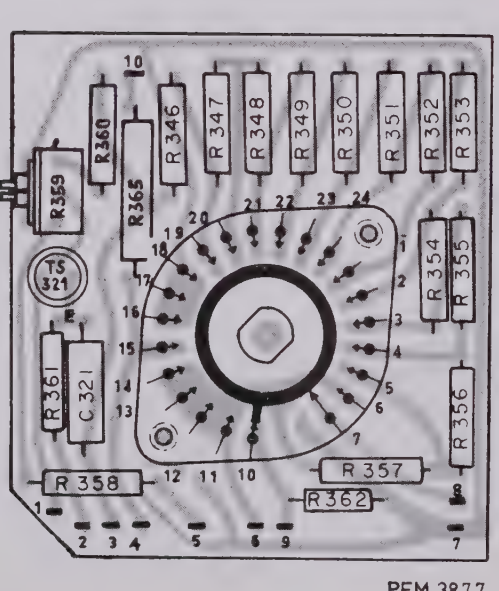

Fig. 102. Printed wiring board U3C, X-deflection

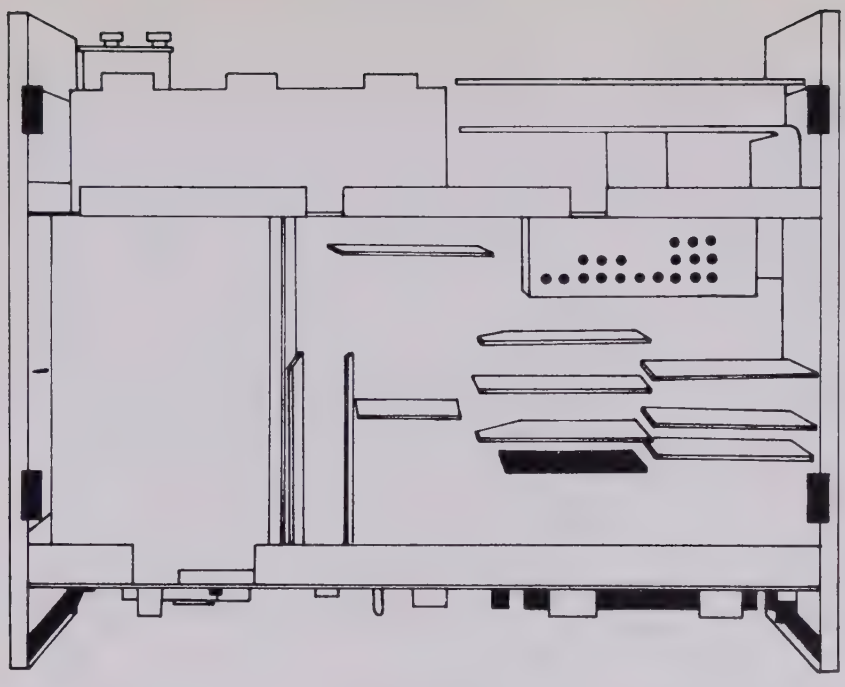

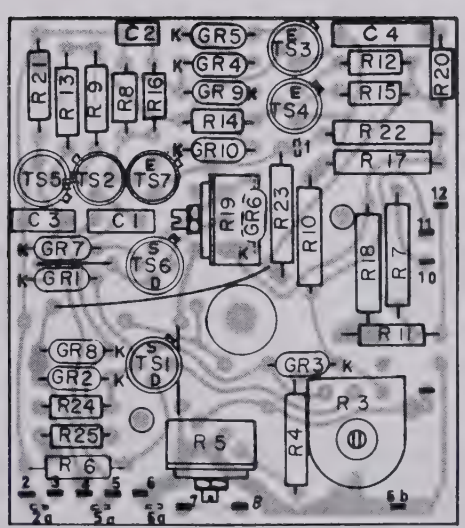

Fig. 103. Printed wiring board U4A, pre-amplifier

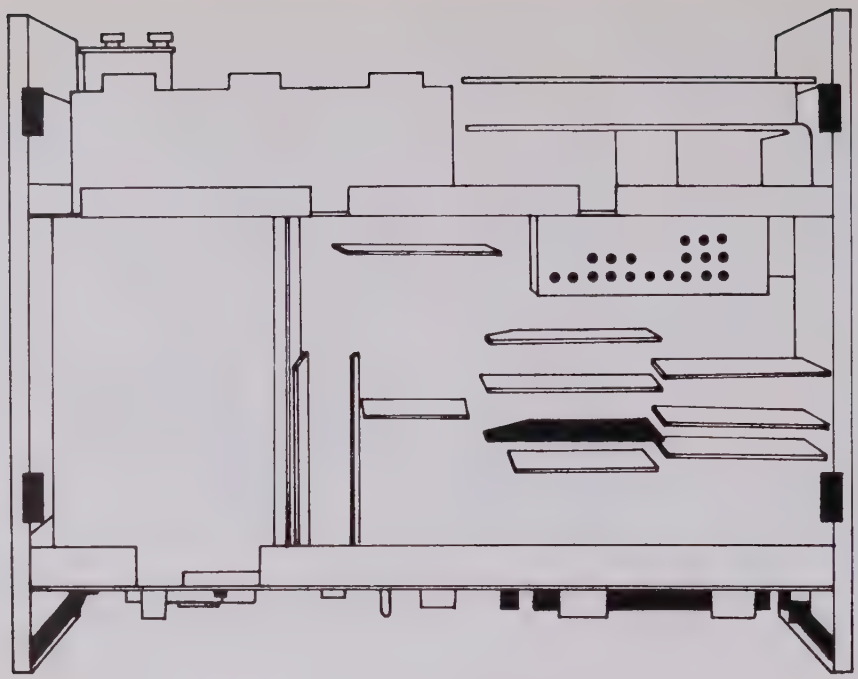

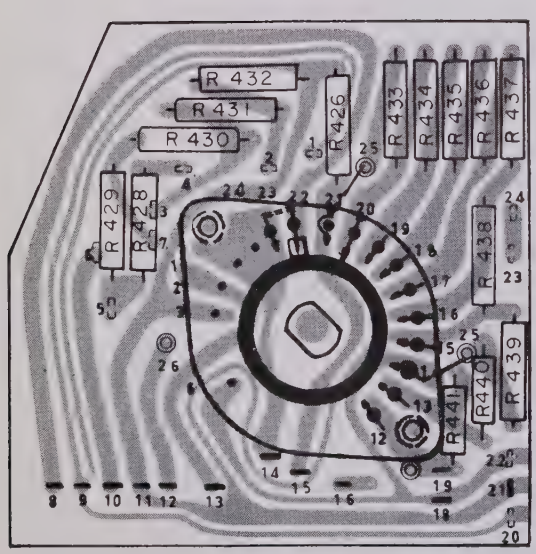

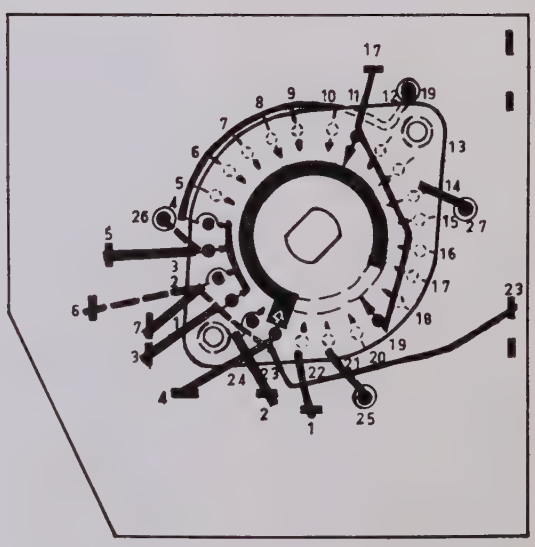

PEM 4873

Fig. 104. Printed wiring board U4B, Y-deflection

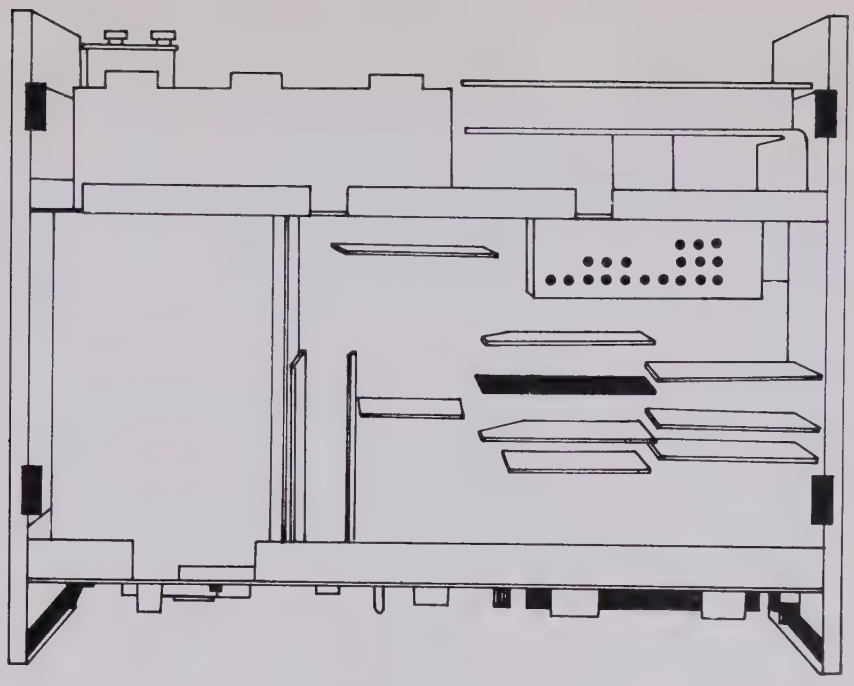

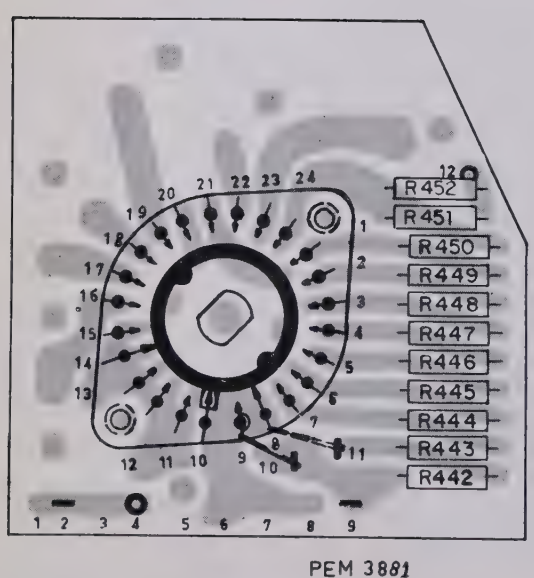

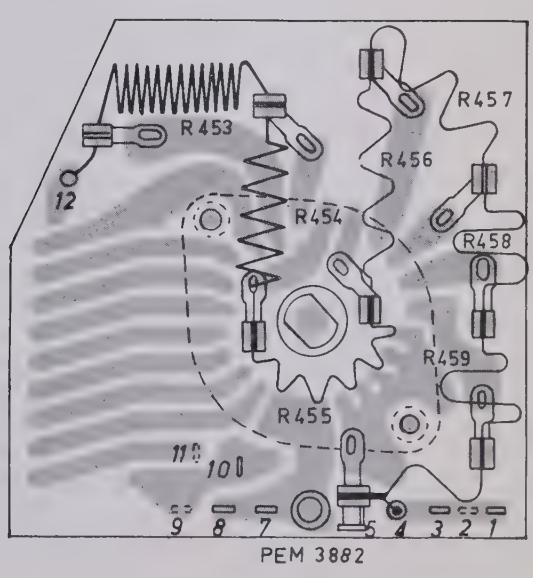

Fig. 105. Printed wiring board U4C, Y-deflection

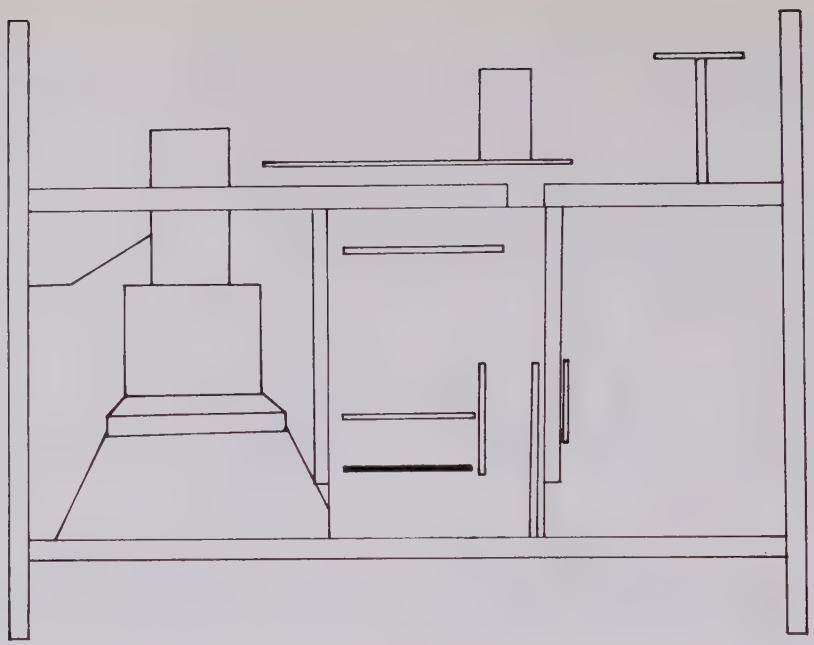

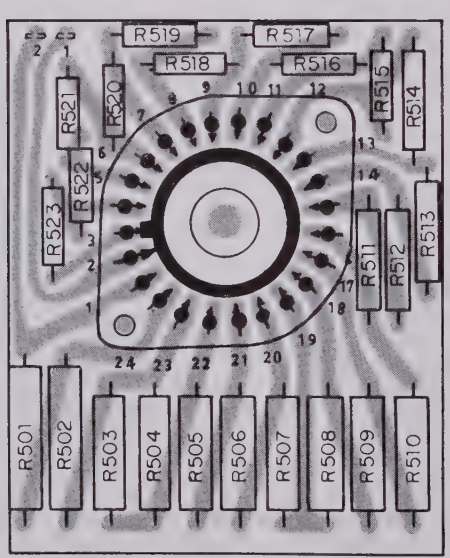

Fig. 106. Printed wiring board U5A, base resistors

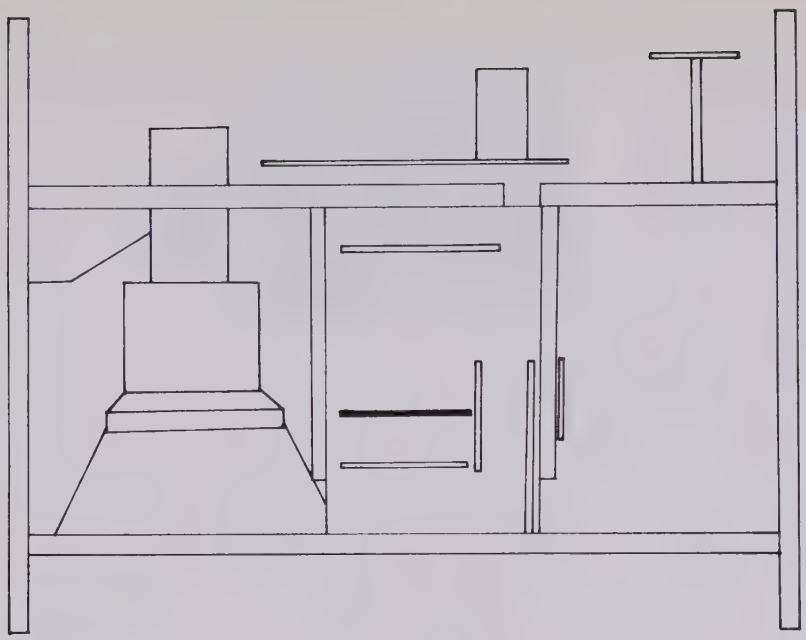

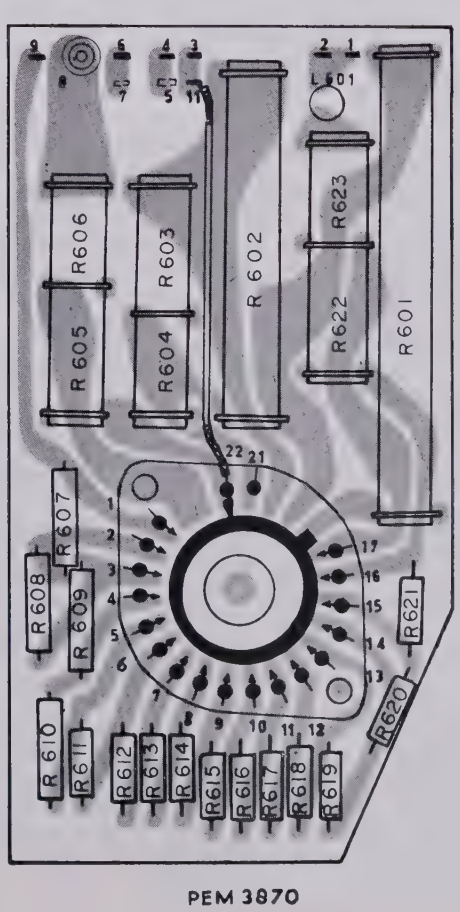

Fig. 107. Printed wiring board U6A, shunt plate

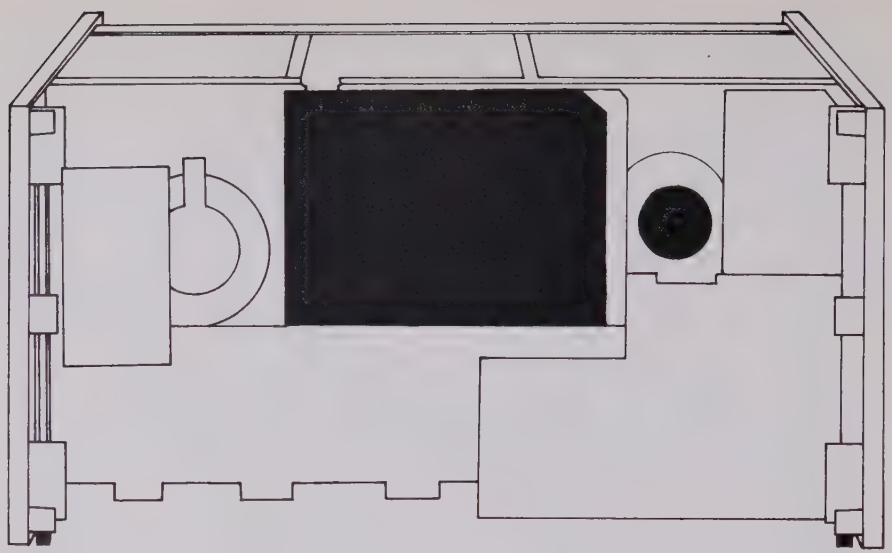

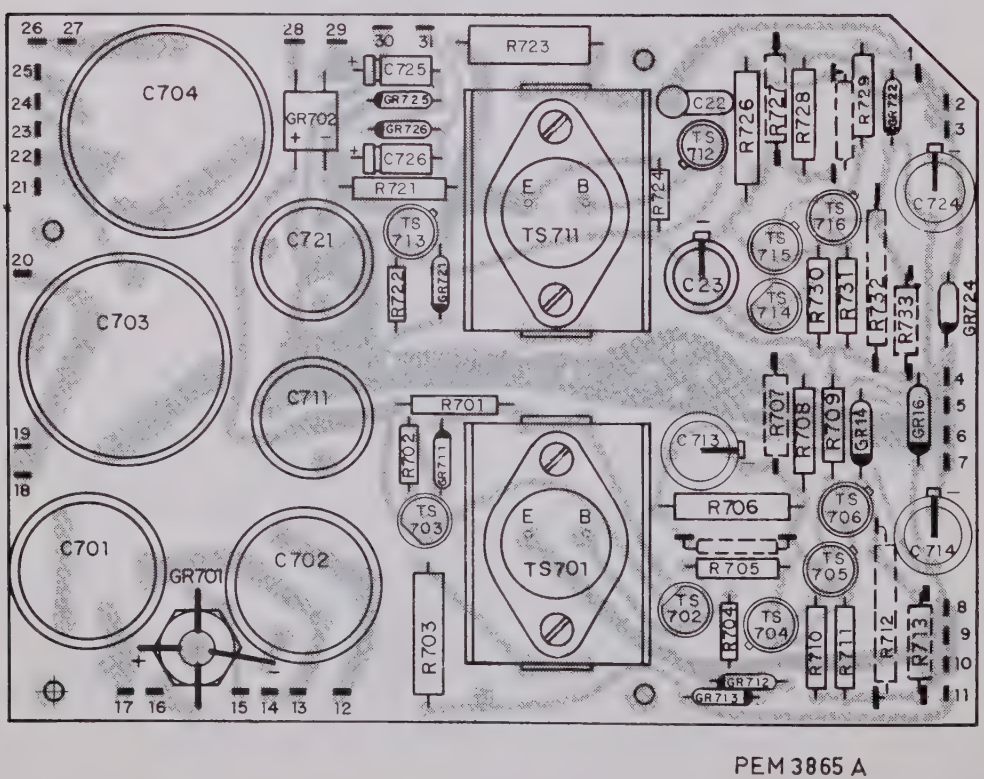

Fig. 108. Printed wiring board U7, power supply

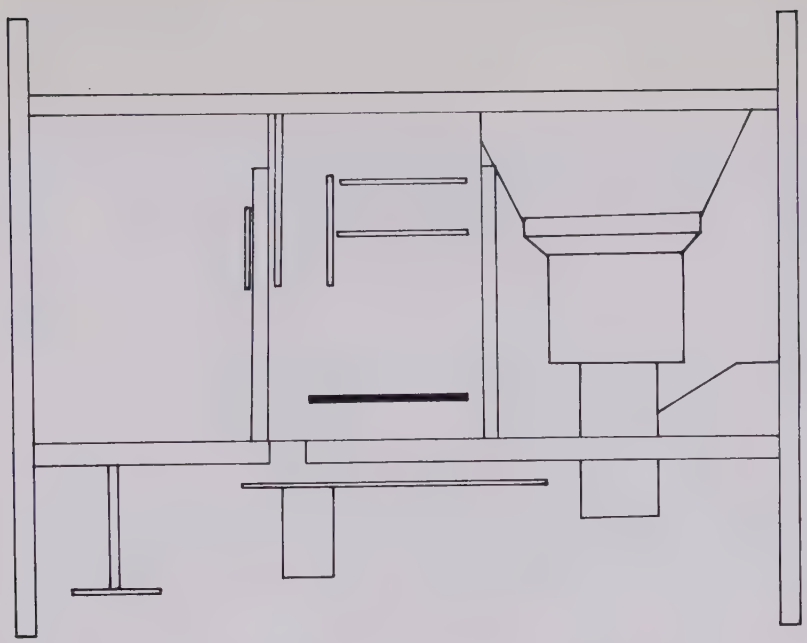

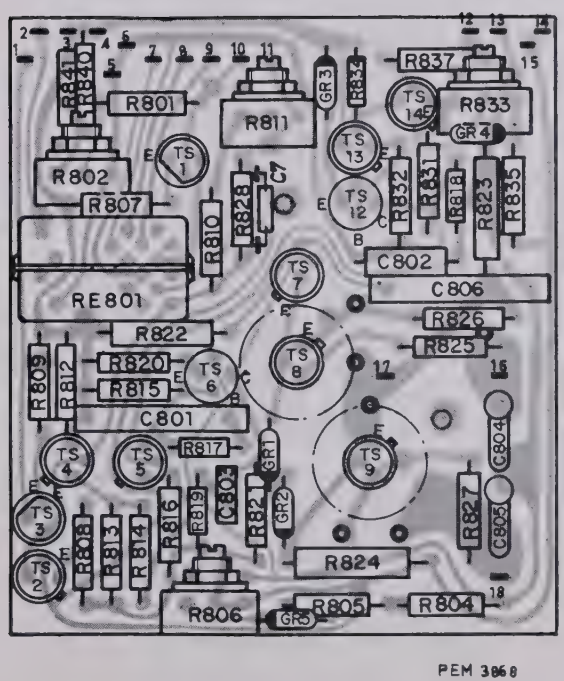

Fig. 109. Printed wiring board U8A, final amplifier

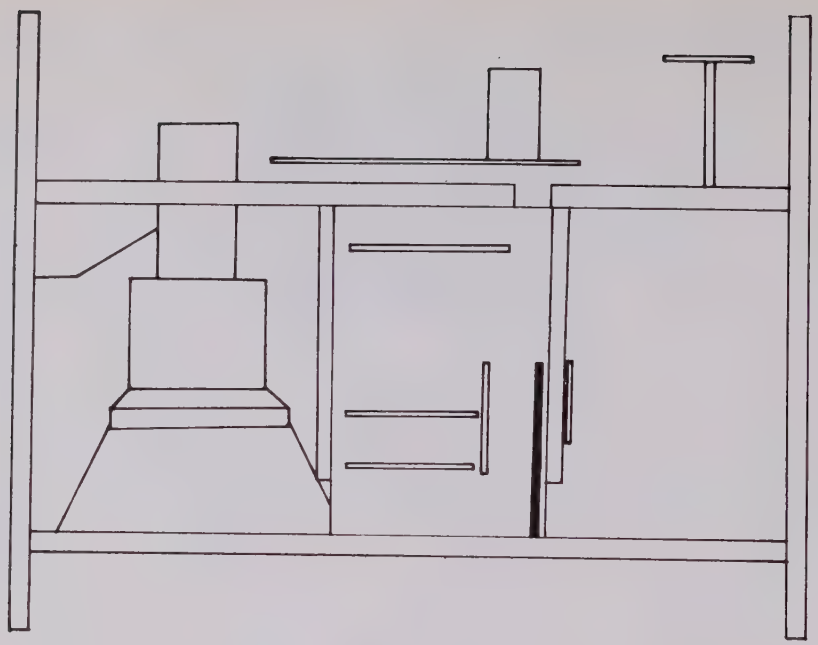

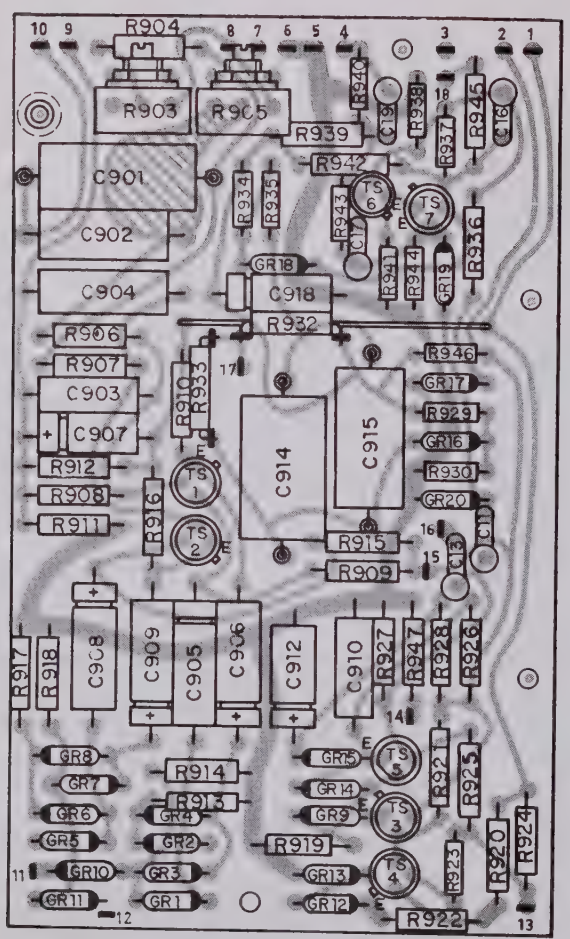

Fig. 110. Printed wiring board U9A, step generator

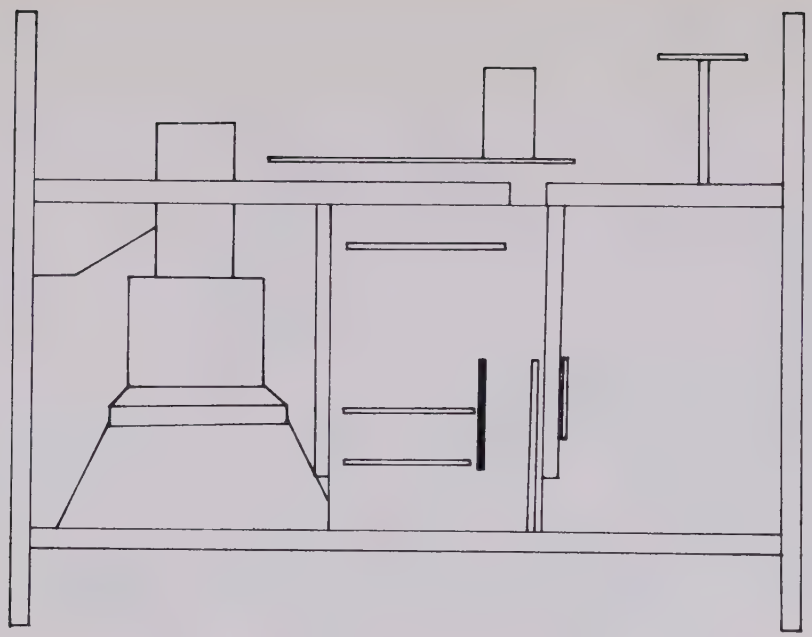

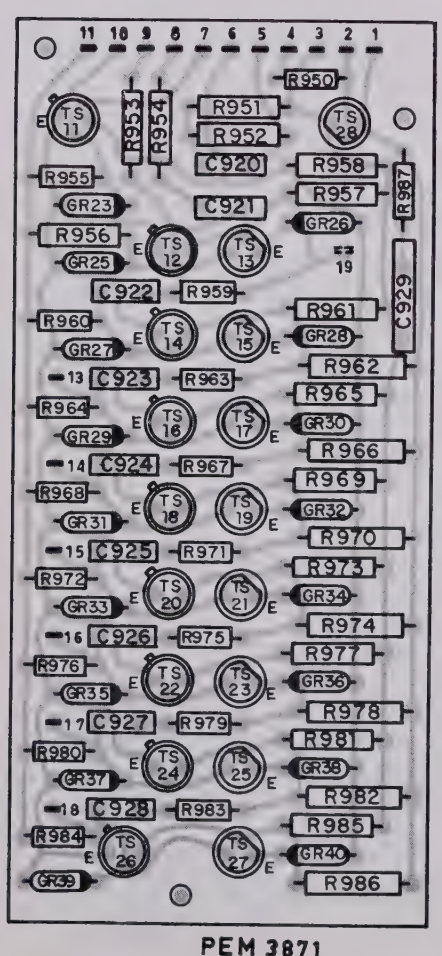

Fig. 111. Printed wiring board U9B, ring-counter

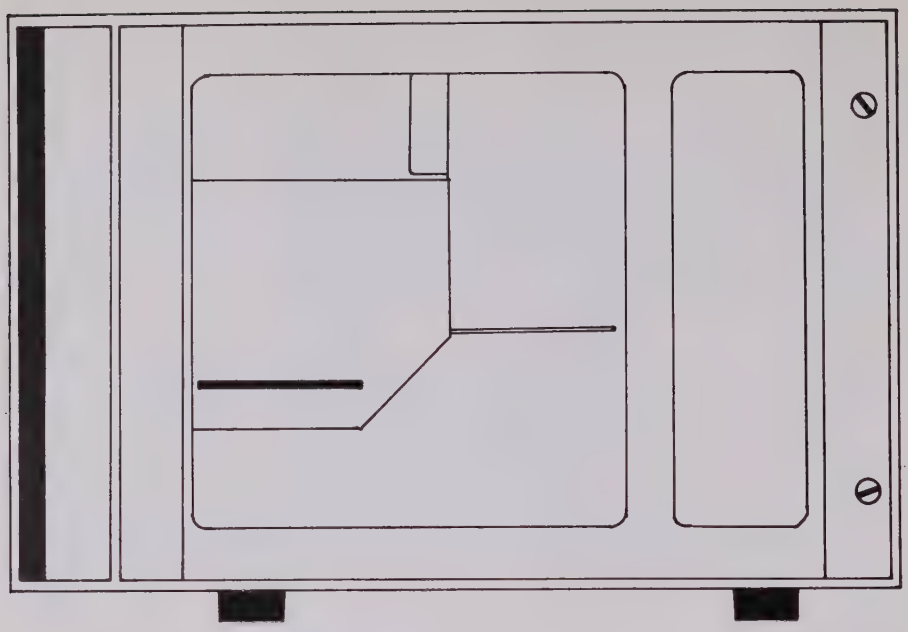

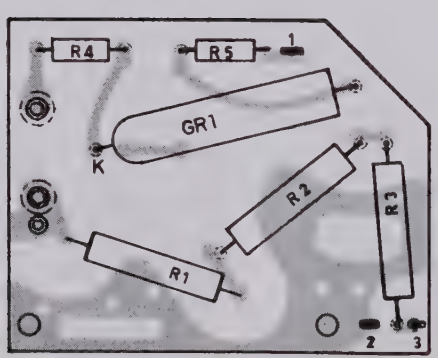

PEM 3878

Fig. 112. Printed wiring board U11A, high-tension unit

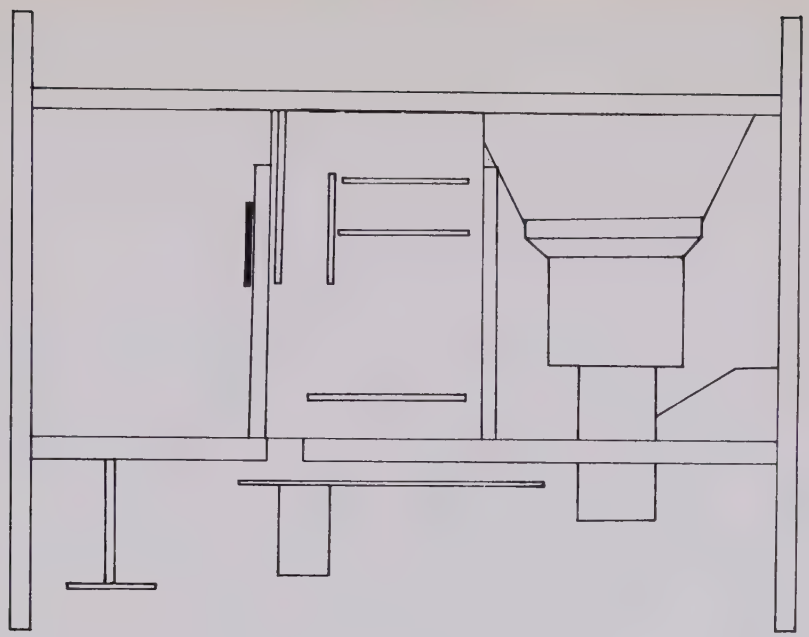

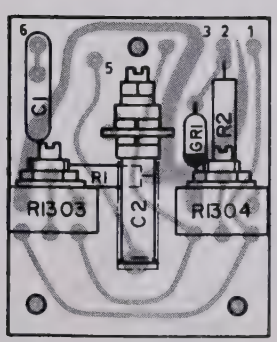

PEM 3874

Fig .113. Printed wiring board U13, adjusting circuit

For the -/03-version an extra transistor TS322 has been added on unit U3C. This transistor has been mounted in such way that it forms a Darlington circuit together with TS321. The collector of TS322 has been connected to the collector of TS321, its emitter to the base of TS321 and its base to the cursor of potentiometer R359. The type of TS322 is BC107.

Fig. 114. Circuit diagram PM 6507

Sales and service all over the world

Algèrie: S.A. Philips Nord-Africaine, Route de la Femme Sauvage, Alger; tel. 647 200/1/2
Argentina: Philips Argentina S.A., Casilla Correo 3479, Buenos Aires; tel. T.E. 70, 7741 al 7749
Australia: Philips Electrical (Pty) Ltd., P.O.B. 2703 G.P.O., 69-79 Clarence Street, Sydney; tel. 20-223
België/Belgique: M.B.L.E., 66 Boulevard de l'Impératrice, Bruxelles; tel. 13.44.44
Bolilvia: Philips Sudamericana, Casilla 1609, La Paz; tel. 5270-5664
Brasil: Messrs. Inbelsa, Rua Amador Bueno 474, Caixa Postal 3159; Sao Paulo; tel. 93-9191
Burma: U Thoung Tin, 36, Barr Street, Rangoon
Burundi: Philips S.A.R.L., Avenue de Grèce, B.P. 900, Bujumbura
Canada: Phililps Electronic Industries, Electronic Equipment Division, 116 Vanderhoof Avenue, Toronto 17, Ontario; tel. 425-5161
Chile: Philips Chiléna S.A., Casilla 2687, Santiago de Chile; tel. 35081
Colombia: Philips Colombiana S.A., Communications Department, Apartado Nacional 1505, Bogotá; tel. 473-640
Congo: Philips S.A.R.L., 620, Avenue Industrielle, B.P. 2546, Lubumbashi; Philips Congo S.C.R.L., 137, Boulevard du 30 Juin, B.P. 1798, Kinshasa; 52, Avenue des Eucalyptus, B.P. 2020, Stanleyville
Costa Rica: Philips de Costa Rica Ltd., Apartado Postal 4325, San José; tel. 5670
Curaçao: Philips Antillana N.V., Postbus 523, Willemstad; tel. Curaçao 36222-35464
Danmark: Philips A.S., Prags Boulevard 80, Kobenhavn; tel. Asta 2222
Deutschland (Bundesrepublik): Philips Industrie Elektronik GmbH., Röntgenstrasse 22, Postfach 111, 2 Hamburg 63; tel. 501031
Ecuador: Philips Ecuador S.A., Casilla 343, Quito; tel. 30064
El Salvador: Philips de El Salvador, Apartado Postal 865, San Salvador; tel. 7441
España: Philips Ibérica S.A.E., Avenida de America, Apartado 2065, Madrid; tel. 2462200
Ethiopia: Philips Ethiopia Priv. Ltd., Co., P.O.B. 659, Cunningham Street, Addis Abeba; tel. 13440
France: Philips Industrie S.A., 105 Rue de Paris, Bobigny 93; tel. 845 28-55, 845 27-09
Ghana: Philips (Ghana) Ltd., P.O. Box M 14, Accra
Great Britain: M.E.L. Equipment Company Ltd., Manor Royal, Crawley (Sussex)
Guatemala: Philips de Guatemala S.A., Apartado Postal 238, Guatemala City; tel. 20607-08-09
Hellas: Philips S.A. Hellenique, B.P. 153, Athènes; tel. 230476
Hong Kong: Phililps Hong Kong Ltd., P.O.B. 2108, Rooms 1006/1008 Prince's Building. Hong Kong; tel. 33728, 28548
India: Philips India Ltd., PIT/S.E. Dept., 254, Dr. Annie Besant Road, P.O.B. 6598, Worli, Bombay 18; tel. 245144
Iran: Philips Iran Ltd., P.O.B. 1297, Teheran; tel. 48344-68344
Iraq: Philips (Iraq) W.L.L., P.O.B. 5749, South Gate Post Office, Baghdad; tel. 98844
Ireland: Philips Electrical (Ireland) Ltd., Newstead, Clonskeagh, Dublin 14; tel. 976611
Island: Mr. Snorri P.B. Arnar, P.O.B. 354, Reykjavik; tel. 13869
Islands Canarias: Philips Ibérica S.A.E., Triana 132, Las Palmas 39-41 Santa Cruz de Tenerife
Israël: Isralectra Ltd., 12, Allenby Road, P.O.B. 1608, Haifa; tel. 526231
Italia: Philips S.p.A., Casella Postale 3992, Milano; tel. 69.94
Liban: Philips Liban S.A., P.O.B. 670, Beyrouth; tel. 232303-232458/59
Malaya: Philips Singapore Ltd., P.O.B. 1358 N.T.S. Building, d'Almeida Street, Singapore; tel. 94914
Maroc: Société Anonyme Marocaine de Télécommunications, Place Lemaigre Dubreuil, Casablanca; tel. 289-75
Mexico: Philips S.E.T., Apartado Postal 24-420, Mexico 7 D.F.; tel. 25-15-40
Nederland: Phililps Bedrijfsapparatuur Nederland N.V., Boschdijk VB, Eindhoven; tel. 3-33-33
Ned. Antillen: Philips Antillana N.V., Postbus 523, Willemstad, Curaçao
New Zealand: Electronic Development and Applications Co. Ltd., 18-20 Lorne Street, P.O.B. 2097, Wellington; tel. 54-039
Nigeria: Philips (Nigeria) Ltd., Philips House, 6, Ijora Causeway, P.O.B. 1921, Lagos; tel. 56051/2
Nippon: Philips Products Sales Corporation of Japan, Kokusai Building, 7th Floor, Marunouchi, Chiyoda-Ku, Tokyo; tel. 433
Norge: Norsk A.S. Philips, Postboks 5040, Oslo; tel. 463890
Österreich: Philips GmbH, Abt. Industrie, Triesterstrasse 64, 1101 Wien X; tel. 64 55 11
Pakistan: Philips Electrical Co. of Pakistan Ltd., Bunder Road, P.B. 7101, Karachi; tel. 70071
Paraguay: Phililps del Paraguay S.A., Casilla de Correo 605, Asunción; tel. 8045-5536-6666
Perú: Philips Peruana S.A., Apartado Postal 1841, Lima; tel. 34620-40265
Philippines: Electronic Development & Application Center, Room 715, Don Santiago Bld., 1344 Taft Avenue, Manila
Portugal: Phililps Portuguesa S.A.R.L., Rua Joaquim Antonio d'Aquiar 66, Lisboa; tel. 683121/9
Rhodesia: Philips Rhodesian (Private) Ltd., P.O.B. 994, Gordon Avenue, Salisbury; tel. 29081
Rwanda: Philips Rwanda S.A.R.L., B.P. 449, Kigali
Schweiz-Suisse-Svizzera: Philips A.G., Binzstrasse 18, 8027 Zürich 3; tel. 051 44 22 11
Singapore: Philips Singapore Ltd., P.O.B. 1358, N.T.S. Building, d'Almeida Street, Singapore 1
South Africa: South African Philips (Pty) Ltd., P.O.B. 7703, 2, Herb Street, New Doornfontein, Johannesburg; tel. 24-0531
Suomi: Oy Phililps Ab, Frederikinkatu 48, Helsinki; tel. 10915
Sudan: Gellatly Hankey & Co. (Engineering) Ltd., P.O.B. 150, Khartoum; tel. 71183
Sverige: Svenska A.B. Philips, Fack, Lidingövägen 50, Stockhalm 27; tel. 08/63500
Syrie: Philips Moyen Orient S.A., P.O.B. 2442, Damas; tel. 18605-21650
Taiwan: Yung Kang Trading Co. Ltd., 6 Nan King East Road, 1 Section, P.O.B. 1467, Taipei; tel. 43540
Thailand: Philips Thailand Ltd., 283 Silom Road, Bangkok; tel. 36985-8
Tunisie: Société Tunisienne d'Industrie Electronique et de Télévision, 32 bis Rue Ben Ghedhahem, Tunis
Türkiye: Türk Philips Ticaret A.S., Posta Kutusu 504, Istanbul; tel. 447486
Uruguay: Phililps de Uruguay, Avda Uruguay 1287, Montevideo; tel. 956 41-2-3-4
U.S.A.: North American Philips Co. Inc., 900, South Columbus Avenue Mount Vernon NY
Venezuela: C.A. Philips Venezolana, Apartado Postal 1167, Caracas; tel. 72 01 51
Zambia: Philips Electrical Ltd., Freetown Road, P.O.B. 553, Kitwe; Philips Electrical Ltd., P.O.B. 1878, Lusaka

MP MASTER
MA24916